

INSTRUCTION

SHEET SPECS:

Toy: Pictionary Air Turnover

Toy #: JMX98

Part #: JMX98-0970

Trim Size: A4

Folded Size:

Type of Fold:

of Color:

Colors: 1 Black

Paper Stock: White Offset

Paper Weight: 70 lb.

Black

DOM

1 separated flyer sheet required:

*Battery Safety Information & FCC -- B0000-0970-G1_DOM_Battery-Flyer_FCC (or later)


SET UP CASTING*

Cast the app from your smart device onto your TV using an Apple TV, Chromecast or similar streaming device, following the compatible streaming device’s instructions for connecting to your handheld device. If you are unable to cast, you may use compatible adaptors and accessories (not included) to connect your device directly to your TV via HDMI. Don’t forget to have the Picturist face the smart device and not the TV.

*Compatible streaming device required to cast game to TV. Smart device and compatible streaming device not included. For device requirements and support updates, visit [PICTIONARY.COM/SUPPORT](#).

BATTERY INSTALLATION

- Requires 1 AA (LR6) battery (not included).
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 1 AA (LR6) battery in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- For longer life, use Alkaline batteries.
- When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and install the batteries. Or turn off the power switch for a few seconds, then turn it back on to reset it.
- Dispose of battery safely.

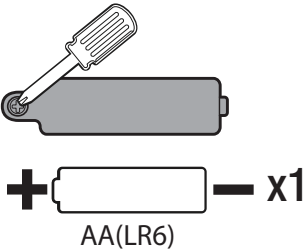


HVIN: JMX98
FCC ID: PIYJMX98-26A5T



Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries.
App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
Google Play and the Google Play logo are trademarks of Google LLC.

©2026 Mattel. * and ™ designate U.S. trademarks of Mattel, except as noted. Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697 and 1-800-432-5437 for Fisher Price products. Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1TF, UK. Mattel Australia Pty. Ltd., 658 Church St., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. 16-18 William Pickering Drive, Albany 1331, Auckland. Mattel Barbie (Shanghai) Trading Co., Ltd. Room 2005, 20th Floor, 899 Ruining Road, Yuhui District, Shanghai, 200232, P.R.C. Customer Care Line: 400-819-8658. Kids Kingdom Limited, Room 1908-9, Gala Place, 56 Dundas Street, Mongkok, Kowloon, Hong Kong, P.R.C. Customer Care Line: (852)2782-0766. CHICKABIDDY CO., LTD, F5, No. 186, Sec. 4, Nanjing E. Rd., Taipei 10595, Taiwan region. Customer Care Line: 0800 001 256. Diimport & Diedarkan Oleh: Mattel Continental Asia Sdn Bhd. Level 19, Tower 3, Avenue 7, No. 8 Jalan Kerinchi, Bangsar South, 59200 Kuala Lumpur, Malaysia. Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

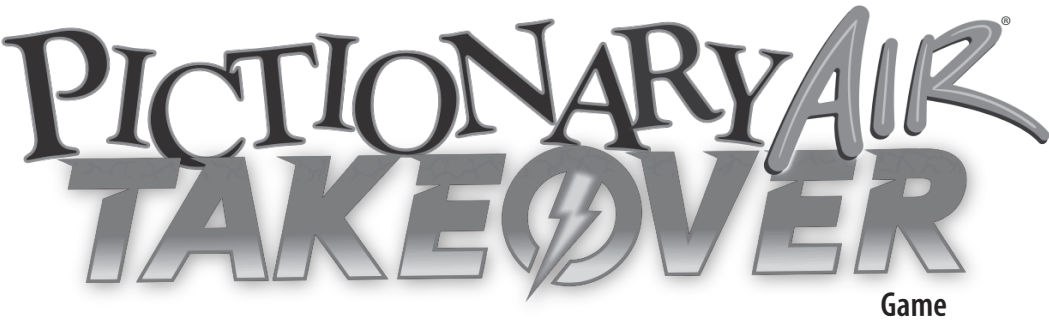

Game



2
TEAMS

Contents: 1 Air Pen, 112 double-sided clue cards, 1 phone stand

Please keep these instructions for future reference as they contain important information.

DOWNLOAD APP

Download the Pictionary Air® app to your smart device.



SET UP AIR PEN



ON/OFF SWITCH

Install 1– AA Alkaline battery, not included. See the BATTERY INSTALLATION section for instructions.

Turn on the Air Pen.

Note: You will need to switch the pen “off” when finished playing to avoid draining the battery.

- * Compatible iOS or Android smart devices and app are required to play. App is free to download. Data rates may apply.
- * For more details on compatible devices and other information visit [PICTIONARY.COM/SUPPORT](#).

OBJECT OF THE GAME

Just like the original Pictionary Air®, draw clues in the air while your players guess the images that appear on the screen. BUT NOW... Everyone guesses at the same time! Guess correctly and steal the point for your team—and the Air Pen! When your team is on a roll, enter “Wild Streak Mode” and earn bonus points. The team to reach the goal first wins!

GAME SET UP

Watch the quick, easy-to-follow tutorial before starting to play.
Divide into 2 teams. Choose the winning number of points in the app.
Decide how you want to set up your play space:



DRAW WITHOUT SEEING THE IMAGE.
The teammates guessing watch from the opposite side or on the TV, if casting/mirroring.



SEE WHAT YOU ARE DRAWING.
The teammates guessing watch from the same side so they can see the screen, or anywhere if they are casting/mirroring.

LET’S PLAY!

The first Picturist grabs a clue card.

Hold down the Draw button on the Air Pen when you want to draw. Release it when you do not. The pen tip will be green while drawing. If you want to erase, press the erase button and the image will clear on the device.



Both teams guess!

The first player to guess correctly earns the point for their team – which can be added in the app. That player then immediately takes the pen, grabs a clue card and draws!

WILD STREAK MODE

When a team correctly guesses 3 clues in a row, they enter Wild Streak Mode and earn bonus points! If the opposing team guesses a clue correctly to break the streak, they get a one-time bonus point.

Play continues, alternating Picturists every time a clue is guessed.

WINNING

The first team to reach the goal wins!

QUICK TIPS!



DRAW BIG!



INTERACT!



STUCK?



CLEAR THE IMAGE!

NOTE: Lighting conditions may affect your experience. Consult the app for helpful guidelines.

DOs AND DON'Ts

YOU CAN...	YOU CANNOT...
Use symbols and arrows	Use letters or numbers
Interact with the image as long as you draw something first	Use sounds
Draw anything related to the word, no matter how weak the link is	Use sign language
Break words down into a number of syllables	Use dashes to show the number of letters in the word

STRICTNESS

How precise an answer must be is up to the teams playing and should be agreed at the start of the game. For example, is “bunks” acceptable for “bunk bed” or “limo” for “limousine”?
If pen tip flashes red for 5 seconds or does not turn on, change batteries.