

Labeling

TABLE 2 *Labels*

No.	Label	Description/Location
1	AdvanTag 9100 Reader label 	The AdvanTag 9100 Reader Label identifies the various components of the unit. It is located on the top of the reader. See Figure 3 on page 10.
2	AdvanTag Gateway label 	The AdvanTag Gateway Label identifies the various components of the unit. It is located on the top of the reader. See Figure 3 on page 10.
3	Serial Number Label (9100 Reader) 	The model and serial number label for the AdvanTag 9100 Reader is located on the bottom of the unit. See Figure 2 on page 10. These numbers are required when contacting Asyst Technologies for any matter concerning the equipment.
4	Serial Number Label (Gateway) 	The model and serial number label for the AdvanTag Gateway is located on the bottom of the unit. See Figure 3 on page 10. These numbers are required when contacting Asyst Technologies for any matter concerning the equipment.

TABLE 2 Labels

No.	Label	Description/Location
5	FCC Label	The FCC label for the AdvanTag 9100 Reader is located on the bottom of the unit. See Figure 2 on page 10.

Location of Labels used on the AdvanTag

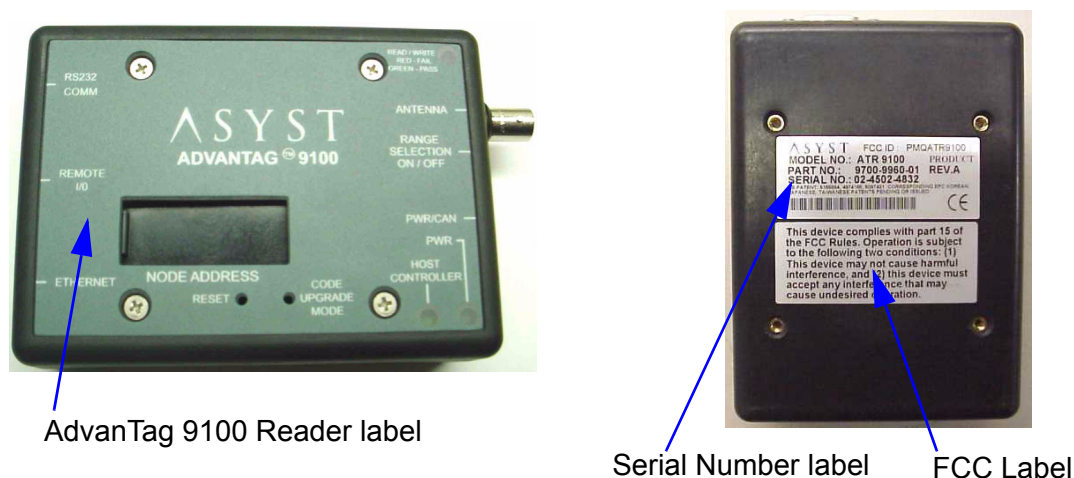


FIGURE 2 Label Locations, AdvanTag 9100 Reader

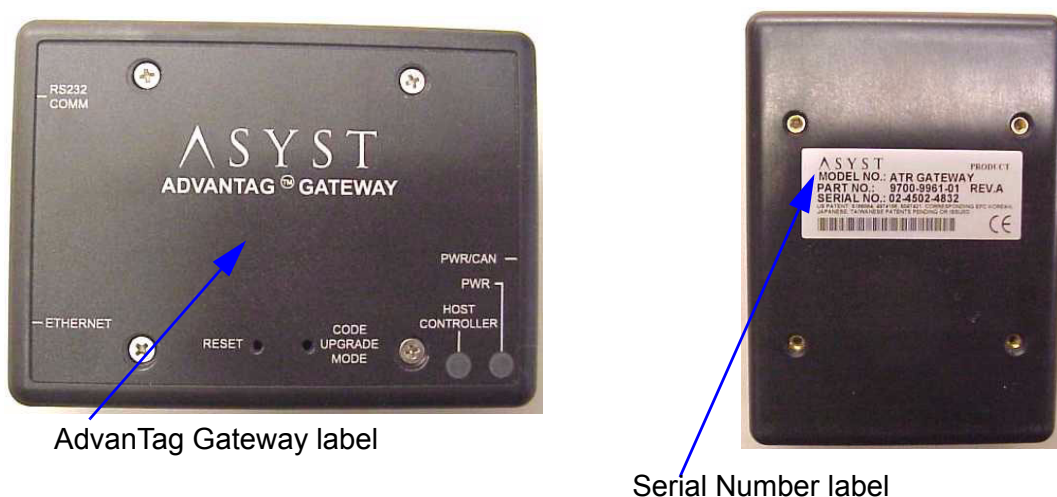


FIGURE 3 Label Locations, AdvanTag Gateway