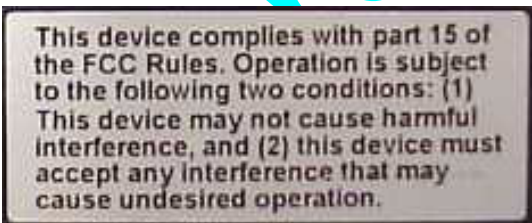


Labeling

TABLE 2 *Labels*

No.	Label	Description/Location
1	AdvanTag 9800 Reader label 	The AdvanTag 9800 Reader Label identifies the various components of the unit. It is located on the top of the reader. See Figure 2 on page 10.
2	Serial Number Label (9800 Reader) 	The model and serial number label for the AdvanTag 9800 Reader is located on the bottom of the unit. See Figure 2 on page 10. These numbers are required when contacting Asyst Technologies for any matter concerning the equipment.
3	FCC Label 	The FCC label for the AdvanTag 9800 Reader is located on the bottom of the unit. See Figure 2 on page 10.