


Operational Description

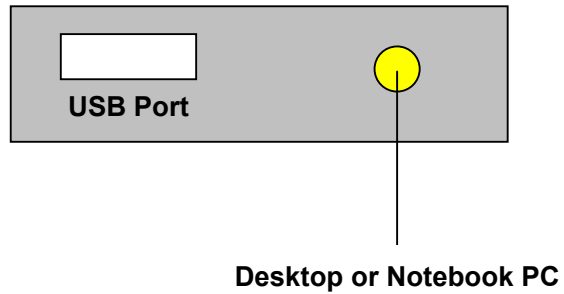

1. When you plug a receiver into a USB port, You will see LED indicator is blinking..
2. Push a either Next or Previews button on the transmitter to implant user ID. When ID is set, LED goes to command waiting state.
3. Begin your presentation.