

Figure 7
CD-RW DRIVE, M/N: LXR-40122A
Frame of Internal (Removed CD-Tray Device)

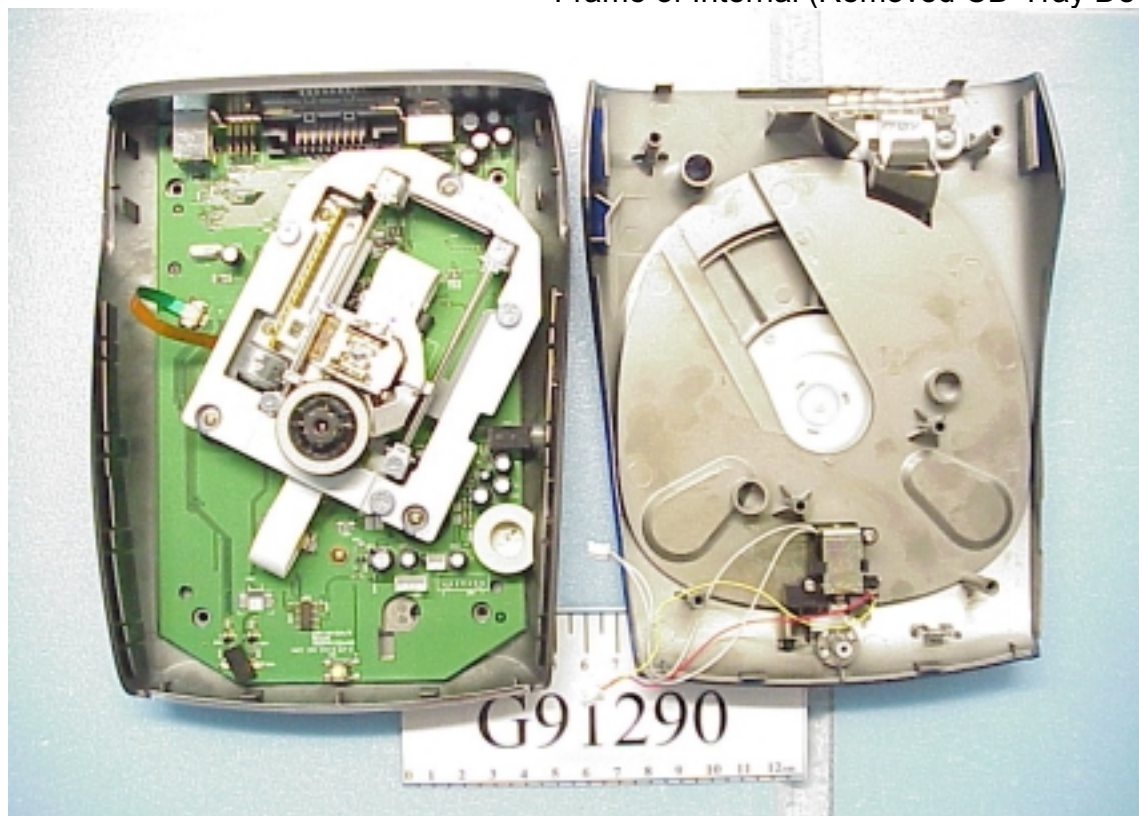


Figure 8
CD-RW DRIVE, M/N: LXR-40122A
Frame of Internal (Removed CD-Driver & Main Board)



Figure 9
CD-RW DRIVE, M/N: LXR-40122A
Internal View (Removed CD-Driver Device)

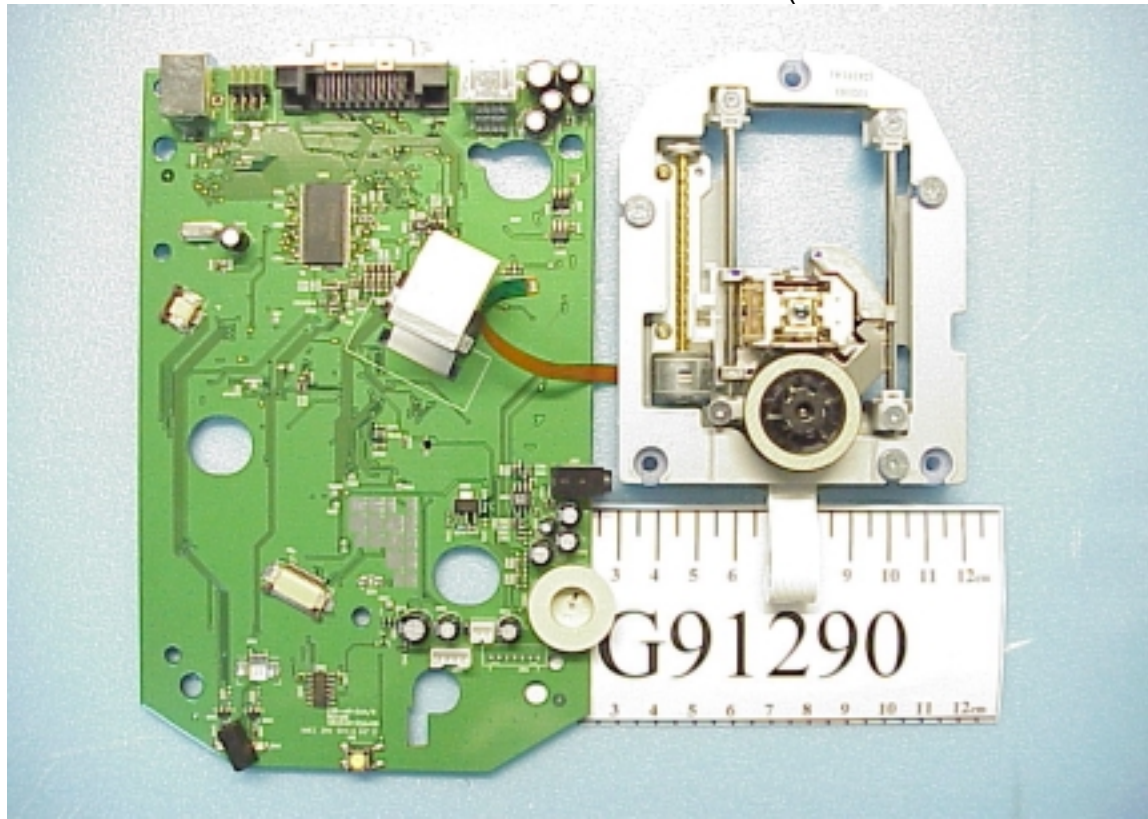


Figure 10
CD-RW DRIVE, M/N: LXR-40122A
Internal View (CD-Driver Device, Front Side)

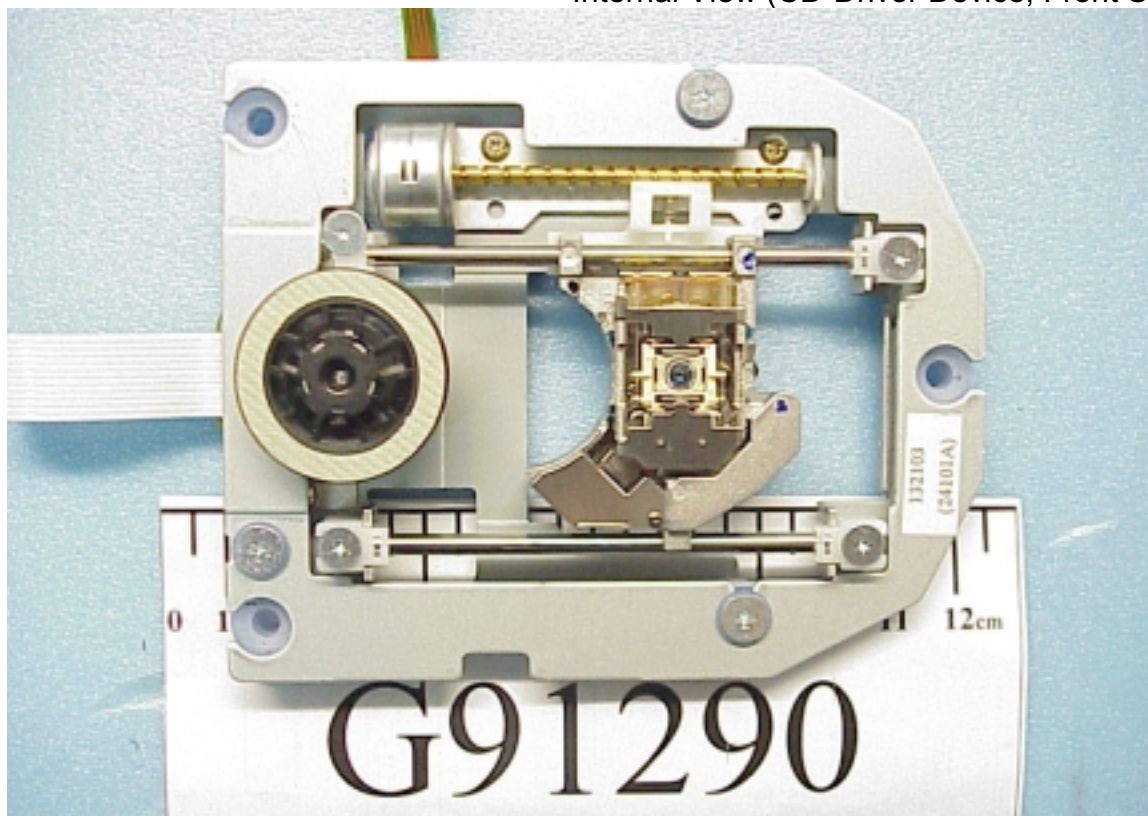


Figure 11
CD-RW DRIVE, M/N: LXR-40122A
Internal View (CD-Driver Device, Motor and Optic-Head)

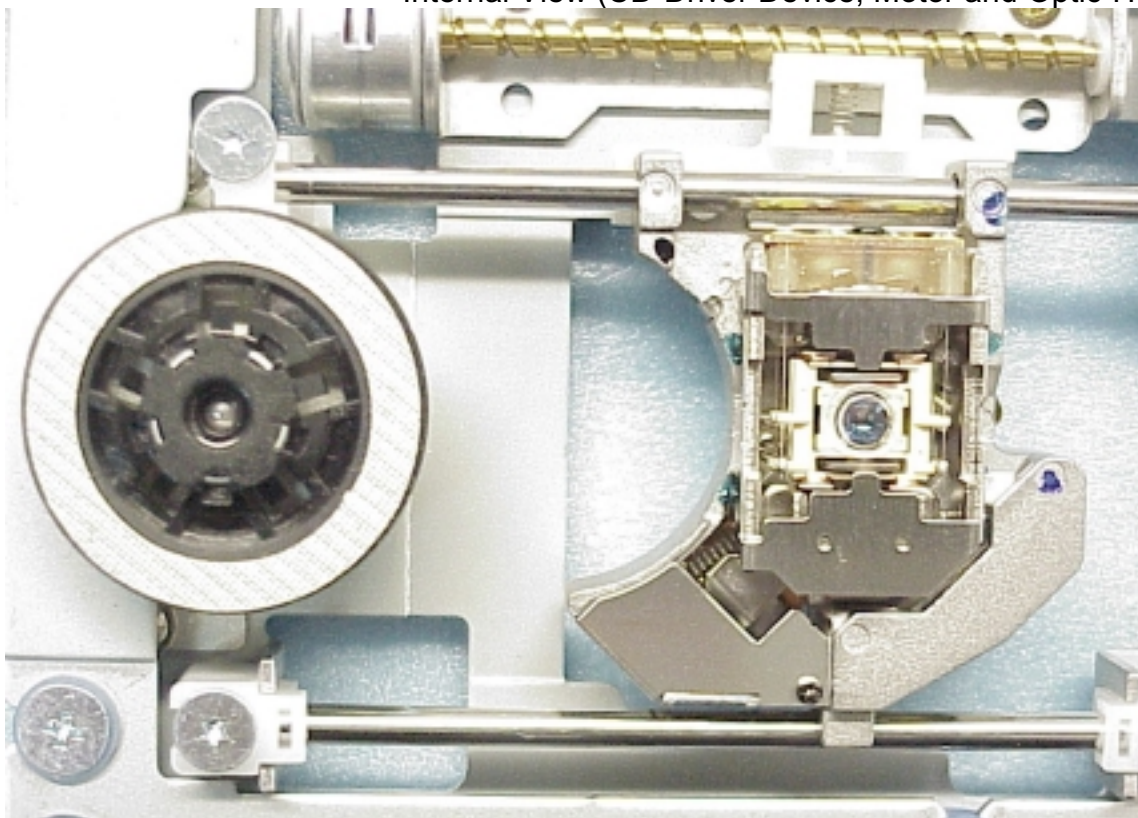


Figure 12
CD-RW DRIVE, M/N: LXR-40122A
Internal View (CD-Driver Device, Back Side)

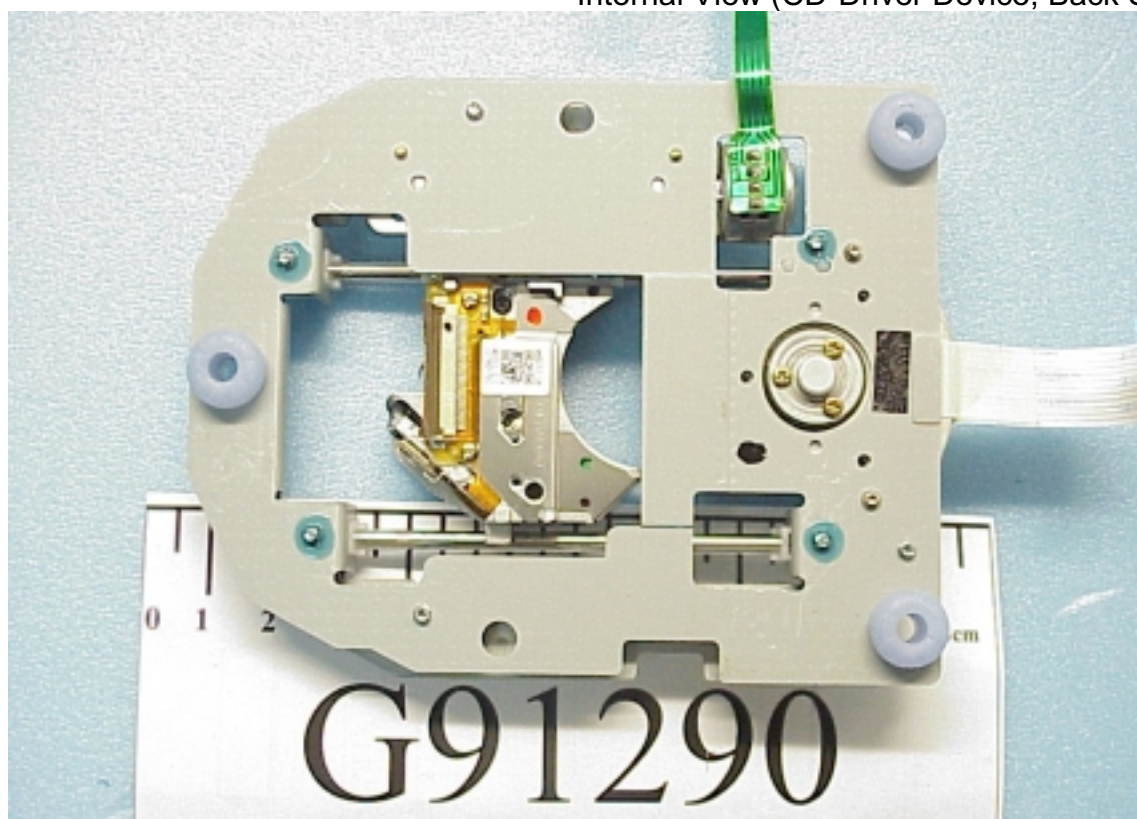


Figure 13
CD-RW DRIVE, M/N: LXR-40122A
Internal View (CD-Driver Device, Optic-Head/Back Side)

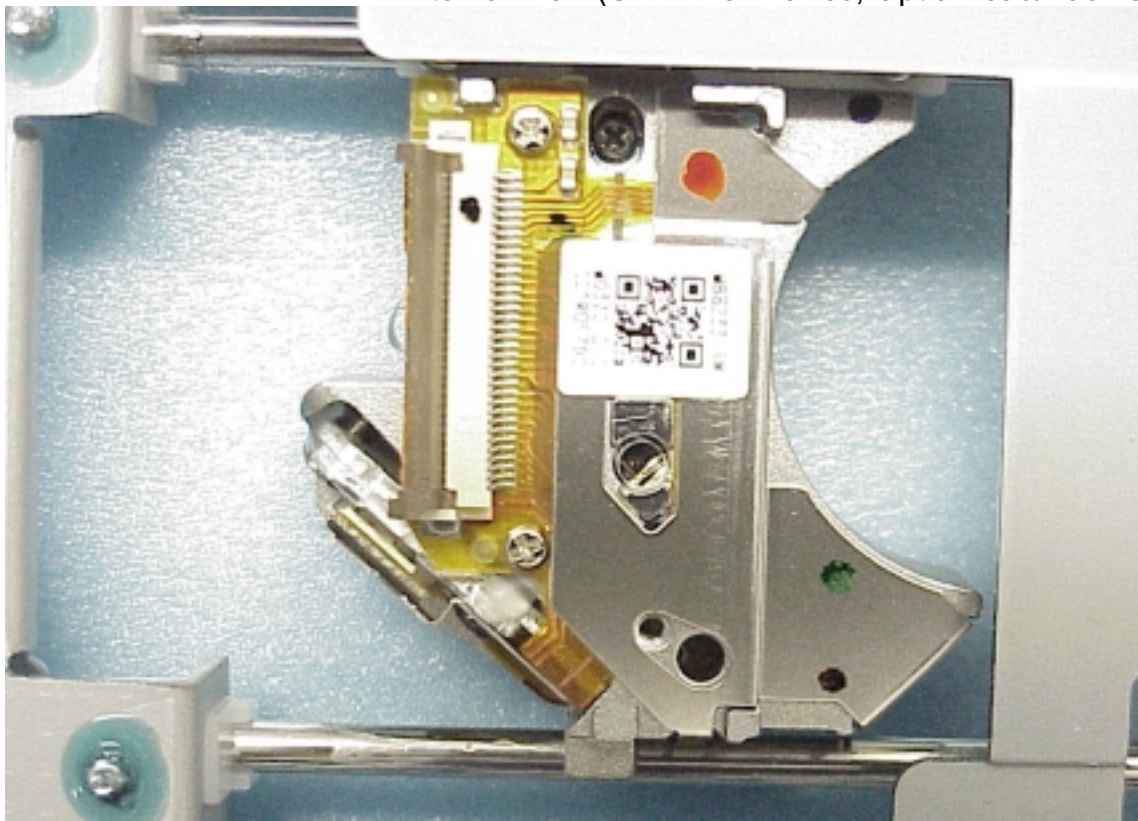


Figure 14
CD-RW DRIVE, M/N: LXR-40122A
Internal View (Main Board, Front Side)



Figure 15
CD-RW DRIVE, M/N: LXR-40122A
Internal View (Main Board, Back Side)



Figure 16
CD-RW DRIVE, M/N: LXR-40122B
General Appearance (CD-RW DRIVE 、Power Adapter*3EA 、Power Cord)

