 
 
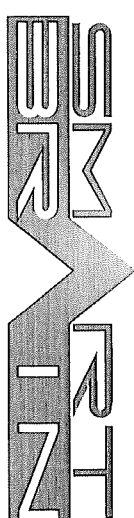 




SB-555USG

マザーズガイド 取扱説明書

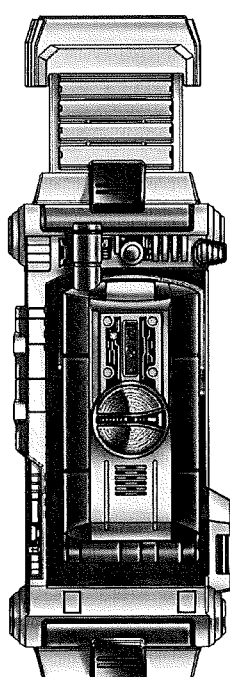

ENGLISH

中文

Instruction Sheet
使用說明書

©ISHIMORI PRODUCTION INC. and TOEI COMPANY, LTD. All Rights Reserved.

COMPLETE SELECTION MODIFICATION FAIZ GEAR B FAIZ AXEL COMPLETE SELECTION MODIFICATION FAIZ GEAR B FAIZ AXEL COMPLETE SELECTION MODIFICATION FAIZ DRIVER VER. 2

注意! CAUTION!

- 產品持有者請細心閱讀本說明書。
- 勿讓未足歲的小孩玩此產品。
- 本產品含有電池、電池蓋及螺絲有被誤吞的可能，勿將本產品給予3歲以下幼兒。
- 更換電池時，請按成人方式入取。
- 不同類型的電池或新舊電池不能混用。
- 切勿進行短路處理，也不要將其電池充電、分離、加熱或暴露於火中。
- 切勿使用充電式（蓄電池）電池。
- 請勿把非充電式電池放入。
- 請勿將耗盡的電池從玩具中移除。
- 電池應以正確的方式放入。
- 電源端子不得短路。
- 單一舊電池或電池連同液體應放入眼內時，請立即向醫生諮詢。連同液體。
- 請佔到皮膚或衣服時請用水清洗。
- 本產品內含電子零件，使用心臟起搏器的人士敬請注意。
- 請勿把手指放入可動部位的縫隙中，可能會有夾傷的危險。
- 本產品可能包含上圖及插圖內有少數備差。
- 請勿將產品拆解、增動或組裝。
- 此包裝含重要信息，請保留此包裝材料日後參考之用。
- 本產品編號：3 枚 AAU.5V 型電池（另售）及11枚 AAAT.5V 型電池（另售）操作。
- 適合15歲或以上。

< 使用時的注意事項 >

- 本產品零件精密。如果進行用力操作或將零件拆下，可能會導致損壞。
- 本產品由精密的電子零件構成。請勿讓其受潮、被水沾濕、被弄髒或分解。同時請勿在高溫、低溫場所使用或保管。
- 請勿將本產品放置在磁鐵附近、磁石或磁場上。
- 長時間接觸可能會導致發熱。
- 對於可動部分、安裝部分，請勿強行向錯誤方向拉扯或彎曲。
- 部分發音可能出現變調不一或或者因商品特性而出現難以聽清的情況，敬請諒解。
- 本產品的無線設備符合日本電波法規定，並已取得特選無線設備認證。
- 此款產品（2.4GHz）的電波同時適用於各種不同機器（微波爐、無線 LAN 設備等）。因此有被電波干擾而導致性能下降。
- 請勿2台同時使用。
- 應保持清潔，請重新安裝電池。
- 由於商品特性，外殼有可能存在差異。敬請諒解。
- 如產品受到強烈撞擊，則可能會導致產品變形，使得各個部件難以連接或拆卸。請謹慎操作。

< Precautions for Use >

- This product is made with precision. It may lead to damages if to operate forcibly or have it fallen to the ground.
- This product is composed of precise electronic parts. Do not drop, get wet, get dirty or depict it. Meanwhile, avoid using or keeping it in an environment where the temperature is too high or too low.
- Do not place this product on cushions or cushions made of resin or on any tiles because they may get dyed after a long time of direct contact.
- Do not pull or bend the movable or installed parts in the wrong direction forcibly. It is normal that some sound may not be consistent or be heard clearly due to the characteristics of the product.
- The wireless device of this product complies with the standard of Japan Radio Law and get the certification for specific wireless equipment. (Microwaves, wireless LAN devices, etc), therefore the functionality might be affected by interference of the waves.
- This 2.4GHz wave has been used in various equipment (Microwaves, wireless LAN devices, etc), therefore the functionality might be affected by interference of the waves.
- Do not play 2 products together.
- Reseat the product if it is malfunctioning.
- It is normal that there may be differences in the appearance of the products due to the characteristics of the product.
- If a strong impact is applied to the product, it may be deformed and it may be difficult to attach or detach each part. Please handle with care.

CAUTION

Please put the item in the poly bag before you put it back to the package.

注意

 
將商品放回包裝！若要將商品放回包裝材料保管，保管時，請務必！請務必裝上袋子。放回膠袋裡。

關於通訊範圍說明 About the Signal Range

FAIZ SHOT, FAIZ POINTER, FAIZ DRIVER, 投影儀等最佳電波通信範圍是距離 FAIZ PHONE, FAIZ AXEL 半徑 1 米以內 (無障礙物) 範圍。
※距離 FAIZ PHONE, FAIZ AXEL 2 米以上使用，電波通信會出現不穩定的情況。

The optimal radio wave signal range of the FAIZ SHOT, FAIZ POINTER, FAIZ DRIVER, and Projector is within a 1m radius (without any interfering objects in between) of the FAIZ PHONE and FAIZ AXEL.

*Separating the items over 2m from the FAIZ PHONE and FAIZ AXEL will cause their radio wave connection to become unstable.

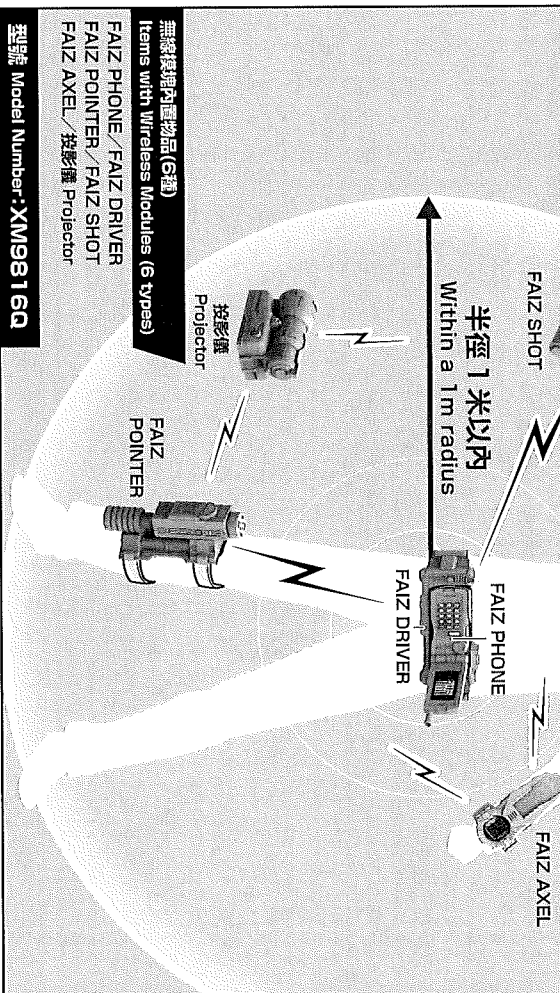

無線設備內置物品 (6 種)
Items with Wireless Modules (6 types)

FAIZ PHONE / FAIZ DRIVER
FAIZ POINTER / FAIZ SHOT
FAIZ AXEL / 投影儀 Projector

型號 Model Number: XM9816G

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

警告：窒息危險 - 細小部份
適合 3 歲或以下之兒童

適合 15 歲或以上
Ages 15 & up

Distributed by Bandai Namco Toys & Collectibles America Inc., 23 Odyssey Irvine, CA 92618. Phone: 949-553 8800

BANDAI
BANDAI NAMCO ASIA CO., LTD.
www.bandai-asia.com

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio TV technician for help. This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

△ Caution Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Keep batteries away from children. Batteries may be harmful if swallowed. Batteries replacement/installation should be done under adult supervision.

 
包裝內容

FAIZ GEAR & FAIZ AXEL ver.2
FAIZ GEAR ver.2
FAIZ DRIVER ver.2


■使用說明書(本書) ... 1 ■Instruction manual (this booklet) ... 1




FAIZ PHONE...1
[SB-555P]

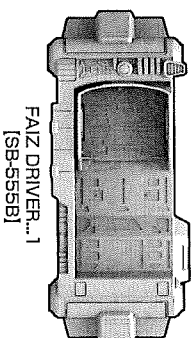


FAIZ DRIVER...1
[SB-555B]

 

腰帶扣...1 Belt Buckle ...1

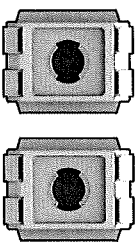 

側帶扣...2 Side Buckles ...2

 

腰帶(左)...1 Belt (Left) ...1




腰帶(右)...1 Belt (Right) ...1


※腰帶尺寸約75cm~100cm
Recommended waist size: approx. 75 cm ~ 100 cm

※連包裝內FAIZ GEAR ver.2,
FAIZ GEAR&FAIZ AXEL ver.2
These six items are included in the FAIZ GEAR
ver.2 and the FAIZ GEAR & FAIZ AXEL ver.2.

 
附件...1
Attachment Part ...1

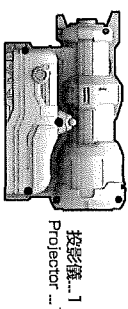


投影機...1
Projector ...1

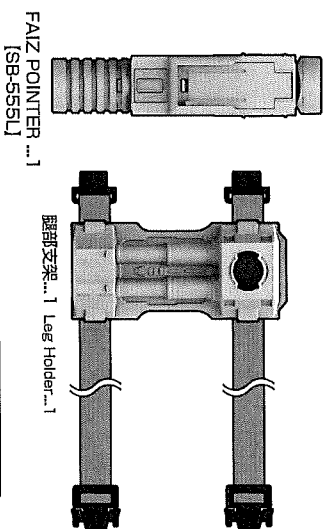 


FAIZ POINTER...1
[SB-555L]

 

腿部夾...1 Leg Holder...1

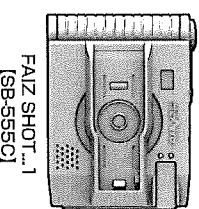 


FAIZ SHOT...1
[SB-555C]

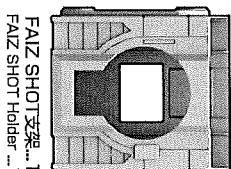 

FAIZ SHOT Holder...1
FAIZ SHOT Holder ...1

 ※連包裝內FAIZ
GEAR&FAIZ AXEL ver.2
These two items are only
included in the FAIZ GEAR &
FAIZ AXEL ver.2.

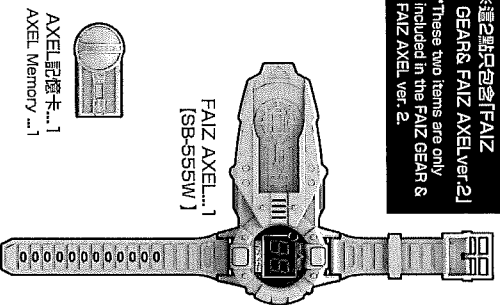


FAIZ AXEL...1
[SB-555W]

乾電池的更換 How to Change the Batteries


※請確認電源開關是否處於OFF狀態。 ※若出現音響變小無法聽清、又或者出現聲音反覆鳴響的異常情況，
以及LED的反應變弱的情况，請及時更換全新的電池。

Make sure that the power switch is turned OFF. *Replace all the batteries with new ones if the sounds
become too soft to hear, if the device malfunctions by repeating sounds, or if the LEDs become dim.

 
FAIZ PHONE

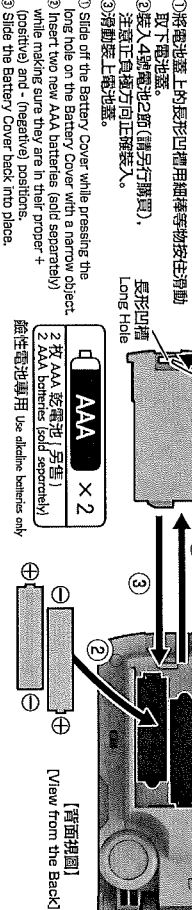


FAIZ DRIVER

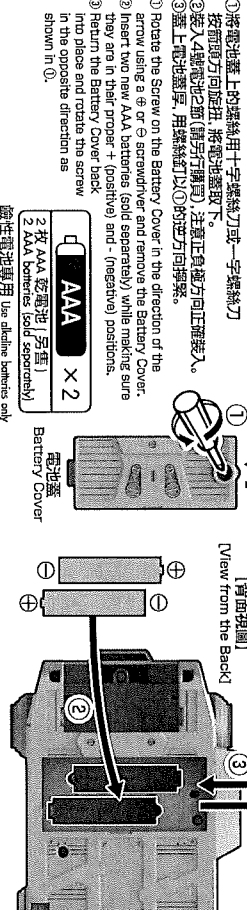 

FAIZ SHOT

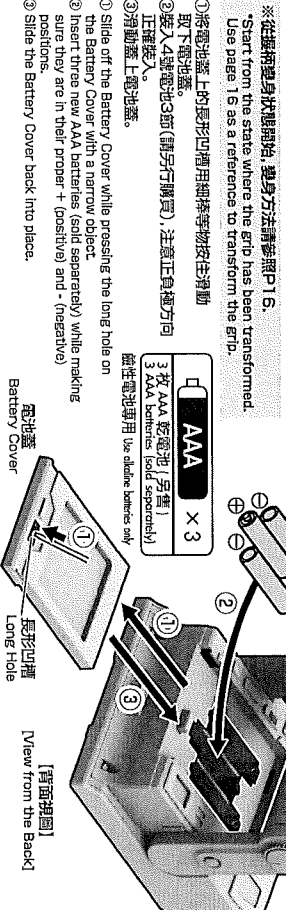 


FAIZ POINTER

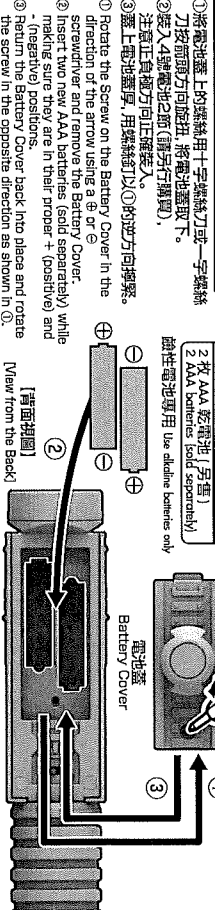 


FAIZ AXEL

 - 將電池蓋上的螺絲十字螺絲刀或一字螺絲刀按箭頭方向旋出，將電池蓋取下。
- 插入4號電池2節（請另行購買）。
注意正負極方向正確插入。
- 蓋上電池蓋時，用螺絲刀以①的逆方向擰緊。
- 將電池蓋上的螺絲十字螺絲刀或一字螺絲刀按箭頭方向旋出，將電池蓋取下。
- 將電池蓋上的螺絲十字螺絲刀或一字螺絲刀按箭頭方向旋出，將電池蓋取下。
- 將電池蓋上的螺絲十字螺絲刀或一字螺絲刀按箭頭方向旋出，將電池蓋取下。

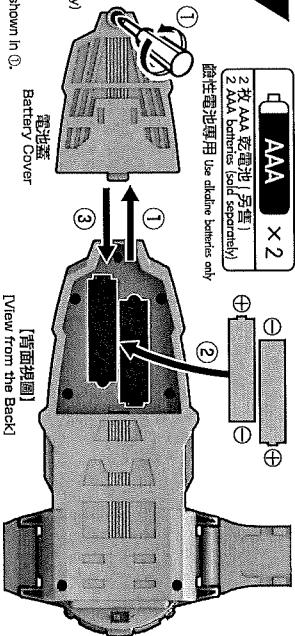


投影儀 Projector

 - 將電池蓋上的長形凹槽用細棒等物按注滑動取下電池蓋。
- 插入3號電池3節（請另行購買）。注意正負極方向正確插入。
- 將電池蓋上的長形凹槽用細棒等物按注滑動取下電池蓋。

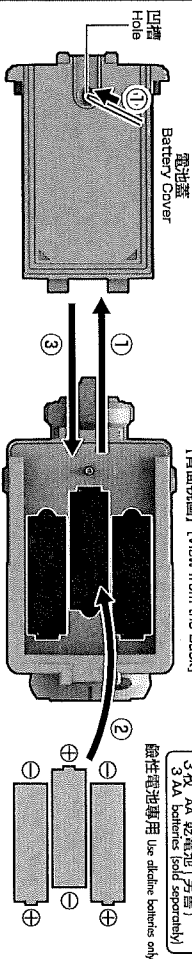


腰帶的組合方法 How to Assemble the Belt

 
- 將腰帶(左)的凸形接頭插入FAIZ DRIVER的凹槽中鎖住。

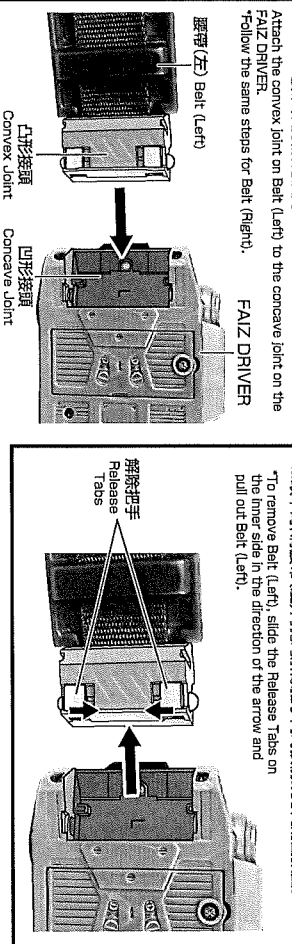


- 將腰帶(右)的凹形接頭插入FAIZ DRIVER的凸形接頭中鎖住。

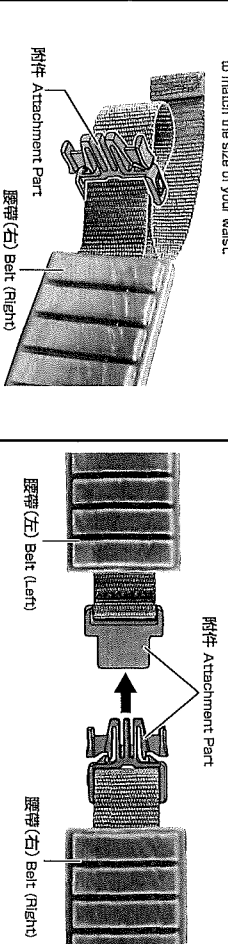 


- 將附件和腰帶扣如圖中所示捲起固定。

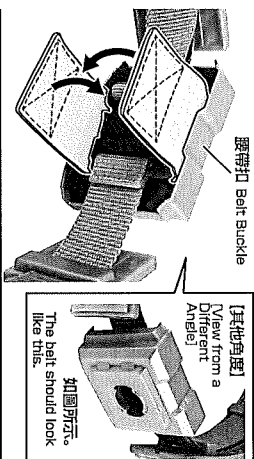 


- 將側帶扣如圖中所示捲起固定。

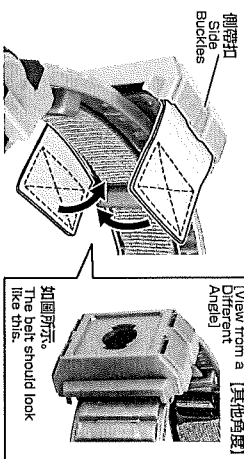 

 
- FAIZ POINTER的凸出部分如圖所示插入纏繞在腰帶(右)上的側帶扣的孔中。

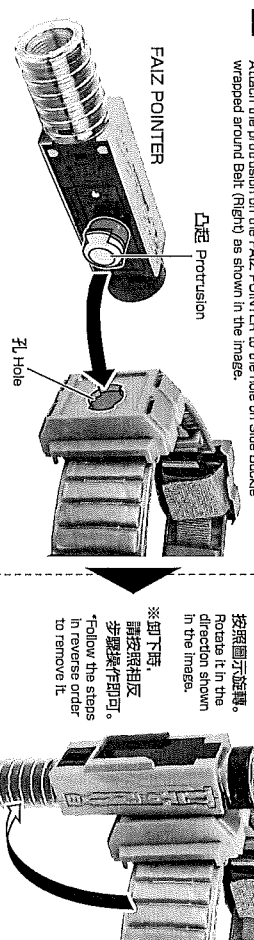

 - FAIZ SHOT安裝的凸出部分如圖所示插入纏繞在腰帶(左)上的側帶扣的孔中。

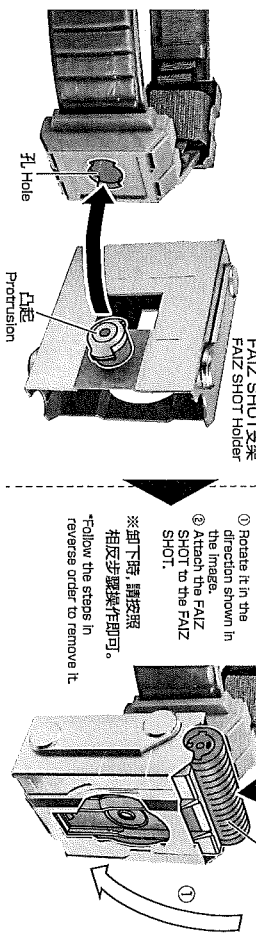

- 將指令記憶卡插入FAIZ PHONE中。

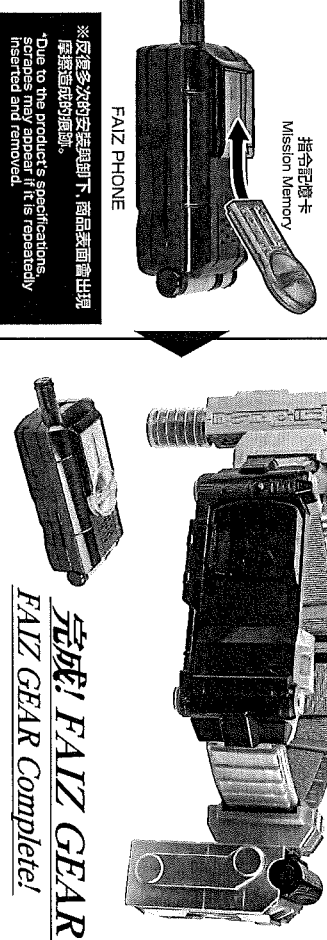 

完成! FAIZ GEAR
FAIZ GEAR Complete!

How to Play with the FAIZ DRIVER / FAIZ PHILIPS

How to Turn On the FAIZ DRIVER, Names of Each Section

 
 


會延遲3分鐘。

How to Turn On the FAIZ PHONE / Names of Each Section



Power Switch



用CALL按鈕臺詞再生 Playing Dialogue Using the CALL Button

按3~4位數的0-9按鈕+ENTER按鈕，響起下列的聲音。※如果輸入錯誤的話，響起錯誤聲音。

聲音一覽表 Sound List

聲音一覽表 Sound List

※如果輸入錯誤的話，會響起“錯誤”聲音。
按3~4位數的「0~9按鈕」+「CALL按鈕」後，會響起下邊的聲音。

※如果輸入錯誤的話，會響起“錯誤”聲音。

臺詞一覽表 Lines of Dialogue

輸入編碼 Input Codes	臺詞一覽表 Lines of Dialogue
034+CALL	Takumi: "Moshi, omae no iutoru dato shiteno, dameeba, ore wa Iblun ga kowainda, ima wa heki demo, itsu ningen no kokoro wo nakusu ka wakaranai. Sawada no youni."
035+CALL	Takumi: "Ore wa tatakasu. Ningen toshite, FAIZ to shitei"
036+CALL	Takumi: "Omae, nanika sentakumono naika? Ore ga tada de aratte yaryuo."
037+CALL	Takumi: "Nani itendayo! Omae no riso wa doshitandayo. Orphnoch to nigen no kyozon ga, omae no yume darouga."
038+CALL	Takumi: "Hitotsudeke, Kikasete kura. Omae wa, ningen wo mamoritai noka. Orphnoch wo mamoritai noka."
039+CALL	Takumi: "Omae, inokayo sereda. Ningen to Orphnoch no kyozon ga omae no riso ja nakattenokayo!"
040+CALL	Takumi: "Ore wa ningen wo sutetari shinai. Nani ga attemo na."
041+CALL	Takumi: "Kiba ka. Wakattayo omae ga honki datte. Ore no shitateru omae wa, mou inai. Imdana, so omotte."
042+CALL	Takumi: "Doke, yatsu wa, ore ga taosu!"
043+CALL	Takumi: "Aa, omae ga ningen wo suteta tokkara, itsuka kounaru koto wa wakatteta."
044+CALL	Takumi: "Kowaisa. Dekara ishokennai! Itendayo! Ningen wo mamoru tameni!"
045+CALL	Takumi: "Itta hazuda. Ore wa ningen wo mamoru tena. Omae mo, ningen da."
046+CALL	Takumi: "Mitsukeyouze, Kiba, Mihara, oretachi no kotae wo, oretachino chikaradei!"
047+CALL	Takumi: "Yume tte ya, ore mo yoyaku yume ga mitsukatta. Sakaiju no sentakumono ga masshiromaru mitai, minna ga, shiawase ni narimasu youni."
101+CALL	Takumi: "Onaera, souja zuibun jilmete kuretakkena. Kondo wa kocchi no ban da."
102+CALL	Mar: "Toikaku FAIZ wa Takumi shika inai. Watashi niwa wakaru. Soshite FAIZ wa yami wo kirisaki, konoyo ni hikari wo motarasu noyo!"
103+CALL	Takumi: "Yadane. Anta wa tsura ga kiki kuwamai. Shogakko no koro, ore wo katteni hancho ni shita yatsu ni nitaru."
104+CALL	Takumi: "Yasashisugurundayo anta wa, Demo kitto anta nara jibun no riso wo tassai dekirusa."
105+CALL	Takumi: "Matasetaiai Kanna tokorode, omae wo shinaseya shinai!"
106+CALL	Takumi: "Kiba, omae honki ka? Honto ni riso wo suteta noka?"
107+CALL	Takumi: "Ize, Omae no yarenakatta koto wo ore ga yaru. Omae no riso wa ore ga tsugu."
108+CALL	Takumi: "OI Mar!... Mar! Nandakke kana... Kyuseisyu wa nani wo surunda? Yami wo kirisaki?" Mar: "Hikari wo... motarasu..." Takumi: "...kkoenoyo! Mar: "Yami wo kirisaki, hikari wo motarasu noyo!" Takumi: "...Ja...-Ha...-kittsui na, omae no kitai ni kotae nowa." Mar: "Dekiruyo Takumi! Takumi narei Datte, Takumi wa, Takumi dakara."
109+CALL	Takumi: "Doke, Ore ga anku michi da."
110+CALL	Mar: "Takumi, doko ni ikuno?" Takumi: "...Saana, Ikerru tokomade, ikusa."
201+CALL	Takumi: "Mukashi, asuru mono wo mamorouto shite tatakai, shindeita nakama ga ita, kesusakanai yatsu data kado, sukunakutomo, ore yoriwa kiru kachi wo midashite ita. Daga yatsu wa shin, ore wa koushite daradara to kiteru. Ore wa... ore wa doshitara it."
202+CALL	Takumi: "Ikagen, ulujf kangaeu nomo akita."
203+CALL	Takumi: "Semeta, kodomo no mirai gurai mamotte yaru."
204+CALL	Takumi: "Hito wa mina ikite shinde iku. Sono omoi wa, ikite Youga shinde Youga kankei nai!"
205+CALL	Takumi: "Karapo nara, tatekau kotode umete yaryuo. Yodokobi to kanashini wo hitotsu zutsu na. Sono tsumi wa, ore ga seoi."
301+CALL	Takumi: "Kamen rider toshite, kodomo no yume gurai wa mamotte yaru kotoni shita."
401+CALL	Takumi: "Tsumi no nai hitobito wo kizutsukeru nowo misugosu weke niwa ikanahae."
402+CALL	Takumi: "Mamori niute yaryuo. Kono sekai te yatsu wo na."
403+CALL	Takumi: "Higeki? Warawaseruna. Happy end ni kaete yaryuo."
404+CALL	Takumi: "Imademo shinjiteru! Imai naku shinde yatsu wa inai tenna."
405+CALL	Takumi: "Korekarano sekai wo tanondazo!"
555+CALL	Takumi: "Ore wa tatakasu. Ningen toshite, FAIZ to shitei"
913+CALL	Takumi: "Yanero, Kouju koto wa taketo na tokorode kirigaeru monda. Jannaio kakko waraija... ...Wakenetoko, nishawandayo! Omae to ibari jana."
333+CALL	Takumi: "Mitsukeyouze, Kiba, Mihara, oretachino kotae wo, oretachino chikaradei!"
315+CALL	Takumi: "Onaera, souja zuibun jilmete kuretakke na. Kondo wa kocchi no ban da."
000+CALL	Takumi: "Kiba, omae honki ka? Honto ni riso wo suteta noka? ...Ize, Omae no yarenakatta koto wo ore ga yaru. Omae no riso wa ore ga tsugu."

來電遊戲 Receiving Calls

- ①在<受身前狀態>下，長按轉換按鈕，會響起來電音。
 ○Hold down the Trigger when in the <Pre-Transformation State>. → A "Ringtone Sound" will play.
 ②響起來電音，期間按CALL按鈕，會隨機響起以下臺詞。
 ○Press the CALL Button while the Ringtone Sound is playing. → The lines of dialogue listed below will randomly play.

臺詞一覽表 Lines of Dialogue			
1	Mar: "Takumi! Orphnoch gai"	5	Keitaro: "Takumi! Orphnoch gai! Takumi!"
2	Mar: "Takumi! Hayaku! Orphnoch gai!"	6	Keitaro: "Takku, O-O-O-Orphnoch gai!"
3	Mar: "Takumi onegai, sugu kiei! Kusakakun gai!"	7	Keitaro: "Ta--Ta-Ta-Ta-Ta-Takumi! Orphnoch gai!"
4	Keitaro: "Takumi! Orphnoch gai!"	8	Keitaro: "Tahen da Takku, Orphnoch gai!"

Orphnoch變身遊戲 Transforming into an Orphnoch

- 在<受身前狀態>下，短按按鈕，會依次發出以下聲音。
 Lightly tap the # Button when in the <Pre-Transformation State>. → Sounds will play in the order listed below.

臺詞一覽表 Lines of Dialogue			
1	強Orphnoch初次變身音 Initial Wolf Orphnoch Transformation Sound	4	強Orphnoch通用變身解除音 General Wolf Orphnoch Deactivation Sound
2	強Orphnoch初次變身解除音 Initial Wolf Orphnoch Deactivation Sound	5	Orphnoch通用變身音 General Orphnoch Transformation Sound
3	強Orphnoch通用變身音 General Wolf Orphnoch Transformation Sound	6	Orphnoch通用變身解除音 General Orphnoch Deactivation Sound

BGM玩法 Playing BGM

- 短按BGM按鈕，依次發出下欄的BGM音。
 Lightly tap the BGM Button.
 BGM will play in the order of the list below.
 ※發出BGM時再次按下BGM按鈕，BGM會停止。
 *Pressing the BGM Button again while the BGM is already playing will turn it off.

BGM準備機能 BGM Standby Function

- 長按BGM按鈕，BGM準備音，響起，持續長按後，最大連續發出12次「準備音」。
 Hold down the BGM Button.
 → A BGM Standby Sound will play. A maximum of twelve "BGM Standby Sounds" will play if the BGM button is not released.

順序/次數 Order/ Number of Sounds		BGM	
1	Justið's	7	Ore wa Mou mayowanai
2	Orphnoch Shutsugen	8	The People With No Name (前季延續Ver.) (into Shortened ver.)
3	Dead or alive (短縮Ver.) (Shortened ver.)	9	The People With No Name
4	Dead or alive	10	EGO ~eyes blazing over
5	"Your Divertimentos, Op." "n°1, Andantino Grazioso"	11	FAIZ
6	Justið's (17番Ver.) (Episode 17 ver.)	12	Justið's -Accel Mix-

下回預告演出機能 Next Episode Preview Function

 
 
- 在BGM響起時，長按BGM按鈕，與「節目演出結束音」響起時同時BGM停止，之後「下回節目預告音」響起。
 When the BGM Button is held down while BGM is playing, an "Episode Ending Sound" will play, the BGM will stop playing, and a "Next Episode Preview Sound" will play.

變身遊戲玩法 How to Transform

聲音 Sounds

- 1 短按FAIZ PHONE的觸發鍵後，
→「打開FAIZ PHONE聲音」響起
- 2 打開FAIZ PHONE聲音「響起」後，
→在輸入[555+ENTER]後，
→「準備+變身準備音」響起，畫面會發出光。
- 3 關閉FAIZ PHONE。
- 4 變身待機音中按在觸發鍵，
→依次發出右邊表格中的聲音。

- ① lightly tap the Trigger on the FAIZ PHONE.
→ A FAIZ PHONE Opening Sound will play.
- ② Open the FAIZ PHONE. Press the buttons in this order:
→ A STANDING BY Sound and Transformation Standby Sound will play, and the screen will light up.
- ③ Close the FAIZ PHONE.
- ④ Press the Trigger while the Transformation Standby Sound is playing.
→ Sounds will play in the order shown in the list on the right.

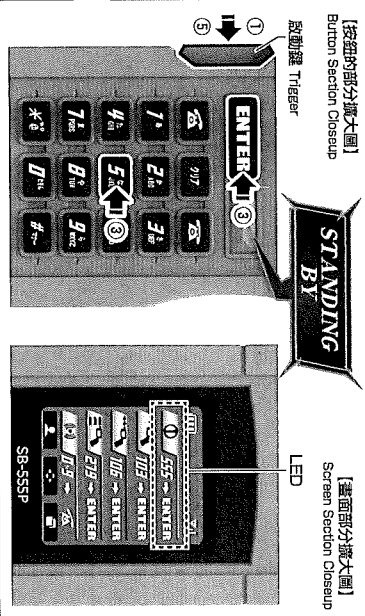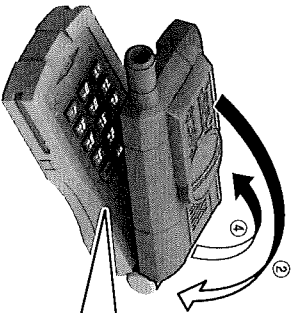

變身待機音

- ① 將FAIZ DRIVER的安裝面向圖的方向，
→將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

- ③ 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ④ 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。

變身待機音

- ① 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。
- ② 將FAIZ PHONE觸發鍵的方向，
→將聲音停止前插入安裝。


變身變化玩法 Transformation Variations

- ① <變身後狀態>下，長按「#」按鈕。→「變身選擇音」響起，持續長按後，最大連續發出12次「變身選擇音」。
- ② Hold down the # button when in the <Pre-Transformation State>. "Transformation Selection Sound" will play if the BGM button is not released.
- ③ A Transformation Selection Sound will play. A maximum of twelve "Transformation Selection Sound" will play if the BGM button is not released.
- ④ 之後，進入P11的「變身變化」。
- ⑤ 對變身變化「變身選擇音」次數，「變身音」發生如下內容的變化。
- ⑥ Proceed to the steps in "Transformation" on page 11.
- ⑦ The "Transformation Sound" will change corresponding to the number of "Transformation Selection Sounds" shown in the list below.

選擇次數 Number of Transformation Selection Sounds	變身音 Transformation Sound	選擇次數 Number of Transformation Selection Sounds	變身音 Transformation Sound
1	變身音A Transformation Sound A	5	變身音E Transformation Sound E
2	變身音B Transformation Sound B	6	變身音F Transformation Sound F
3	變身音C Transformation Sound C	7	變身音G Transformation Sound G
4	變身音D Transformation Sound D	8	變身音H Transformation Sound H
5	變身音E Transformation Sound E	9	變身音I Transformation Sound I
6	變身音F Transformation Sound F	10	變身音J Transformation Sound J
7	變身音G Transformation Sound G	11	變身音K Transformation Sound K
8	變身音H Transformation Sound H	12	變身音L Transformation Sound L
9	變身音I Transformation Sound I		
10	變身音J Transformation Sound J		
11	變身音K Transformation Sound K		
12	變身音L Transformation Sound L		

- ※選擇4、10時，數字按鈕的聲音是固定的。
- ※處於「變身後狀態」時，待機音中的觸發鍵聲音會依次發生這些變化。
- ※選擇9、無選擇10、選擇11：最大數，選擇12：變成無選擇。
- ※處於「變身後狀態」時，選擇4：第一變身音結束後，發出5次的「Nanda Korya」的臺詞。
- ※選擇10、11、12時，變身音結束後，依然保持「變身後狀態」。
- ※If the Selection Sound has been played 4 or 10 times, the sounds when the number buttons are pressed will be the same tone.
- ※During the Dialogue Mode, the voice of the "Nanda Korya" sound when the trigger is pressed while the "Pre-Transformation Sound" is playing will change to "Nanda Korya" sound when the trigger is pressed while the "Pre-Transformation Sound" is playing.
- ※The device will stay in the <Pre-Transformation State> if 10, 11, or 12 Selection Sounds have been played and the error sounds finish playing.

 在「變身後狀態」下的按鈕的玩法 (變身後狀態的時) <Post-Transformation State> (When in the Belt State)

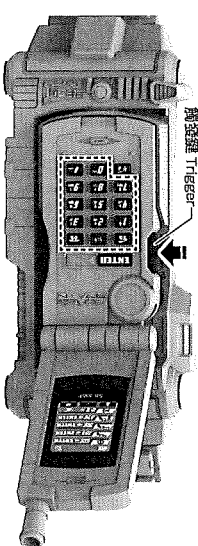

各個按鈕的聲音 Sounds that play when each button is pressed:

0	必殺選擇音 Finisher Selection Sound	7	打擊音C Striking Sound C	4	打擊音B Striking Sound B	1	打擊音A Striking Sound A	CALL	蓋岡(參照P.7-9) Dialogue (See pages 7-9-9-9)
1	AXEL選擇音 AXEL Selection Sound	8	AUTO VAIJIN 加特林機槍射擊音 Gatling Gun Firing Sound	5	AUTO VAIJIN 打擊音 Striking Firing Sound	2	AUTO VAIJIN 飛行音 Flying Sound	清除 CLEAR	AUTO VAIJIN 戰鬥中變形音 AUTO VAIJIN Battle Mode Transformation Sound
9	AUTO VAIJIN 錄音 Edition Sound	6	AUTO VAIJIN Aero VAIJIN Eye Flaring Sound	3	AUTO VAIJIN 飛行音 Flying Sound		AUTO VAIJIN 戰鬥中變形音 AUTO VAIJIN Battle Mode Transformation Sound	取消 CANCEL	AUTO VAIJIN Vehicle Medoan Transformation Sound

EXCEED CHARGE音的選擇 Selecting EXCEED CHARGE Sounds

- ① <變身後狀態>下，且FAIZ PHONE處於變身後狀態時，長按「O」按鈕。
- ② 之後，進入FAIZ POINTER, FAIZ SHOT的必殺選擇音。(參照P15, 16)
- ③ 對變身變化「必殺選擇音」的次數，「EXCEED CHARGE音」發生如下內容的變化。
- ④ Press the O button when the device is in the <Post-Transformation State> and the FAIZ PHONE is in the <Post-Transformation State>.
- ⑤ After that, enter FAIZ POINTER, FAIZ SHOT's Finisher Selection Sound.
- ⑥ Proceed to the steps to perform the Finisher (Page 15 and 16) with the FAIZ POINTER and FAIZ SHOT.
- ⑦ The "EXCEED CHARGE Sound" / "Finisher Selection Sound" will change corresponding to the number of "Finisher Selection Sound" shown in the list below.

選擇次數 Number of Finisher Selection Sounds	聲音 Sound	選擇次數 Number of Finisher Selection Sounds	聲音 Sound
1	EXCEED CHARGE音A & 必殺音A EXCEED CHARGE Sound A & Finisher Selection Sound A	5	EXCEED CHARGE音E & 必殺音E EXCEED CHARGE Sound E & Finisher Selection Sound E
2	EXCEED CHARGE音B & 必殺音B EXCEED CHARGE Sound B & Finisher Selection Sound B	6	EXCEED CHARGE音F & 必殺音F EXCEED CHARGE Sound F & Finisher Selection Sound F
3	EXCEED CHARGE音C & 必殺音C EXCEED CHARGE Sound C & Finisher Selection Sound C	7	EXCEED CHARGE音G & 必殺音G EXCEED CHARGE Sound G & Finisher Selection Sound G
4	EXCEED CHARGE音D & 必殺音D EXCEED CHARGE Sound D & Finisher Selection Sound D	8	EXCEED CHARGE音H & 必殺音H EXCEED CHARGE Sound H & Finisher Selection Sound H
5	EXCEED CHARGE音E & 必殺音E EXCEED CHARGE Sound E & Finisher Selection Sound E	9	EXCEED CHARGE音I & 必殺音I EXCEED CHARGE Sound I & Finisher Selection Sound I
6	EXCEED CHARGE音F & 必殺音F EXCEED CHARGE Sound F & Finisher Selection Sound F	10	EXCEED CHARGE音J & 必殺音J EXCEED CHARGE Sound J & Finisher Selection Sound J
7	EXCEED CHARGE音G & 必殺音G EXCEED CHARGE Sound G & Finisher Selection Sound G	11	EXCEED CHARGE音K & 必殺音K EXCEED CHARGE Sound K & Finisher Selection Sound K
8	EXCEED CHARGE音H & 必殺音H EXCEED CHARGE Sound H & Finisher Selection Sound H	12	EXCEED CHARGE音L & 必殺音L EXCEED CHARGE Sound L & Finisher Selection Sound L
9	EXCEED CHARGE音I & 必殺音I EXCEED CHARGE Sound I & Finisher Selection Sound I		
10	EXCEED CHARGE音J & 必殺音J EXCEED CHARGE Sound J & Finisher Selection Sound J		
11	EXCEED CHARGE音K & 必殺音K EXCEED CHARGE Sound K & Finisher Selection Sound K		
12	EXCEED CHARGE音L & 必殺音L EXCEED CHARGE Sound L & Finisher Selection Sound L		

- ※選擇4時，FAIZ POINTER, FAIZ SHOT的必殺選擇音。
- ※If four Selection Sounds have been played, the Finisher will not activate on the FAIZ POINTER and FAIZ SHOT.

<变身後狀態> 下的按鈕遊戲(手機狀態)的情況

從按啟動鍵 → 對應按鈕的次數會發出下記の聲音。

Lightly tap the Trigger. *Sounds will play corresponding to the number of times the Trigger has been pressed in the order shown in the list below.

聲音 Sounds	
1	FAIZ PHONE啟動音 FAIZ PHONE Rising Sound
2	FAIZ PHONE出音 FAIZ PHONE Extraction Sound
3	FAIZ PHONE射擊音 FAIZ PHONE Shooting Sound
4	FAIZ PHONE閉音 FAIZ PHONE Closing Sound
5	FAIZ PHONE插入音 FAIZ PHONE Inserting Sound
6	FAIZ PHONE射擊音 FAIZ PHONE Shooting Sound



JETSLIGER射擊遊戲 Playing JETSLIGER Sounds

- ①修改輸入3821 + ENTER。
- ②JETSLIGER COME CLOSER 響起，隨後發出右邊表格中聲音。
- ③行擊音響起時，按ENTER按鈕，以單發模式進行射擊遊戲。
- ④按清除按鈕或者按取消按鈕後行擊音停止。
- ⑤Press 3821 and ENTER (Press the buttons in this order)。
- ⑥A JETSLIGER COME CLOSER Sound will play, followed by the sounds shown in the list on the right.
- ⑦Press the buttons shown in the list below while the firing sounds are playing, and the device can be set to Single Mode or Burst Mode to play firing sounds.
- ⑧The firing sounds will stop playing when the CLEAR Button or CANCEL Button is pressed.

JETSLIGER 預中出擊音	
First Time	JETSLIGER Undersea Appearing Sound & Driving Sound
Second Time	JETSLIGER Appearing Sound & Driving Sound

變身解除遊戲 A "Transforming Sound" will play, the LEDs on the FAIZ DRIVER will light up, and the device will return to the <Pre-Transformation State> when the following steps are performed.

[手機狀態時] (When in the Phone State)


- ①按下取消按鈕 → 會發出下聲音。
- ②長按啟動鍵 → 會發出下聲音。
- ③HOLD DOWN THE TRIGGER. The sounds shown in the list below will play.

[腰帶狀態時] (When in the Belt State)	
1回目	變身解除音A Transforming Sound A
2回目	變身解除音B Transforming Sound B
3回目	變身解除音C Transforming Sound C
4回目	變身解除音D Transforming Sound D
5回目	變身解除音E Transforming Sound E
6回目	變身解除音F Transforming Sound F
7回目	變身解除音G Transforming Sound G
8回目	變身解除音H Transforming Sound H

手機爆破破損的遊戲 Playing with the PHONE BLASTER

如圖所示FAIZ PHONE 發出爆破音響起，可變進行變形。

 Transform the FAIZ PHONE as shown in the image until you hear a click.

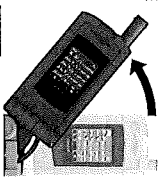

完成! 手機爆破破損 PHONE BLASTER Complete!



※每回變形的第一音是「第3回」。

※單發模式、爆發模式可變。

※清除按鈕或取消按鈕可變。

※The first firing sound in each mode will be the "Episode 3 ver. Firing Sound".

※Single Mode and Burst Mode can be obtained by pressing the CLEAR Button and CANCEL Button.

Single Mode (單發) Single Mode (Semi-Auto)

- ①輸入106+ENTER。
- ②按啟動鍵後發出射擊音(單發)，槍口發光。
- ※12次射擊後，卡匣「音響起，此刻子彈已經處於用盡的狀態。
- ③Press 103 and the ENTER Button. Once the inputs are complete, a "SINGLE MODE Sound" will play when the Trigger is pulled up.
- ④A Firing Sound (Semi-Auto) will play when the Trigger is pulled up, and the muzzle will light up. "A Click Sound" will play when 12 shots have been fired, and the device will run out of rounds.

Burst Mode (3連發) Burst Mode (Three Round Bursts)

 
- ①輸入106+ENTER。
- ②按啟動鍵後發出射擊音(3連發)，槍口發光。
- ※4次射擊後，卡匣「音響起，此刻子彈已經處於用盡的狀態。
- ③Press 106 and the ENTER Button. Once the inputs are complete, a "BURST MODE Sound" will play when the Trigger is pulled up.
- ④A Firing Sound (Three Round Burst) will play when the Trigger is pulled up, and the muzzle will light up. "A Click Sound" will play when 4 shots have been fired, and the device will run out of rounds.

蓄能 Charging

- ①子彈用盡時，輸入1279+ENTER。
- ②輸入後發出「蓄能」音響，畫面「ON」亮起。
- ③Press 279 and the ENTER Button when the device runs out of rounds. Once the inputs are complete, a "Charge Sound" will play, the LEDs on the screen will light up, and the rounds will be recharged.

FAIZ POINTER的安裝※從手機爆破破損完成狀態開始。


Attaching the FAIZ POINTER "Start from the state where the PHONE BLASTER is complete."

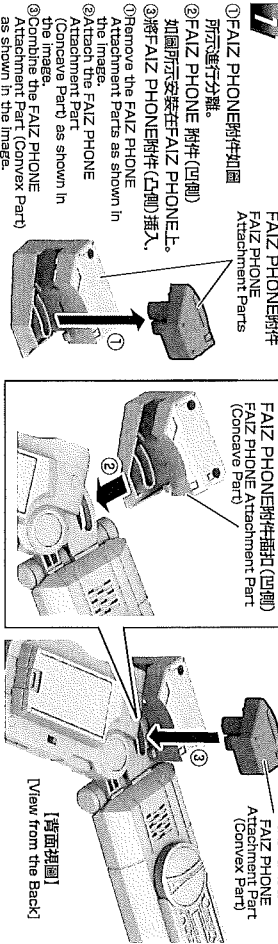

FAIZ POINTER射擊遊戲 FAIZ PHONE射擊音

將FAIZ POINTER射擊音FAIZ PHONE射擊音安裝上去。

 Match the FAIZ POINTER with the hole on the FAIZ PHONE Attachment Parts.


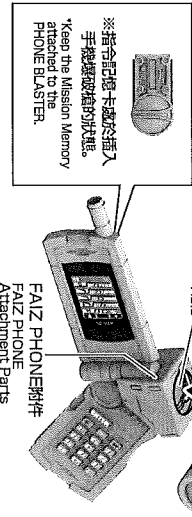


完成! Complete!




FAIZ POINTER的玩法 How to Play with the FAIZ POINTER

  各部分名稱/電源安裝方法 Names of Each Section / How to Turn On the Device

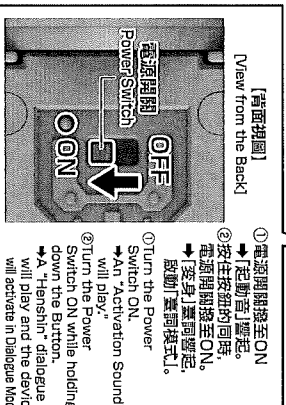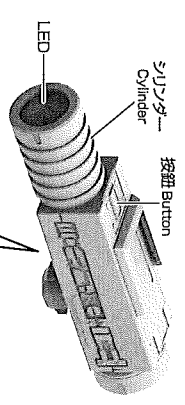


 單獨的遊戲方法 How to Play with the Device Individually

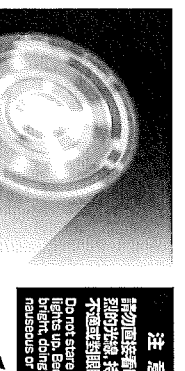

FAIZ SHOTの玩法 How to Play with the FAIZ SHOT

 各部分名稱/電源安裝方法 Names of Each Section / How to Turn On the Device

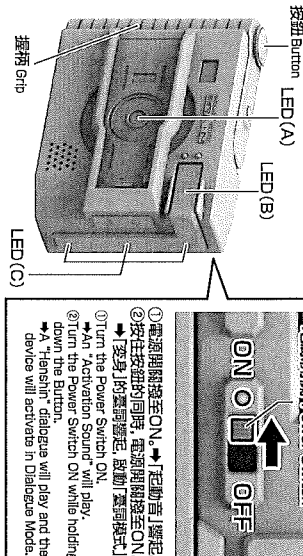

單獨的遊戲方法
Device Individually

指令記憶卡未設置狀態下
①短按按鈕。→發出待機音, LED (B) 亮起。
②長按按鈕。→第1回: 發出「腰帶安裝音」, 第2回: 發出「FAIZ SHOT取出音」。

Without inserting the Mission Memory.
①Lightly tap the Button.
→A "Belt Equipping Sound" will play, LED (B) will light up.
②Hold Down the Button.
First Time: A "Belt Equipping Sound" will play.
Second Time: A "FAIZ SHOT Drawing Sound" will play.

鐵拳模式 Knuckle Mode

 
①將指令記憶卡插入FAIZ SHOT。
→「準備音」, 接收電波狀態, 按鈕具有必殺技發動時音的延遲分種。
②旋轉握柄90度。
Insert the Mission Memory into the FAIZ SHOT.
→A "READY Sound" will play and the device will enter the radio wave acceptance state for approx. 2 minutes.
The state will be extended for another minute if the state is not rotated when a finisher is activated.
③Rotate the Grip 90 degrees.
※「準備音」聲音有3種, 每按一次聲音會依次響起。
※必須將指令記憶卡插入FAIZ SHOT時, 握柄不會旋轉。
※There are three types of "READY Sounds" that will play in order when the device is attached.
※The Grip will not rotate if the Mission Memory is not inserted.

①短按按鈕會響起「打響音」。
→「打響音」聲音會響起。
※處於「單獨模式」狀態, 當配有「打響音」時, 當收銀員位時需要取出指令記憶卡, 提起握柄。
※When in Dialogue Mode, Takumi Inu's "Striking Sound" will be added on. (Return to its original state to activate the Mission Memory) and raise the Grip.

FAIZ SHOT的必殺技遊戲方法 ※從變身後狀態開始 Finishers Using the FAIZ SHOT Begin from the Post-Transformation State.

①打開手機, 按ENTER按鈕。→FAIZ PHONE發出「EXCEED CHARGE音」響起, 發送電波。
②FAIZ SHOT接收電波。→LED (A) 亮起, 發出「必殺技待機音」。
③「必殺技待機音」中按按鈕。
→發出「巨大響聲必殺技音」, LED (B) 亮起, 最後的「爆發音」響起時發出電波。
④按按鈕接收電波。
→配合「爆發音」, 響起時發出電波。
⑤Open the FAIZ PHONE and press the ENTER Button.
→An "EXCEED CHARGE Sound and Transmission Sound" will play and radio waves will be sent from the FAIZ PHONE.
⑥The FAIZ SHOT will receive the radio waves.
⑦The FAIZ SHOT will light up and a "Finisher Standby Sound" will play.
⑧Press the Button while the "Finisher Standby Sound" is playing.
→A "SHOCK WAVE" Finisher Sound will play, LED (B) and (C) will light up.
⑨The Protector will receive the radio waves.
→A "Mark" will be projected when the "Explosion Sound" plays.



腿部支架的安裝 How to Attach the Leg Holder

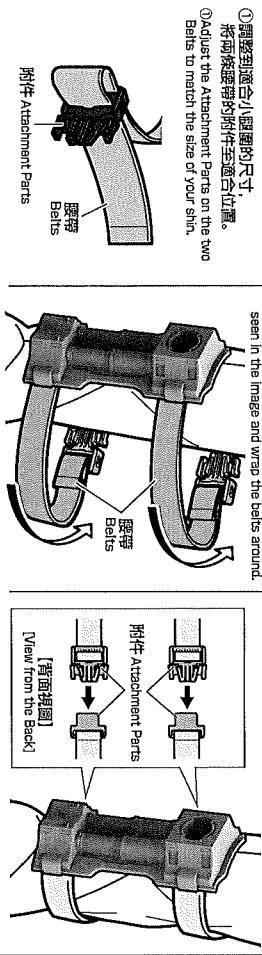

FAIZ POINTER的必殺技遊戲方法 ※變身後, 從腿部支架的安裝後狀態開始。 Finishers Using the FAIZ POINTER Begin from the Post-Transformation State with the Leg Holder Equipped.


①從FAIZ PHONE取出指令記憶卡, 插入FAIZ POINTER。
→發出「準備音」, 進入2分鐘的電波接收狀態。
電波接收狀態, 按鈕具有必殺技發動時音的延遲分種。
Remove the Mission Memory from the FAIZ PHONE and attach the FAIZ POINTER. →A "READY Sound" will play and the device will enter the radio wave acceptance state for approx. 2 minutes. The state will be extended for another minute if the button is pressed or when a finisher is activated.
※「準備音」聲音有3種, 每按一次聲音會依次響起。
There are three types of "READY Sounds" that will play in order every time it is attached.

  ②將腿部支架的凸出部分插入腿部。
→將FAIZ POINTER在凸出的小孔中。
③將FAIZ POINTER按圖示方向旋轉。
→按圖示方向旋轉。
④按圖示方向旋轉。
→按圖示方向旋轉。

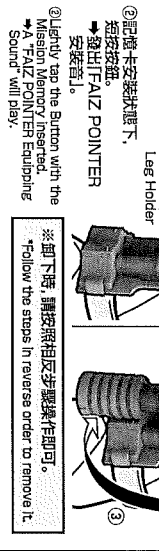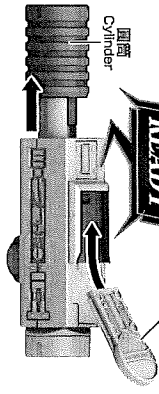

FAIZ PHONE的必殺技遊戲方法 Finishers Using the FAIZ PHONE Begin from the Post-Transformation State with the Leg Holder Equipped.

 ①打開FAIZ PHONE, 按ENTER按鈕。
→FAIZ PHONE發出「EXCEED CHARGE音」響起, 發送電波。
②發出「巨大響聲必殺技音」, LED 亮起, 最後的「爆發音」響起時發出電波。
③按按鈕接收電波。
→配合「爆發音」, 響起時發出電波。
④Open the FAIZ PHONE and press the ENTER Button.
→An "EXCEED CHARGE Sound and Transmission Sound" will play and radio waves will be sent from the FAIZ PHONE.
⑤The FAIZ POINTER will receive the radio waves.
⑥A "CRIMSON SMASH" Finisher Sound will play, the LED will light up, and radio waves will be sent when the last "Explosion Sound" plays.
⑦A "Mark" will be projected when the "Explosion Sound" plays.


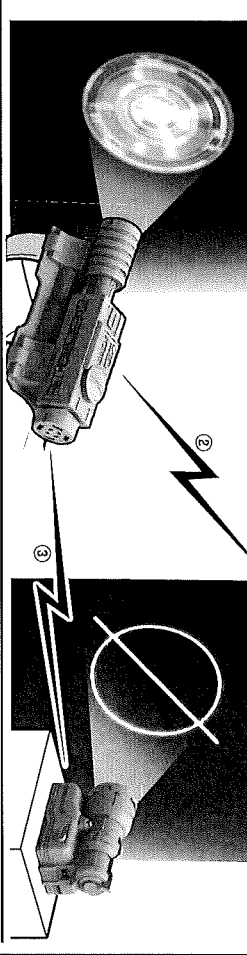


深紅電鑽失敗演出 CRIMSON SMASH Failure Effects

①長按指令記憶卡安裝狀態的按鈕。
→第1回: 發出「必殺技待機音」, 第2回: 發出「取消待機音」。
②Hold down the Button when the Mission Memory is inserted.
First Time: A "Finisher Standby Sound" will play.
Second Time: A "Transition Cancelling Sound" will play.

FAIZ AXEL的遊戲方法 How to Play with the FAIZ AXEL

  各部分名稱/電源安裝方法 Names of Each Section / How to Turn On the Device

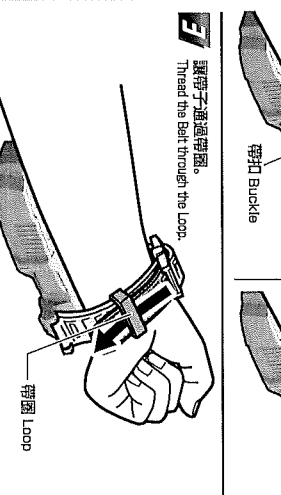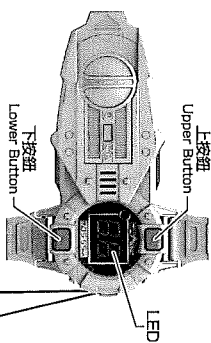

安裝在手腕上的方法 How to Attach it to Your Arm

1 將本體調整到適合手臂尺寸。帶子通過帶扣，將帶子穿過帶子的小孔。

2 帶子通過帶扣。將帶子穿過帶子的小孔，將帶子穿過帶扣。

 
 
3 帶子通過帶扣。將帶子穿過帶子的小孔，將帶子穿過帶扣。

4 帶子通過帶扣。將帶子穿過帶子的小孔，將帶子穿過帶扣。

AXEL形態和變化形態 Changing into the AXEL Form

1 從FAIZ PHONE取下指令記憶卡。

2 從FAIZ AXEL取下AXEL記憶卡。

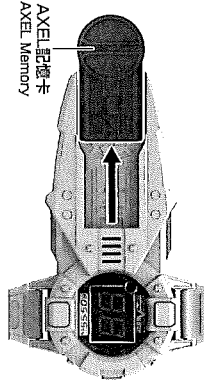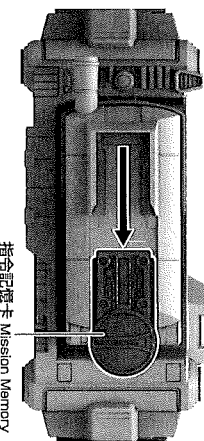

COMPLETE


REFORMATION

AXEL形態變身音、解除音的選擇 Selecting AXEL Form Transformation / Detransforming Sounds

- ① <變身後狀態> 按下按鈕。
- ② <AXEL變身音> 變身音。將指令記憶卡插入FAIZ PHONE後，可發出連環最大4次的AXEL變身音。
- ③ <AXEL解除音> 解除音。將指令記憶卡插入FAIZ PHONE後，可發出連環最大4次的AXEL解除音。
- ④ <AXEL變身音> 變身音。將指令記憶卡插入FAIZ PHONE後，可發出連環最大4次的AXEL變身音。
- ⑤ <AXEL解除音> 解除音。將指令記憶卡插入FAIZ PHONE後，可發出連環最大4次的AXEL解除音。

選擇次數	變身音	解除音
1	AXEL形態通用變身音 General AXEL Form Transformation Sound	AXEL形態通用解除音 AXEL Form Detransforming Sound
2	AXEL形態第11話變身音 Episode 11 AXEL Form Transformation Sound	AXEL形態第11話解除音 Episode 11 AXEL Form Detransforming Sound
3	AXEL形態第22話變身音 Episode 22 AXEL Form Transformation Sound	AXEL形態第22話解除音 Episode 22 AXEL Form Detransforming Sound
4	AXEL形態變身音(假面騎士4號[Ver.] AXEL Form Transformation Sound (Kamen Rider 4 ver.)	AXEL形態解除音H AXEL Form Detransforming Sound H

 長按上按鈕 Holding Down the Upper Button

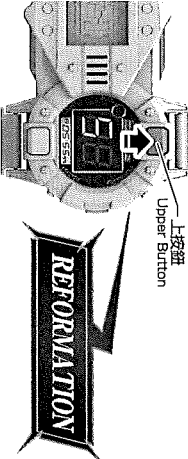

AXEL模式的演出選擇 Selecting AXEL Mode Effects



演出選擇	演出效果
01	AXEL模式10秒倒計時 AXEL Mode 10 Second Countdown Sound
02	AXEL模式10秒倒計時(開始音) AXEL Mode 10 Second Countdown Sound (With Acceleration Preparation Sound in the beginning)
03	AXEL模式22話變身音 Episode 22 AXEL Mode Transformation Sound

AXEL模式發動 Activating the AXEL Mode

演出選擇：無操作(00/01)時 When Selecting No Inputs / 00 or 01

1 按下按鈕。與AXEL變身音一起10秒倒計時開始。

  
2 10秒倒計時中按下按鈕。AXEL音響起。

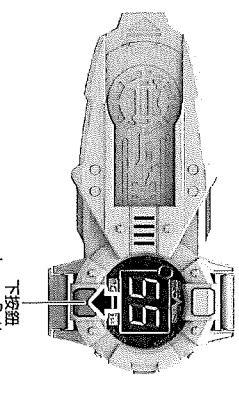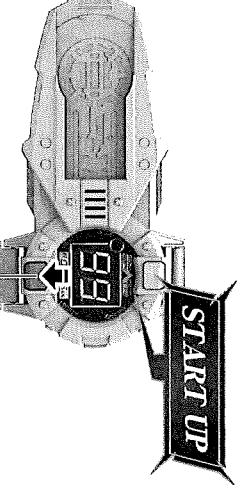

投影儀的遊戲方法 Playing with the Projector

7 電源開關接至ON。

 - ▶進入3分鐘的接收電波的狀態。
- Turn the Power Switch ON.
- ▶The device will enter the "Radio wave acceptance state" for approx. 3 minutes.

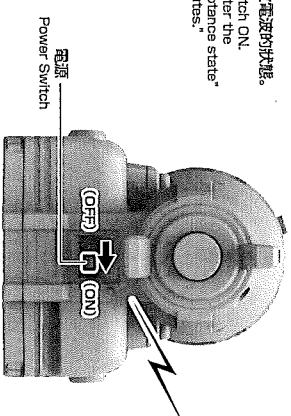

※電源開關接至ON後，如果3分鐘後依然什麼都沒發生的話，電波接收狀態進入OFF狀態，這種情況請再一次操作按鈕，重新啟動電波。

 
※If three minutes pass after the Power Switch is turned ON and no actions are taken, the radio wave acceptance function will turn OFF. To reactivate it, press a button or turn the power on again.

8 按投影儀的按鈕。

- ▶LED發出亮光，即可開始投影。
- Press the Button on the Projector.
- ▶The LED will light up, and a ϕ Mark can be projected onto flat surfaces such as walls.

注意 Caution


請勿直接照射LED的光，由於強烈的光線，眼睛可能會導致不適或損傷造成不良影響。Do not stare at the LED when it lights up. Because it is extremely bright, doing so may make you nauseous or affect your vision.

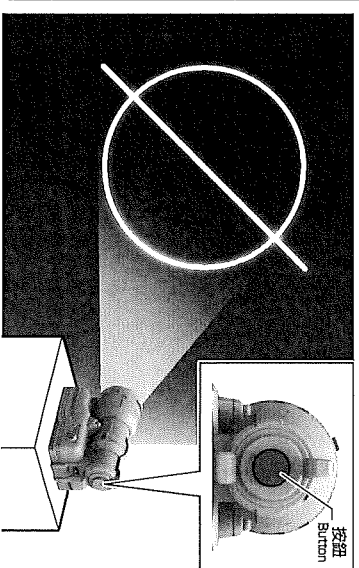

焦點的調整 Adjusting Focus

投影出的 ϕ 符號的焦點不清晰，請左右推動手柄調整焦點的位置。If the projected ϕ Mark is out of focus, move the lever left or right to adjust it.

 
【俯視圖】
[View from the Top]

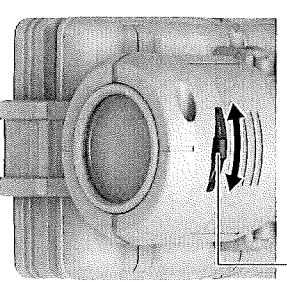

※使用投影儀時，請將投影儀安置在桌子或臺架等高度，安放在地板上時，無法正確投影的符號投影在牆上。
※LED超過30秒後，再次按按鈕後燈會熄滅。
When using the Projector, set it at a position higher than the ground such as on a desk or stand. The ϕ Mark cannot be properly projected if it is placed on the ground. The LED will turn Off after 30 seconds or if the button is pressed again.


9 10秒倒計時中按下按鈕 ▶發送電波，FAIZ POINTER發出下記の聲音。

 - ▶第1回：多重指示標記射出音。
- ▶第2回以後：「強化CRIMSON SMASH必殺技音」
- Press the Lower Button during the 10 second countdown.
- ▶Also, when the button is pressed, the following sounds will play from the FAIZ POINTER.
- First Time: "Multiple Pointing Marker Emitting Sound"
- Second Time: "Enhanced CRIMSON SMASH Finisher Sound"

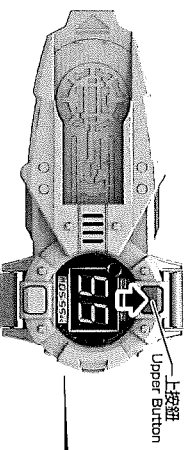



10 10秒倒計時中按下按鈕 ▶發送電波，FAIZ SHOT發出必殺技音後，「爆發音」響起。

 - ▶發出IGNAND IMPACT必殺技音。
- Press the Button on the FAIZ SHOT during the 10 second countdown.
- ▶A "SHAND IMPACT Finisher Sound" will play.

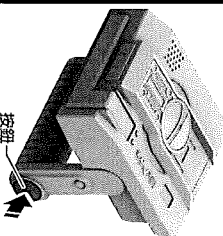



11 10秒倒計時後 TIME OUT 的聲音響起。

  - ▶10秒倒計時結束中，FAIZ POINTER、FAIZ SHOT 發出必殺技音後，「爆發音」響起。
- ▶向投影儀輸出電波，投影儀會投影出 ϕ 符號。
- A "TIME OUT Sound" will play when the 10 second countdown ends.
- ▶If Finisher Sounds are played with the FAIZ POINTER or FAIZ SHOT during the 10 second countdown, "Explosion Sounds" will play, radio waves will be sent to the Projector, and a ϕ Mark will be projected.

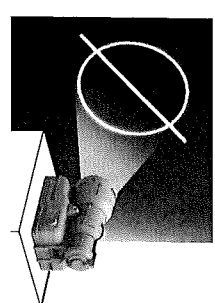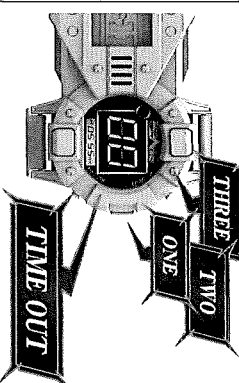

演出選擇:02的時候 When Selecting 02

  - 按下按鈕。▶響起「第2話AXEL模式必殺技音」，電波發送，配合聲音FAIZ POINTER發出亮光，最後配合「爆發音」投影儀投射出 ϕ 符號。
- ▶An "Episode 22 AXEL Mode Finisher Sound" will play, Radio waves will be sent out, the FAIZ POINTER will light up with the sounds, and a ϕ Mark will be projected from the Projector with the final "Explosion Sound."

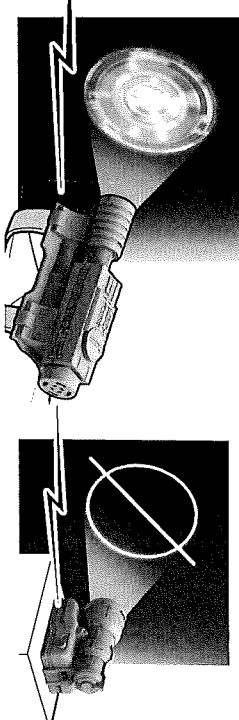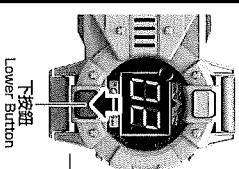

演出選擇:03的時候 When Selecting 03

- 按下按鈕。▶「強化CRIMSON SMASH」多重指示標記ver. 必殺技音」響起。
- ▶輸出電波，配合聲音FAIZ POINTER發出亮光。
- Press the Lower Button.
- ▶An "Enhanced CRIMSON SMASH Multiple Pointing Marker ver. Finisher Sound" will play.
- ▶Radio waves will be sent out, and the FAIZ POINTER will light up with the sounds."

