


onn

USER GUIDE

Wireless Silent 5-Button Mouse

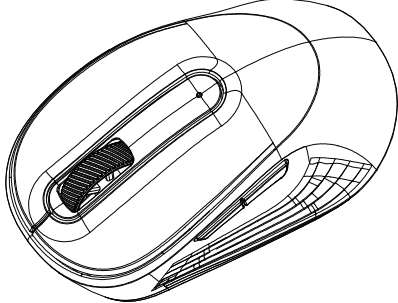

HOGRY36017802_EN_October 18, 2025_V1

Contents & Information

CONTENTS & INFORMATION

OVERVIEW

SAFETY PRECAUTIONS

OPERATION

Setting Up Mouse

WARRANTY

SPECIFICATIONS

TROUBLESHOOTING

2-3

4

5-6

7

7-9

10

10

11

FEATURES

• 5 Silent Clickable buttons, scroll wheel, and on/off switch

• 1600 DPI sensitivity

• 2.4GHz Wireless connection with USB nano receiver (stores in battery compartment when not in use)

• Windows, MacOS, and ChromeOS compatible

• USB Plug-and-play



HOGRY36017802

SCAN HERE FOR MORE PRODUCT INFORMATION AND LEAVE US A REVIEW!

Overview

LEFT BUTTON

RIGHT BUTTON

LED INDICATOR

CONNECT

SCROLL WHEEL

MIDDLE BUTTON

BACK FORWARD BUTTON

PULL TAB

USB NANO RECEIVER

BATTERY COVER

ON/OFF SWITCH

4

Safety Precautions

⚠ WARNING

FCC compliance statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

5

onn

For product assistance & missing or replacement parts: WE CAN HELP

1-888-516-2630

7 DAYS/WEEK
7:00am - 9:00pm CST

THIS GUIDE CONTAINS IMPORTANT SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Find more at Walmart.com

⚠ WARNING

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement:
The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

6

Operation, Setting Up Mouse

1. ACTIVATING BATTERY

Note: Replace batteries when low battery LED indicator blinks.


3. Insert 1 x AA battery.

1. Remove battery cover.

2. Remove insulating pull tab.

7

2. INSTALLING RECEIVER

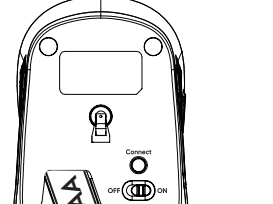


Insert it into available USB-A port.



Take out USB nano receiver.

8

3. POWER ON

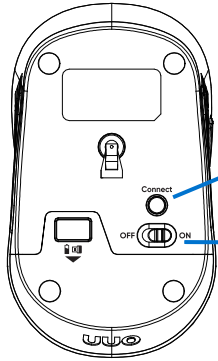

Press Connect if device has lost connection.

Turn on power.

9

Warranty

1 YEAR LIMITED WARRANTY COVERING DEFECTIVE PARTS

Contact Manufacturer for Additional Information

This warranty is non-transferable and does not cover failures due to misuse of proper installation or maintenance.

All warranty coverage applies only if barricade is used in the United States.

10

Specifications

Buttons

5

Dimensions

4.16 x 2.45 x 1.52 inch
10.5 x 6.2 x 3.8 cm

Operating System

Windows® 7/8/10/11 or later, MacOS 10.5 or later, Chrome OS

11

Problem	Cause	Solution/Prevention
Mouse is not working	The USB port on computer may have an issue	Try a different USB port. If the device is connected through a USB hub or extender, try plugging directly into the USB port of your Laptop/PC.
	The USB nano receiver is not plugged in tightly	Ensure USB nano receiver is pushed in all the way.
	Battery placed in the wrong direction	Match + and - signs on battery to signs in battery compartment.



Project Name: HOGRY36017802 (G7K_Wireless Silent 5-Button Mouse) Walmart USA-onn USER GUIDE (Vietnam)_V1_Outline_20251121.ai		
REV. 1	印刷順序：印1色+1特色，*雙面印刷，左右彈簧折5折	PROCESS COLORS Pantone 285C K:100
DATE: 2025.11.21	紙 質：70g双胶紙	
比例 1:1 —— 裁切線 ----- 折線	尺 寸： 未折合前-寬22.5 x 長3.75 inch 折合後-寬3.75 x 長3.75 inch (9.525 x 9.525 cm)	
簽 核：		製作者：Megan