

MESSAGE TO PARENTS

Thank you for bringing home BOB THE BUILDER'S RC SCOOP. This is a toy full of imagination and fun. It's wonderful to pretend with Scoop!

Please read the instructions carefully and learn about the many different features of BOB THE BUILDER'S RC SCOOP. This will allow you to explain how the toy works in a way that is easy for your child to understand.

INSERTING THE BATTERIES

Important Note: Battery installation should be done by an adult.

To Insert Batteries in Vehicle:




(PICTURE 1)

1. Remove screws on battery compartment door located on bottom of vehicle. (PICTURE 1)
2. Insert 3 "AA" or LR6 (alkaline recommended). Be sure the (+) and (-) are properly matched. (PICTURE 2)
3. Replace battery door and tighten screw.




(PICTURE 2)

 To Insert Batteries in Transmitter:

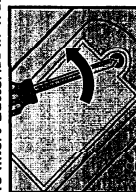

(PICTURE 3)

 1. Unscrew and remove the battery cover. (PICTURE 3)
2. Insert 1 9V(BLR61) and replace battery door. (PICTURE 4)

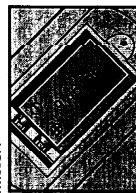

(PICTURE 4)

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

TO ENSURE PROPER FUNCTION:

- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged. (if removable)
- Rechargeable batteries are only to be changed under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire. Battery may explode or leak.

 
 
Operating the Vehicle:



1. Move the On/Off switch to the On position.



2. Press the right side of the button to make Scoop go forwards.

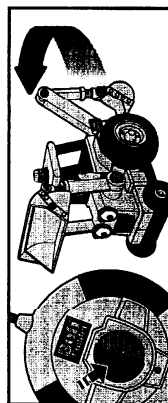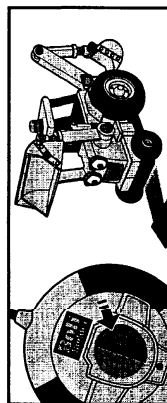

3. Press the left side of the button to make Scoop reverse and turn left at the same time.

4. Scoop's bucket will automatically move up and down when the vehicle is moving.
5. When you have finished playing with Scoop, turn off the vehicle and transmitter.

Note: The remote control must be within 30 feet of "Scoop" for the toy to respond.

Safety Precautions:

Adults, to ensure that the child's play is both safe and fun, please review operating instructions and the following safety rules before operating vehicle.

Caution:

1. Do not pick up vehicle while in motion.
2. Keep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is in operation mode.
3. To avoid accidental operation, remove battery pack when not in use.
4. Radio interference is caused by the presence of another radio-controlled vehicle operating on the same frequency as our vehicle.
5. Radio interference can be caused by the operation of your vehicle near high voltage electrical wires, large steel reinforced concrete buildings and passing trucks with CB radios.
6. Do NOT operate your vehicle over wet surfaces. Water can damage the internal electronics.
7. Do Not drive your remote control vehicle into public roadways.
8. For best results, hold antenna up, not pointed down toward the R/C vehicle. If the vehicle gets too far away from the transmitter, your signal strength will become weak and the vehicle will not respond properly. The maximum range for the vehicle should be between 25 and 30 feet depending on environmental conditions.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

90-DAY LIMITED WARRANTY

Tiger Electronics (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to the dealer or to Tiger.

The 90-day warranty period shall begin on the date of purchase. After the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S. \$18.15. Payments must be by check or money order payable to Tiger Electronics.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

 
All product returned must be shipped prepaid and insured for loss or damage to.

Hasbro Inc.
Consumer Returns A-847
1027 Newport Ave.
Pawtucket, RI 02862

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Included inside the product is a warranty card. The warranty card must be filled out and returned to Tiger with the warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED. TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights, which vary, from state to state.

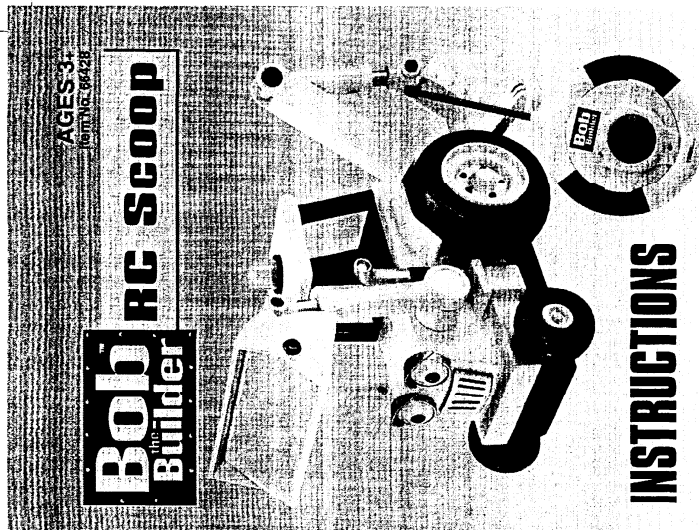

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tigertoys.com



© 2002 HT Entertainment PLC
Builder name and character are
the property of Tiger Electronics
PLC. Registered in the UK.