


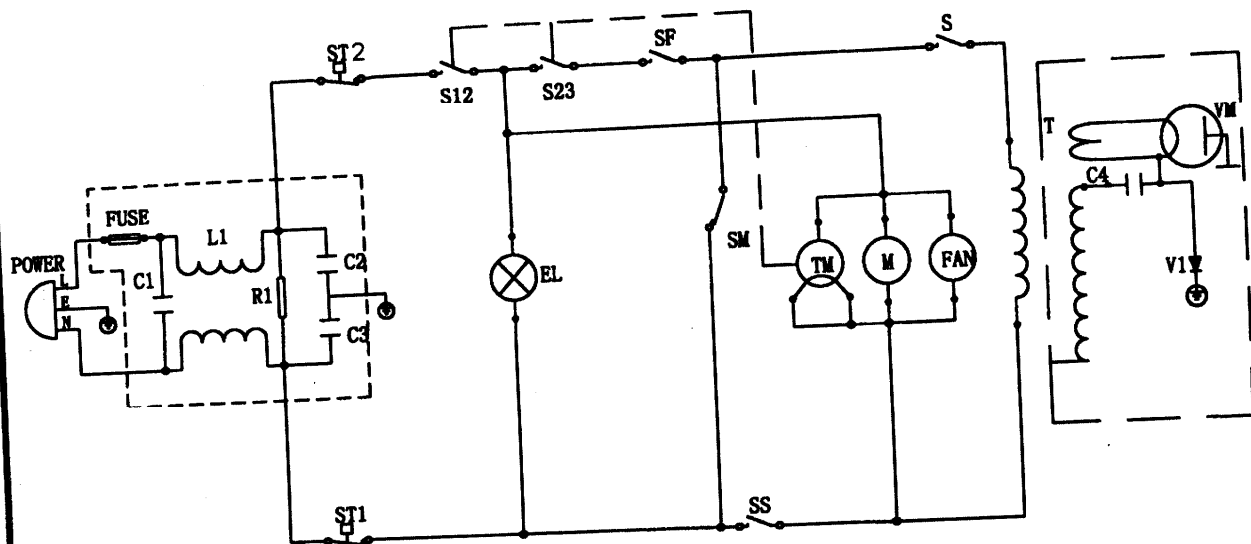

S door
 S12 time switch
 S23 power switch
 SM monitor
 SF primay switch
 SS secondary switch

EL lamp
 TM timer
 M turntable motor
 FAN fan motor

Note: when the timer switch is on, if the oven door open, the lamp is on; when the timer switch is off, if the oven door open, the lamp is off.

					M6017X-Y M7017X-Y schematic diagram			
设计	方叶伟	标准化			图样标记	数量	重量	比例
校对		描图						
标记	处数	更改文件号	签字	日期	材料:			
					兰的德站站制选右阳八三			