



DUB CITY®

R/C ROLLER\$™

RADIO CONTROLLED SERIES

Keep these instructions for future reference: they contain important information.

IMPORTANT: Please read all "Consumer Information" before operating your vehicle.

CAUTION:

ELECTRICALLY OPERATED PRODUCT

Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

ADULT SUPERVISION REQUIRED.

Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

Consumer Information:

Note to Adults: to ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

CONTENTS

Vehicle
Transmitter Controller
Antenna for Transmitter Controller
9.6V Ni-Cd Battery Pack
Charger for 9.6V Ni-Cd Battery Pack (120V AC 60Hz)

Safety Tips

- NEVER drive your vehicle on streets! They're for real cars!
- DO NOT pick up vehicle while in motion.
- Avoid collisions with wall or hard surfaces.
- Keep fingers, hair and loose clothing away from tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended when this vehicle is being operated.
- To avoid accidental operation, remove all batteries when not in use.
- Battery charger used with the toy to be regularly examined for damage to cord plug enclosure and other parts: and in the event of such damage. Toy must not be used with the battery charger until such damage has been repaired.
- For transformer toys and toys with battery boxes: toy is not to be connected to more than recommended number of power supplies.

- Recommended rechargeable battery 9.6V 700mAh Ni-Cd.
- Be sure to rest your vehicle for at least 5 minutes after every 15 minutes of operation.

BEFORE BATTERY INSTALLATION

Your new R/C is designed to work with standard R/C 9.6-volt Ni-Cd batteries and charger. Controller is designed to work with a 9-volt alkaline battery.

For detailed information regarding Ni-Cd battery charging and safety, please follow the specific instructions that came with your battery pack and charger.

BATTERY CHARGING:

(When using 9.6V Ni-Cd Battery Pack)

RECHARGEABLE BATTERIES ARE TO BE CHARGED BY ADULT ONLY

(The rechargeable Ni-Cd battery pack is not charged, please charge battery for 4 (four) hours prior to use)

1. Plug the wall pack battery charger into wall outlet.
2. Connect the cables leading from the Battery Pack and the charger together by snapping the jack and the socket tightly. (See diagram 1)
3. To disconnect cables, press down on the clip and pull apart. (See diagram 1)
4. After charging for 4 (four) hours, the battery will be warm. This condition is normal for fully charged batteries. DO NOT overcharge the battery.
5. After use, the battery pack will be hot!!! Wait at least 20 minutes until the battery cools before recharging. Recharging a warm or hot battery pack will greatly shorten the use life of the battery.

INSTALLING BATTERIES IN THE R/C

9.6V Ni-Cd


1. Push the ON/OFF to "OFF" position on vehicle.
2. To install the 9.6V Ni-Cd battery, use a Phillips screwdriver (not included), to remove the battery compartment door underneath the vehicle. (See diagram 2)
3. Remove the battery compartment door.
4. Plug the battery pack into the cable by snapping the jack and socket lightly.
5. Replace the battery compartment door and use Phillips screwdriver to lock the compartment door.

INSTALLING CONTROLLER – 9 VOLT BATTERY

1. Open the battery cover as shown (See Diagram 3)
2. Install one 9V battery with polarity (+/-) as shown inside battery compartment.
3. Replace battery cover.

Battery Safety Information

- Insure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

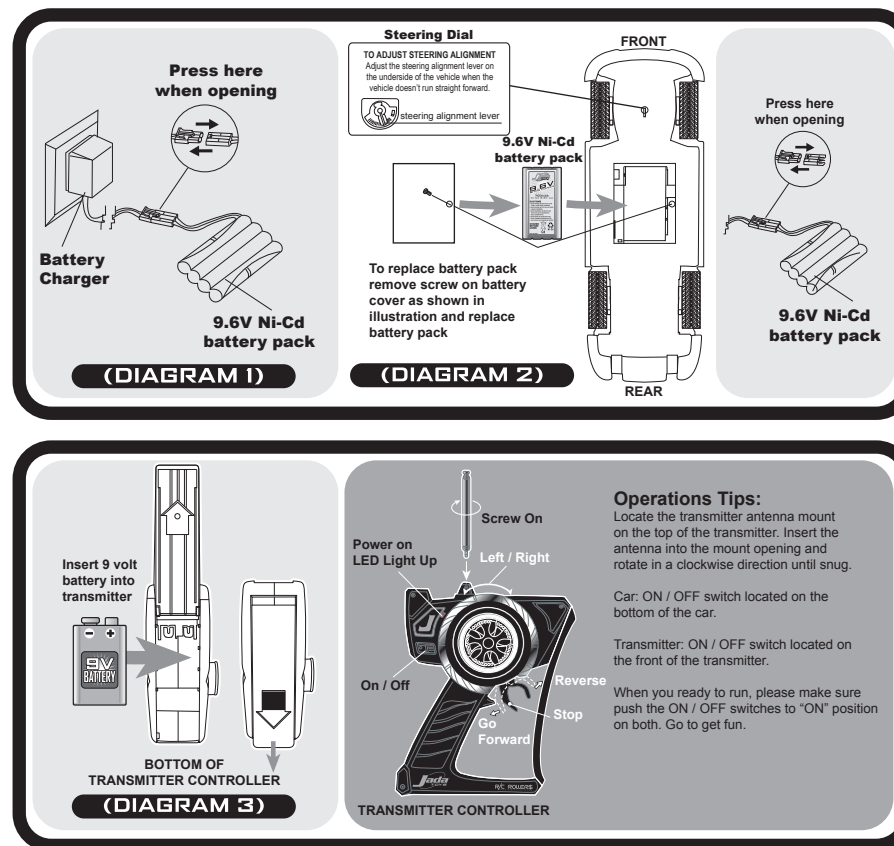

- Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period of time to prevent possible leakage.
- Do not recharge non-rechargeable batteries.
- Do not short-circuit terminals.
- Remove rechargeable batteries before recharging.
- Rechargeable battery must be charged by adult only.
- Dispose of batteries safely. Do not dispose of batteries (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.
- Do not disassemble the battery pack.
- Do Not overcharge the battery. Use only the charger provided. Do Not use other chargers to charge battery. Like any other rechargeable battery, explosion may occur, if improperly charged.

83002-IS-US04



©2005 Jada Toys, Inc.
City of Industry, CA 91748 USA
DUB CITY® and R/C ROLLER\$™
are trademarks of Jada Toys, Inc.
All Rights Reserved.