



Remote Control features

1. **Charging your remote control** - Before you start using your Navigator buggy you must fully charge the Remote Control internal battery for approximately 6 hours or overnight with the AC charger. The top left, Nav On, indicator light will flash whilst charging.

You can also charge the remote control using the supplied USB cable and connecting it to a computer. Note that you should not charge a completely flat battery using this method. You should use the AC charger. The battery will take longer to charge when using the USB cord.

2. **Forward Arrow** - Press to accelerate the buggy. The longer you depress the button, the faster the buggy travels. Please note: If you wish to regain the speed you were travelling at prior to the last stop, simply press the forward button twice in succession. The buggy will accelerate to the last speed setting. This feature works only when you press the stop button to stop the buggy rather than pressing the down arrow.
3. **Down Arrow** - Decreases the speed and provides for reverse. If you are moving forward, the down arrow can be used to decrease speed, the longer the pressure, the slower the speed. To operate the Reverse mode you must stop the buggy first. Press the down arrow and the buggy will reverse. The buggy will move in the backward direction only whilst you keep the downarrow depressed. If you take your finger off the down arrow the buggy will stop [safety feature].



4. Left and Right Arrow- Press the appropriate turn command and keep pressed until the degree of turn is achieved. Momentary pressure will make a small adjustment to the direction, whilst prolonged will increase the amount of turn.

5. Locking / Unlocking of Remote

The GPS Buggy Remote Control can be locked or unlocked by the following sequences:

- To lock the Remote Control, press “STOP” and then press the top right hand Nav Off button once. The locking is verified with three quick flashes of the red led in the Nav Off button.
- Any key press (except for unlock sequence), while locked, also causes Red led to give three quick flashes to indicate that unit is locked.
- To unlock the Remote Control, press the top left hand Nav On button once. The unlocking is verified with three quick flashes of the green led in the Nav Off button. From this point on the Remote Control will function normally.

6. Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

7. Modification Warning

Warning: *Any changes or modifications not expressively approved by MGI could void the user's authority to operate this equipment.*