 


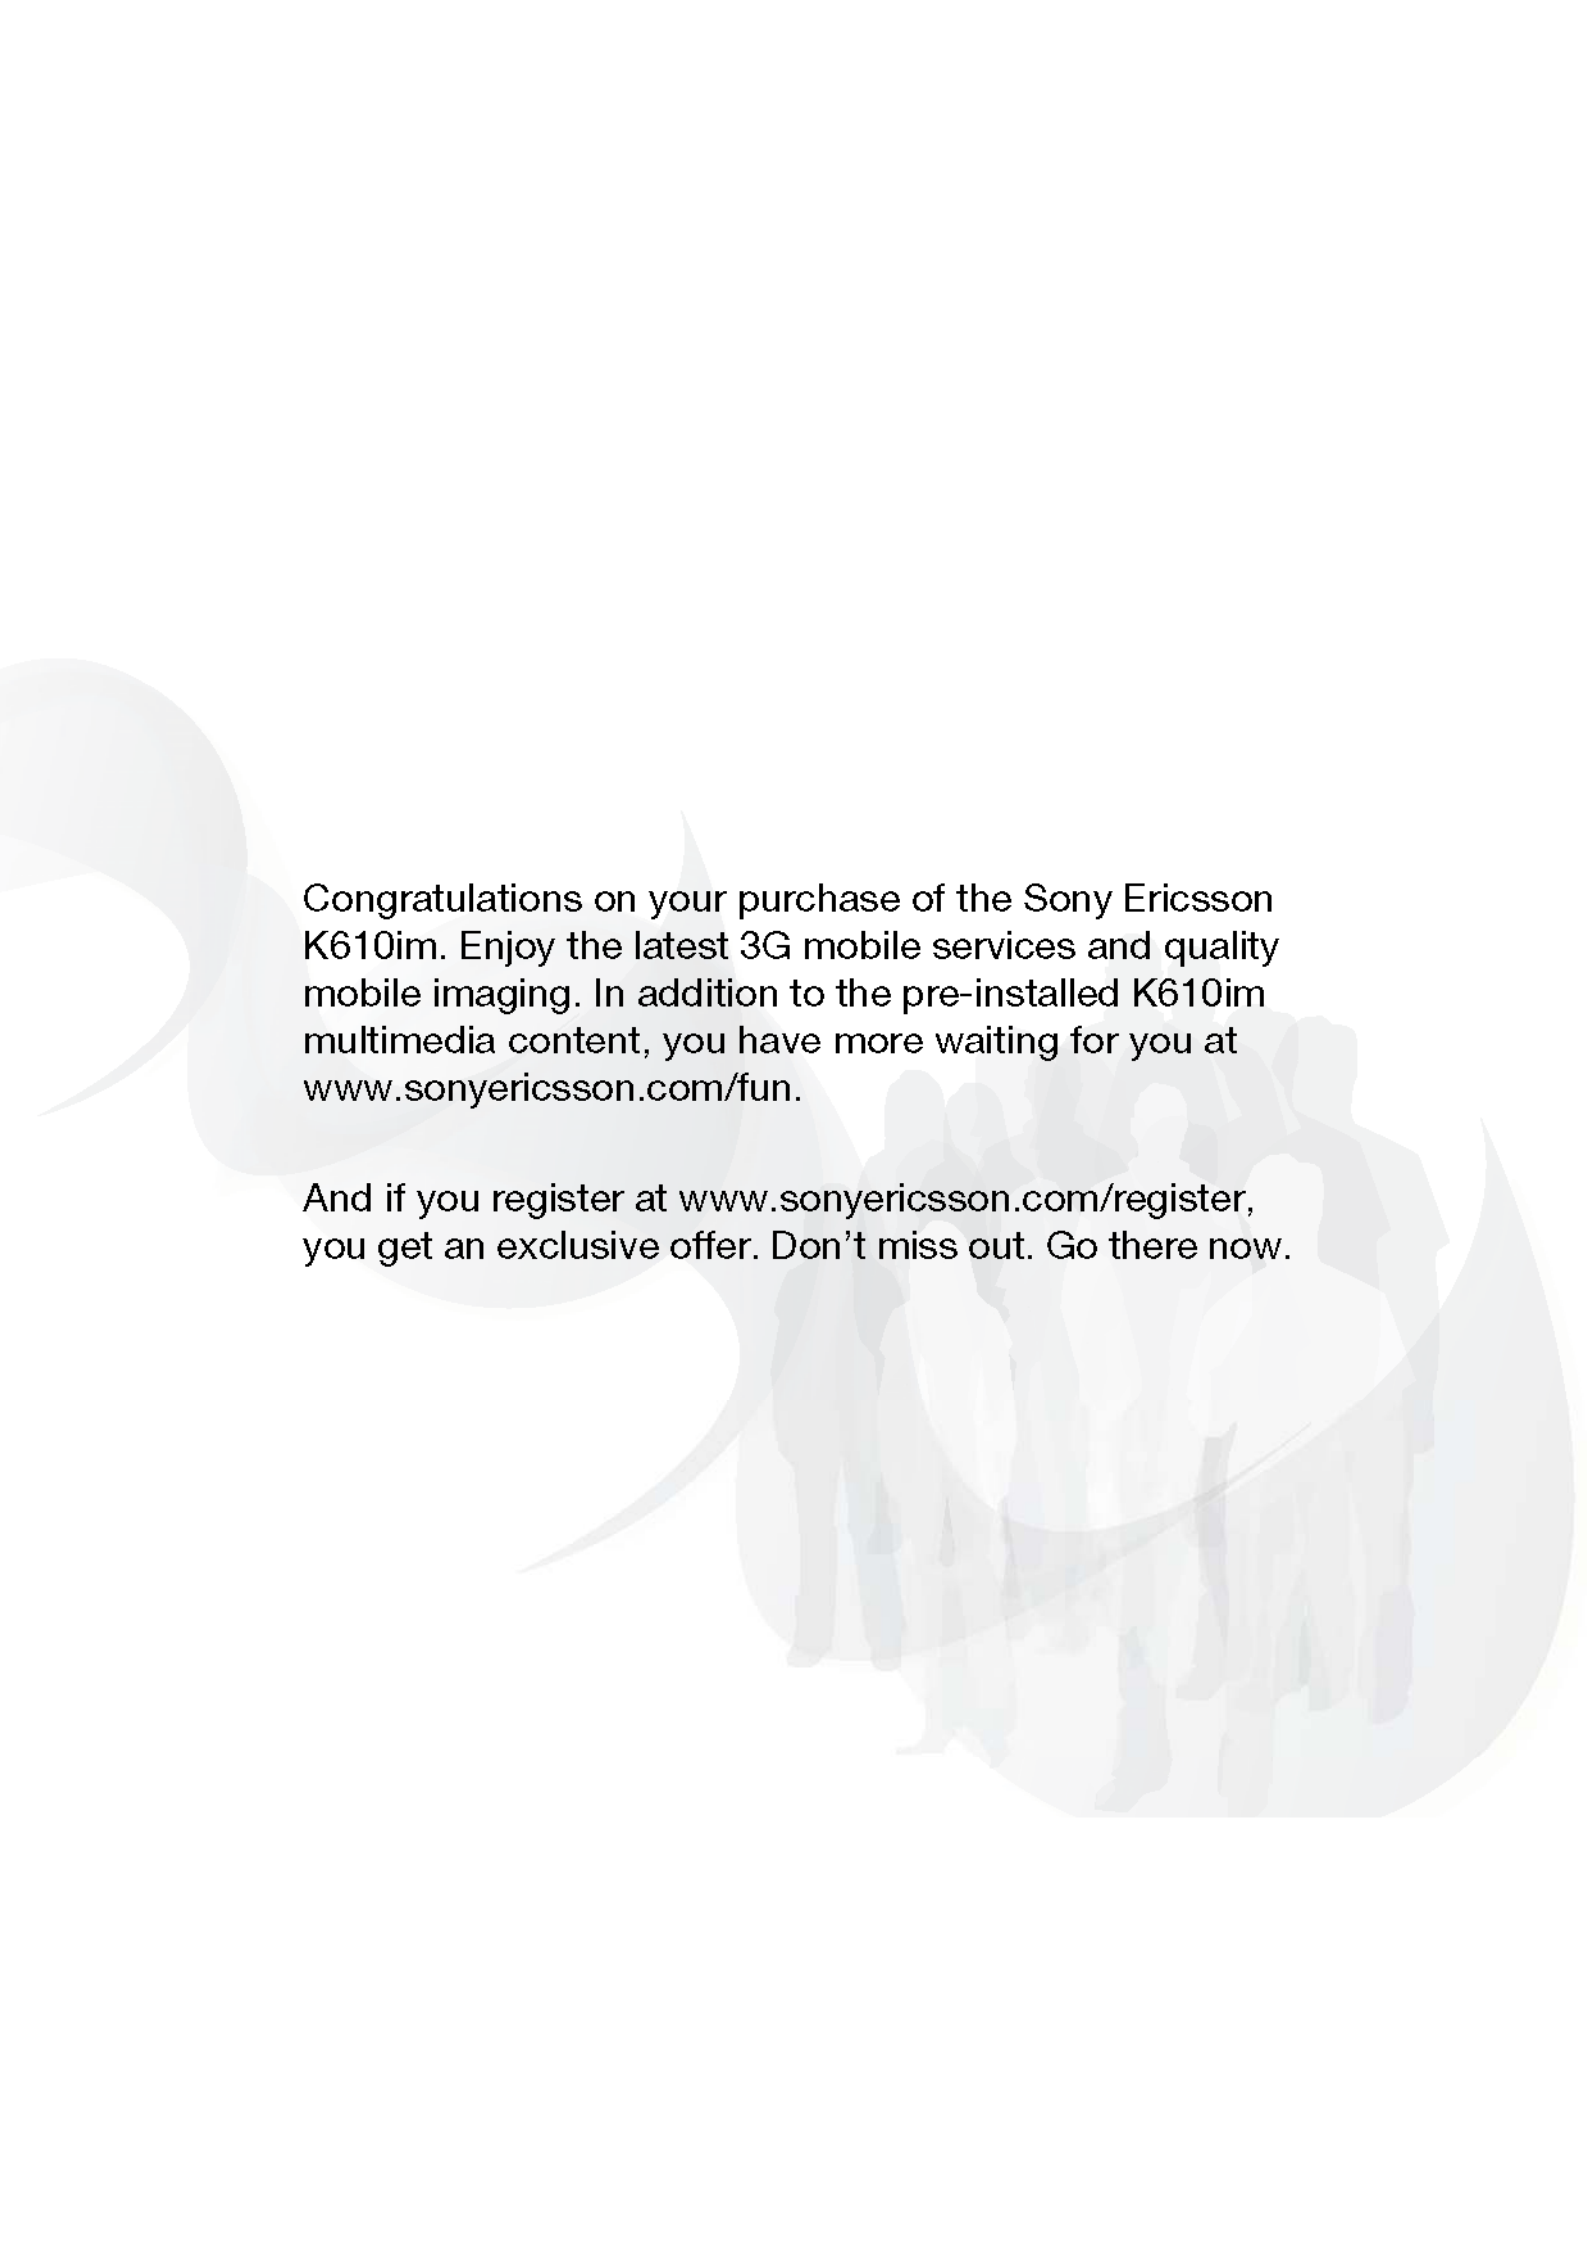

Congratulations on your purchase of the Sony Ericsson K610im. Enjoy the latest 3G mobile services and quality mobile imaging. In addition to the pre-installed K610im multimedia content, you have more waiting for you at www.sonyericsson.com/fun.

And if you register at www.sonyericsson.com/register, you get an exclusive offer. Don't miss out. Go there now.

Added dimensions – Accessories from Sony Ericsson

Flash MXE-60

Make your phone a true competitor to a digital camera.



Bluetooth™ Headset HBH-IV835

Stylish discretion with excellent sound.



Bluetooth™ All-round Handsfree HCB-100

Easy-installed handsfree - in the car, in your office or at home.



The full range of accessories may not be available in every market.

Contents

Getting started 4

SIM card, battery, turning on, help, calls, i-mode™ activity menu, PC Suite software, camera.

Getting to know the phone 8

Keys, menus, navigation, entering letters, file manager, memory card.

Calling 16

Calls, video calls, contacts, call list, voice control, groups, business cards.

Messaging 24

Text messaging, picture messaging (iMMS), iMail.

Imaging 28

Camera, video, pictures.

Entertainment 30

Music and Video player, ringtones and melodies.

Connectivity 31

Internet, i-mode™, synchronizing, Bluetooth™ technology, USB cable.

More features 36

Alarm clock, calendar.

Important information 38

Index 47

www.sonyericsson.com/support

At Sony Ericsson Product Support there is more information and help to get the most out of your product:

User guide with additional information, troubleshooting, tips and tricks, software.

Sony Ericsson

UMTS 2100 GSM 900/1800/1900

This user guide is published by Sony Ericsson Mobile Communications AB, without any warranty. Improvements and changes to this user guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this user guide. All rights reserved.

©Sony Ericsson Mobile Communications AB, 2006

Publication number: EN/LZT 108 8257 P1C

Please note:

Some of the services in this user guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Guidelines for safe and efficient use* and the *Limited warranty* chapters before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your

improper use of additional content or other third party content.

i-mode and the i-mode logo and DoJa are trademarks or registered trademarks of NTT DoCoMo, Inc. in Japan and other countries.

Bluetooth™ is a trademark or registered trademark of Bluetooth SIG Inc.

MusicDJ, PhotoDJ and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

Memory Stick Micro™ and M2™ are trademarks or registered trademarks of Sony Corporation.

Real is a trademark or a registered trademark of RealNetworks, Inc. RealPlayer® for Mobile is included under license from RealNetworks, Inc. Copyright 1995-2004, RealNetworks, Inc. All rights reserved.

Adobe™ Photoshop™ Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated.

Microsoft, Windows and PowerPoint are either registered trademarks or trademarks of Microsoft Corporation in the U.S. and other countries.

Mac OS is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

End-user license agreement for Sun™ Java™ ME Platform.

- 1 Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained

by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

- 2 Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders.
- 3 Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Part of the software in this product is copyright © SyncML initiative Ltd. (1999-2002). All rights reserved.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

All illustrations are for illustration only and may not accurately depict the actual phone.

Instruction symbols

The following appear in the User guide:



Note



A service or function is network- or subscription-dependent. Contact your network operator for details.



See also page...



Use a selection or navigation key to scroll and select **12** *Navigation*.



Press the navigation key centre.



Press the upper part of the navigation key.



Press the lower part of the navigation key.



Press the left part of the navigation key.



 
Press the right part of the navigation key.

Getting started

SIM card, battery, turning on, help, calls, i-mode™ activity menu, PC Suite software, camera.


SIM card and battery

To insert SIM card and battery

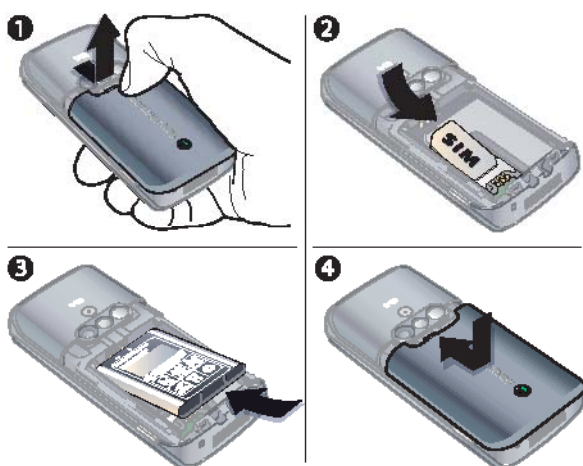

- 1 Remove the battery cover by pressing and sliding it as shown in the picture.
- 2 Slide the SIM card into its holder with the contacts facing down.
- 3 Insert the battery with the label side up and the connectors facing each other.
- 4 Slide the battery cover into place.

 To charge the battery

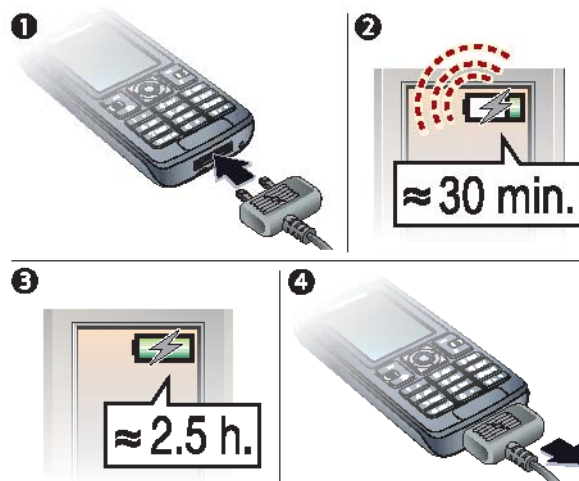

- 1 Connect the charger plug to the phone with the symbol facing upwards.
- 2 It may take up to 30 minutes before the battery icon appears.
- 3 Wait approximately 2.5 hours or until the battery icon indicates a full charge. Press a key to activate the screen.
- 4 Pull out the charger plug.

Turning on your phone

Make sure the phone is charged and a SIM card inserted before turning the phone on. After turning on, use the setup wizard to quickly and easily prepare for use.

To turn on the phone



- 1 Press and hold **I**. The first start-up may take a few minutes.
- 2 Select to use the phone in:
 - **Normal** – full functionality or
 - **Flight mode** – limited functionality with network and Bluetooth™ transceivers off.
- 3 Enter your SIM card PIN, if requested.
- 4 At first start-up, select the language for your phone menus.
- 5 ► **Yes** for the setup wizard to help you.
- 6 Follow instructions to complete setup.



You may be asked to register your phone at Sony Ericsson. If you accept to register your phone, no personal data, such as your phone number, will be transferred to or processed by Sony Ericsson.

Standby

After you have turned the phone on and entered your PIN, the name of the network operator will appear on the display. This is called standby mode.

Make a call

The phone must be in normal mode (not flight mode).

To make a call

- 1 Enter a phone number (with international prefix and area code if applicable).
- 2 ► **Call** to make a voice call or ► **More** ► **Make video call** to make a video call.
- 3 ► **More** for options during the call.
- 4 ► **End call** to end the call.

Help in your phone

Help and information is available in your phone at any time.

To view tips and tricks

► **Settings** ► the **General** tab ► **Setup wizard** ► **Tips and tricks**.

To view information about functions

Scroll to a function ► **More** ► **Info**, if available.

To view the phone demonstration

► **Entertainment** ► **Demo tour**.

i-mode™ activity menu

You can open the i-mode™ activity menu almost anywhere in the phone to view and handle new events, and to access i-mode, applications running in the background and shortcuts.

To open and close the i-mode activity menu

Press .

i-mode activity menu tabs

- **i-mode** – access to Internet, for example, via i-Menu or your bookmarks. When you select a bookmark and the browser opens, other programs are closed or minimized.
- **New events** – when you have missed a call or received a new message, the New events tab appears. Press  to dismiss an event. New events can also be set to appear as pop-up text instead, ► **Settings** ► the **General** tab ► **New events** ► **Pop-up**.
- **Running apps** – applications that are running in the background. Select an application to return to it or press  to end it.

- **My shortcuts** – add, delete and change the order of shortcuts. When you select a shortcut and the application opens, other programs are closed or minimized.

PC Suite software

Enhance the experience of your phone by installing the PC Suite software on your computer. This allows you to, for example, synchronize your phone calendar with a computer calendar.

 
To install the PC Suite software

- 1 Turn on your computer and insert the CD that came with your phone into the CD drive of your computer. The CD starts automatically and the installation window opens.
- 2 **Computer:** Select a language and click **OK**.
- 3 **Computer:** Click *Install* in the PC Suite section and follow the instructions on the screen. When the installation is complete, the PC Suite icon appears on the desktop of your computer.



For the latest version of PC Suite, visit www.sonyericsson.com/support.

Take pictures or record video clips

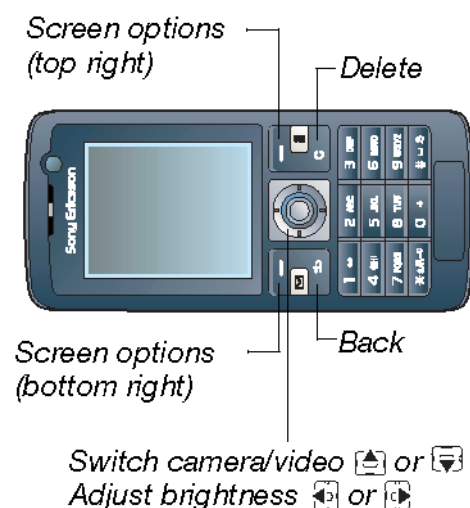

To take a picture or record video

- 1 From standby, press and hold to activate the camera.

- 2 Use to switch between camera and video recorder.

- 3 **Camera:** Press to take a picture.

Video: Press to start. Press to stop.

Pictures and video clips are saved in File manager ► Camera album.

- 4 Press to return to the viewfinder. Press and hold to end.



Play music and videos

To play music and videos

- 1 ► Music player or ► Entertainment ► Video player. A player browser opens.
- 2 Browse for music and video clips.
- 3 ► Open highlight a title ► Play.

Games and applications in standby

You can set games and applications to appear in standby.

 
To set games and applications to standby

- 1 ► Games & apps and select an application or a game.
- 2 ► More ► Set to standby.

Getting to know the phone

Keys, menus, navigation, entering letters, file manager, memory card.

Phone overview

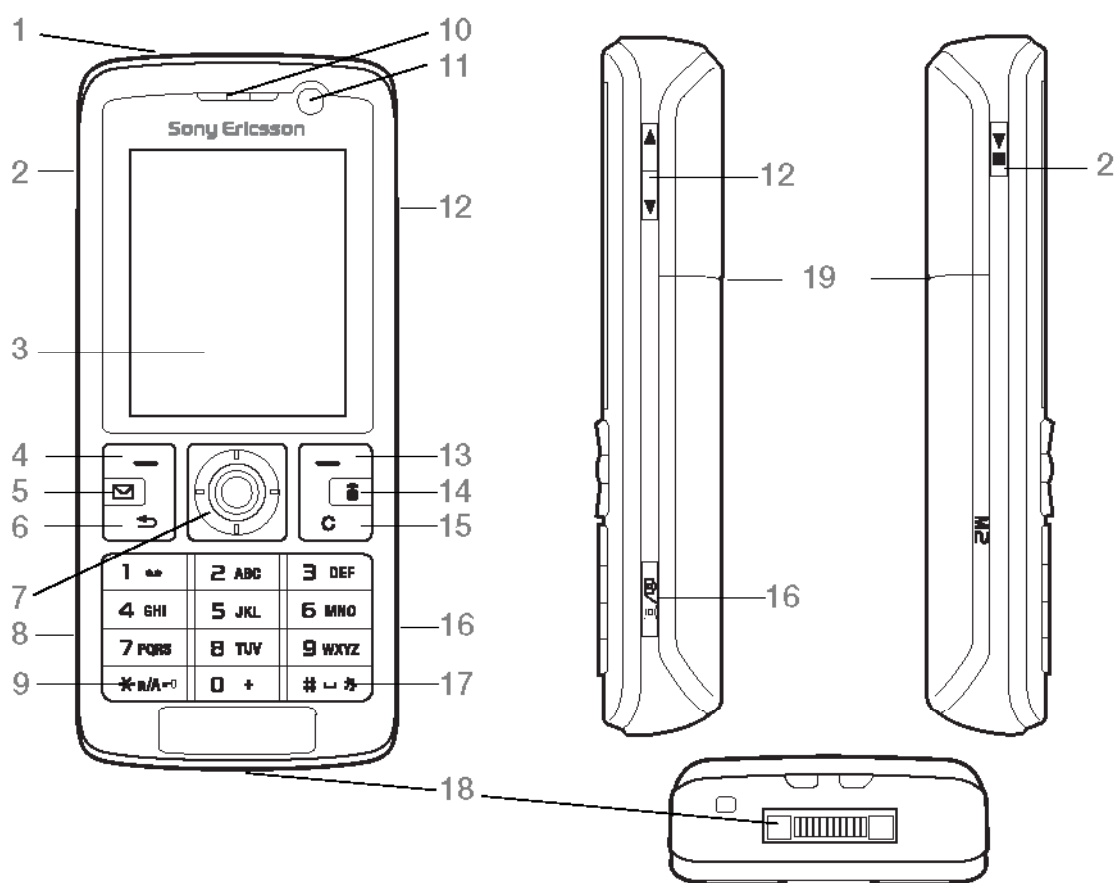

 Some icons on keys may differ.

- 1  Power on/off button
- 2  Play/stop button
- 3 Screen
- 4  Selection key
- 5  Messaging key
- 6  Back key
- 7 Navigation key/Music player control
- 8 Memory Stick Micro™ (M2™) slot (under the cover)
- 9  Keylock key
- 10 Ear speaker
- 11 Video call camera
- 12  Volume, camera digital zoom buttons
- 13  Selection key
- 14  i-mode™ key
- 15  Clear key
- 16  Camera button
- 17  Silent key
- 18 Connector for charger, handsfree and USB cable
- 19 Camera lens

For more information ➡ *12 Navigation*

Menu overview



Games & apps



i-mode

- i-Menu*
- Bookmarks
- Saved pages
- Enter Web addr.
- Last Web addr.
- Settings



Entertainment

- Online services*
- Video player
- VideoDJ™
- PhotoDJ™
- MusicDJ™
- Remote control
- Record sound
- Demo tour



Camera



Contacts

- New contact



Music player

- Now playing
- Artists
- Tracks
- Playlists



File manager^{*/**}

- Camera album
- Music
- Pictures
- Videos
- Themes
- Web pages
- Games/Apps
- Other



Messaging

- Write new
- Inbox
- Drafts
- Outbox
- Sent messages
- Check new
- Saved messages
- Call voicemail
- Templates
- Settings



Video call



Calls**



All



Answered



Dialled



Missed



Organizer

Alarms
 Calendar
 Tasks
 Notes
 Synchronization
 Timer
 Stopwatch
 Calculator
 Code memo



Settings**



General

Profiles

Time & date

Language

Voice control

New events

Shortcuts

Flight mode

Security

Setup wizard

Phone status

Master reset



Sounds & alerts

Ring volume

Ringtone

Silent mode

Increasing ring

Vibrating alert

Message alert

Key sound



Display

Wallpaper

Standby app.

Themes

Start-up screen

Screen saver

Clock size

Brightness

Sleep mode clock

Edit line names*



Calls

Divert calls

Switch to line 2*

Manage calls

Time & cost*

Show/hide my no.

Handsfree



Connectivity*

Bluetooth

USB

OBEX authent.

Synchronization

Device mgmt.

Mobile networks

Data comm.

Internet settings

Streaming settings

 
Accessories

* Some menus are operator-, network- and subscription-dependent.

** Use the navigation key to move across tabs in submenus. For more information ➡ 12 Navigation.

Navigation

The main menus are shown as icons. Some submenus include tabs. Scroll to a tab by pressing the left or right part of the navigation key.

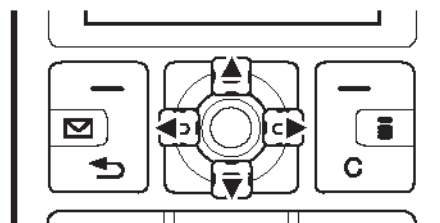

Key

	Go to the main menus or select highlighted items.
	Move through the menus and tabs.
	Move through the menus and tabs.
	Move through the menus and tabs.
	Move through the menus and tabs.
	Select options shown above these keys on the screen.
	Go back one level in the menus. Press and hold to return to standby or to end a function.
	Delete items, such as pictures, sounds and contacts. During a call, press and hold to mute the microphone.
	Press to go to the Messaging menu. Press and hold to activate your standby game or application (if set).
	Press to open the i-mode tab in the i-mode™ activity menu ➡ 6 i-mode™ activity menu . Press and hold to go to Games & apps .
	Open or minimize the Music player .
	Press and hold to take a picture or record a video clip.
	Press and hold to call your voicemail service (if set).

 - 	Press and hold any of these keys to reach a contact beginning with a specific letter.
 - 	Press a number key and then ► Call to speed dial.
	View a shortcut guide when using the camera.
	Press and then ► Lock keys or Unlock to lock or unlock the phone keys.
	Turn off the ringtone when receiving a call. Press and hold to set the phone to silent. The alarm signals even if the phone is set to silent.
	View status information in standby. Increase the volume during a call, or when using the Music player . Zoom out when using the camera or viewing pictures. Press and hold to go back one music track. Press twice to reject a call.
	Decrease the volume during a call, or when using the Music player . Zoom in when using the camera or viewing pictures. Press and hold to go forward one music track.
► Info	Find more information, explanations or tips about selected features, menus or functions available in your phone ► <i>5 Help in your phone.</i>
► More	Enter a list of options. There are different alternatives in the list of options depending on where you are in the menus.

Entering letters

Enter letters in one of the following ways (text input methods), for example, when writing messages:

- Multitap text input
- T9™ Text Input

To change the text input method

Before, or when entering letters, press and hold  to change the method.

To change the writing language

Before, or when entering letters, press and hold  and select another writing language.

Options when entering letters

► **More** for options when writing a message.

To enter letters using multitap input

- Press  -  repeatedly until the desired character appears.
- Press  to shift between capital and lower-case letters.
- Press and hold  -  to enter numbers.
- Press  to delete letters or numbers.
- Press  for the most common punctuation marks.
- Press  to add a space.

T9™ Text Input

The T9™ Text Input method uses a built-in dictionary to recognize the most commonly used word for each sequence of key presses. This way, you press each key only once, even if

the letter you want is not the first letter on the key.

To enter letters using T9 Text Input

- 1 To enter text, you have to be in a function where text input is possible, for example, press  and select ► **Write new** ► **Text message**.
- 2 For example, to write the word "Jane", press , , , .
- 3 If the word shown is the one you want, press  to accept and add a space. To accept a word without adding a space, press . If the word shown is not the one you want, press  or  repeatedly to view alternative words. Accept a word and add a space by pressing .
- 4 Continue writing the message. To enter a punctuation mark, press  and then  or  repeatedly, press  to accept and add a space.

To add words to the T9 Text Input dictionary

- 1 When entering letters ► **More** ► **Spell word**.
- 2 Edit the word by using multitap input. Use  and  to move the cursor between the letters. To delete a character, press . To delete the entire word, press and hold .

When you have edited the word ► **Insert**. The word is added to the T9 Text Input dictionary. Next time you enter this word using T9 Text Input, it appears in alternative words.

Next word prediction

When writing a message, you can use T9 Text Input to predict the next word, if previously used in a sentence.

To turn next word prediction on/off

When entering letters ► **More** ► **Writing options** ► **Nxt word pred..**

To use next word prediction

When entering letters, press  to accept or continue.

File manager

Use the file manager to handle items such as pictures, videos, music, themes, Web pages, games and applications saved in the phone memory or on the Memory Stick Micro™ (M2™) memory card. (Games and applications can be saved in the phone memory only).

You can also move and copy files between a computer and the memory card.

Create subfolders to move or copy files to. Unrecognized files are saved in the **Other** folder. When handling files, you can select several or all files in a folder at the same time for all items except **Games/Apps**.

Memory status

If all available memory is full, you cannot save any files until content is removed. Check the memory status for your phone and memory card by highlighting a folder ► **More** ► **Memory status**.

File manager menu tabs

The file manager is divided into three tabs, and icons are included to indicate where the files are saved.

- **All files** - all content in the phone memory and on the memory card.
- **On Memory Stick** - all content on the memory card.
- **In phone** - all content in the phone memory.

File information

View file information by highlighting it ► **More** ► **Information**.

To use a file from the file manager

- 1 ► **File manager** and open a folder.
- 2 Scroll to a file ► **More**.

To move or copy files to a computer
➡ 34 Transferring files using the USB cable.

To create a subfolder

- 1 ▶ File manager and open a folder.
- 2 ▶ More ▶ New folder and enter a name for the folder.
- 3 ▶ OK to save the folder.

To select several files

- 1 ▶ File manager and open a folder.
- 2 ▶ More ▶ Mark ▶ Mark several.
- 3 Scroll to select files ▶ Mark or Unmark.

To select all files in a folder

▶ File manager and open a folder ▶ More ▶ Mark ▶ Mark all.

To delete a file or a subfolder from the file manager

- 1 ▶ File manager and open a folder.
- 2 Scroll to a file ▶ More ▶ Delete.

Calling

Calls, video calls, contacts, call list, voice control, groups, business cards.

Making and receiving calls

Before you can make or receive any calls, you must turn on your phone and be within range of a network. ➡ 5 *Turning on your phone*. To make a video call ➡ 18 *Video call*.

Networks

When you turn on the phone, it automatically selects your home network if this is within range. If it is not within range, you may use another network, provided your network operator has an agreement that allows you to do so. This is called roaming.

Select the network to use, or you can add a network to your preferred networks. You can also change the order in which networks are selected during an automatic search.

To view available network options

▶ Settings and use  or  to scroll to the Connectivity tab ▶ Mobile networks.

To make a call

- 1 Enter a phone number (with international country code and area code, if applicable).
- 2 ► **Call** to make a voice call or ► **More** to view options, such as **Make video call** ► 18 **Video call**.
- 3 ► **End call** to end the call.

 You can call numbers from your contacts and call list ► 19 **Contacts**, and ► 22 **Call list**.

To make international calls

- 1 Press **[+]** until a + sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number. ► **Call** to make a voice call, or ► **More** ► **Make video call** to make a video call.

To re-dial a number

If a call connection fails and **Retry?** appears ► **Yes**.

 Do not hold the phone to your ear when waiting. When the call connects, the phone gives a loud signal.

To answer or reject a call

► **Answer** or ► **Busy**.

To turn off the microphone

- 1 Press and hold **[C]**.

- 2 To resume the conversation press and hold **[C]** again.

To turn the loudspeaker on or off during a voice call

► **More** ► **Turn on speaker** or **Turn off speaker**.

 Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing.

To change the ear speaker volume

Press **[▲]** to increase or **[▼]** to decrease the ear speaker volume during a call.

Missed calls

When the i-mode™ **Activity menu** is set to default, missed calls appear in the **New events** tab in standby. If **Pop-up** is set to default **Missed calls:** appears in standby ► 6 **i-mode™ activity menu**.

To check missed calls from standby

- If i-mode **Activity menu** is set to default, press **[F]** and use **[←]** or **[→]** to scroll to the **New events** tab. Scroll **[▲]** or **[▼]** to select a number and ► **Call** to call.

- If **Pop-up** is set to default, ► **Calls** and use  or  to scroll to the **Missed** tab. Scroll  or  to select a number and ► **Call** to call.

Emergency calls

Your phone supports international emergency numbers, for example, 112, 911. These numbers can normally be used to make emergency calls in any country, with or without a SIM card inserted, if a 3G (UMTS) or GSM network is within range.

 *In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.*

To make an emergency call

Enter 112 (the international emergency number) ► **Call**.

To view your local emergency numbers

► **Contacts** ► **More** ► **Options** ► **Special numbers** ► **Emergency nos..**

Video call

See a person on screen during calls.

Before you start

To make a video call, both you and the person you are calling need a subscription that supports the 3G (UMTS) service, and you need to be within range of a 3G (UMTS) network. 3G (UMTS) service is available when the 3G icon appears in the status bar.

Video call demo mode

You can use most video call functions without making a call, for example, to prepare a camera view before calling.

► **Video call**.

To make a video call

When 3G (UMTS) service is available, you can make a video call in one of the following ways:

- Enter a phone number (international prefix and area code if applicable) ► **More** ► **Make video call**.
- **Contacts** and select the contact to call. Use  or  to select a number ► **More** ► **Make video call**.
- **Video call** ► **Call....** ► **Contacts** to retrieve a phone number ► **Call** or enter a phone number ► **Call**.

To zoom the outgoing video in or out

Press  to zoom in the outgoing video and press  to zoom out.

To accept an incoming video call

- **Answer.**

To end a video call

- **End call.**

Video call options

- **More** for the following options:

- **Switch camera** – to switch between the main and video call cameras. Use the main camera to show a full image of your surroundings to the recipient.
- **Stop camera/Start camera** – turn the video camera off or on. An alternative picture is shown when off.
- **Save picture** – save the image shown in the large view, for example, the incoming caller image.
- **Camera** – options
 - **Brightness** – adjust the level for the outgoing picture.
 - **Turn on night m.** – use when lighting conditions are poor. This setting affects the outgoing video.
- **Sound** – options during a video call
 - **Turn off speaker/Turn on speaker** – incoming sound.
 - **Mute microphone/Unmute mic.** – microphone off or on.
 - **Transfer sound** – to and from Bluetooth handsfree equipment.
- **Layout** – options

- **Switch pictures** – show incoming or outgoing video in full size view.
- **Hide small pic./Show small pic..**
- **Mirror image** – show the outgoing camera picture.
- **Settings** – when answering
 - **Answer mode** – set the video call camera to on or off.
 - **Alternative pic.** – set a picture to show to the recipient when the camera is off.
 - **Audio options** – select if microphone, speaker phone, or both should be on or off.
 - **Video quality** – select picture quality for video calls. Changes do not take effect during an ongoing call.

Contacts

You can save your contact information in the phone memory or on a SIM card.

Choose which contact information – **Phone contacts** or **SIM contacts** – is shown as default.

For useful information and settings ► **Contacts** ► **More** ► **Options**.

Default contact

If **Phone contacts** is selected as default, your contacts show all the information saved in **Contacts**. If you

select **SIM contacts** as default, your contacts show information depending on the SIM card.

To select default contacts

- 1 ► **Contacts** ► **More** ► **Options** ► **Advanced** ► **Default contacts**.
- 2 ► **Phone contacts** or **SIM contacts**.

Phone contacts

Save contacts in the phone with names, phone numbers and personal information. You can also add pictures and ringtones to contacts. Use , ,  and  to scroll between tabs and their information fields.

To add a phone contact

- 1 If **Phone contacts** is selected as default, ► **Contacts** ► **New contact** ► **Add**.
- 2 Enter the name ► **OK**.
- 3 Enter the number ► **OK**.
- 4 Select a number option.
- 5 Scroll between tabs and select the fields to add information. To enter symbols such as @, ► **More** ► **Add symbol** and select a symbol ► **Insert**.
- 6 When all information is added ► **Save**.

To delete a contact

- 1 ► **Contacts** and scroll to a contact.
- 2 Press  and select **Yes**.

To delete all phone contacts

If **Phone contacts** is selected as default, ► **Contacts** ► **More** ► **Options** ► **Advanced** ► **Delete all contacts** ► **Yes** and ► **Yes**. Names and numbers on the SIM card are not deleted.

SIM contacts

Save contacts on your SIM card.

To add a SIM contact

- 1 If **SIM contacts** is selected as default, ► **Contacts** ► **New contact** ► **Add**.
- 2 Enter the name ► **OK**.
- 3 Enter the number ► **OK** and select a number option. Add more information, if available ► **Save**.

To automatically save names and phone numbers on the SIM card

► **Contacts** ► **More** ► **Options** ► **Advanced** ► **Auto save on SIM** and select **On**.

Memory status

The number of contacts you can save in the phone or on the SIM card depends on available memory.

To view memory status

► **Contacts** ► **More** ► **Options** ► **Advanced** ► **Memory status**.

Using contacts

Contacts can be used in many ways. Below you can see how to:

- call phone and SIM contacts.
- send phone contacts to another device.
- copy contacts to phone and SIM card.
- add a picture or a ringtone to a phone contact.
- edit contacts.
- synchronize your contacts.

To call a phone contact

- 1 ► **Contacts**. Scroll to, or enter the first letter or letters of the contact.
- 2 When the contact is highlighted press  or  to select a number ► **Call** to make a voice call, or ► **More** ► **Make video call** to make a video call.

To call a SIM contact

- If **SIM contacts** is default ► **Contacts** and when the contact is highlighted press  or  to select a number. ► **Call** to make a voice call, or ► **More** ► **Make video call** to make a video call.
- If **Phone contacts** is set as default ► **Contacts** ► **More** ► **Options** ► **SIM contacts** and select the contact ► **Call** to make a voice call, or ► **More** ► **Make video call** to make a video call.

To send a contact

- **Contacts** and select a contact ► **More** ► **Send contact** and select a transfer method.

To send all contacts

- **Contacts** ► **More** ► **Options** ► **Advanced** ► **Send all contacts** and select a transfer method.

To copy names and numbers to the SIM card

- 1 ► **Contacts** ► **More** ► **Options** ► **Advanced** ► **Copy to SIM**.
- 2 Select one of the alternatives.



When copying all contacts from the phone to the SIM card, all existing SIM card information is replaced.

To copy names and numbers to phone contacts

- 1 ► **Contacts** ► **More** ► **Options** ► **Advanced** ► **Copy from SIM**.
- 2 Select one of the alternatives.

To add a picture, ringtone sound or video to a phone contact

- 1 ► **Contacts** and select the contact ► **More** ► **Edit contact**.
- 2 Select the relevant tab and then select **Picture** or **Ringtone** ► **Add**.

- 3 Select an option and an item ► **Save**.



If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones to contacts.

To edit a phone contact

- 1 ► **Contacts** and select a contact ► **More** ► **Edit contact**.
- 2 Scroll to the relevant tab and select the field to edit ► **Edit**.
- 3 Edit the information ► **Save**.

To edit a SIM contact

- 1 If SIM contacts is default ► **Contacts** and select the name and number to edit. If phone contacts is default ► **Contacts** ► **More** ► **Options** ► **SIM contacts** and select the name and number to edit.
- 2 ► **More** ► **Edit contact** and edit the name and number.

To select the sort order for contacts

► **Contacts** ► **More** ► **Options** ► **Advanced** ► **Sort order**.

Call list

Information about most recent calls.

To call a number from the call list

- 1 From standby, ► **Calls** and select a tab.

- 2 Scroll to the name or number to call ► **Call** to make a voice call, or ► **More** ► **Make video call** to make a video call.

To add a call list number to contacts

- 1 From standby, ► **Calls** and select a tab.
- 2 Scroll to the number to add ► **More** ► **Save number**.
- 3 ► **New contact** to create a new contact, or select an existing contact to add the number to.

To clear the call list

► **Calls** and select the **All** tab ► **More** ► **Delete all**.

Voice control

Manage calls with your voice by creating voice commands.

Before voice dialling

Activate the voice dialling function and record your voice commands. An icon appears next to a phone number that has a voice command.

To activate voice dialling and record names

- 1 ► **Settings** ► the **General** tab ► **Voice control** ► **Voice dialling** ► **Activate** ► **Yes** ► **New voice** and select a contact.

- 2 If the contact has more than one number, use  and  to view the numbers. Select the number to add the voice command to. Record a voice command such as "John mobile".
- 3 Instructions appear. Wait for the tone and say the command to record. The voice command is played back to you.
- 4 If the recording sounds OK ► **Yes**. If not ► **No** and repeat step 3.
To record another voice command for a contact ► **New voice** ► **Add** again and repeat steps 2-4 above.

Voice dialling

Start voice dialling from standby.

To make a call

- 1 From standby, press and hold one of the volume keys.
- 2 Wait for the tone and say a recorded name, for example "John mobile". The name is played back to you and the call is connected.

Groups

Create a group of numbers and iMail addresses to send messages to several recipients at the same time ►

24 *Messaging*.



If you send a text message to a group, you will be charged for each member.

To create a group of numbers and iMail addresses

- 1 ► **Contacts** ► **More** ► **Options** ► **Groups** ► **New group** ► **Add**.
- 2 Enter a name for the group ► **Continue**.
- 3 ► **New** ► **Add** to find and select a contact number or iMail address.
- 4 Repeat step 3 to add more numbers or iMail addresses. ► **Done**.

Business cards

Add your own business card as a contact.

To add your own business card

► **Contacts** ► **More** ► **Options** ► **My business card** and add information for your business card ► **Save**.

To send your business card

► **Contacts** ► **More** ► **Options** ► **My business card** ► **Send my card** and select a transfer method.

Messaging

Text messaging, picture messaging (iMMS), iMail.

Your phone supports various messaging services. Please contact your service provider about the services you can use, or for more information, visit www.sonyericsson.com/support.

Text messaging (SMS)

Text messages can contain simple pictures, sound effects, animations, and melodies. You can also create and use templates for your messages.

Before you start

The number to your service centre is supplied by your service provider and is usually set on the SIM card. If not, you can enter the number yourself.

To set a service centre number

- 1 Press  and select **Settings** ► **Text message** ► **Service centre**. If the service centre number is saved on the SIM card it is shown.
- 2 If there is no number shown ► **Edit** ► **New ServiceCentre** and enter the number, including the international “+” prefix and country/region code ► **Save**.

Sending text messages

For information about entering letters
► 13 Entering letters.

 *Some language-specific characters use more space. For some languages you can deactivate **National chars.** to save space.*

To write and send a text message

- 1 Press  and select **Write new** ► **Text message**
- 2 Write your message. (If you want to save the message for later in **Drafts**, press  ► **Save message**.)
- 3 ► **Continue** ► **Enter phone no.** to enter a number, or ► **Contacts look-up** to retrieve a number or a group from **Contacts**, or select from last used recipients ► **Send**.

To copy and paste text in a message

- 1 When writing your message ► **More** ► **Copy & paste**.
- 2 ► **Copy all** or ► **Mark & copy** and use the navigation key to scroll and mark text in your message.
- 3 ► **More** ► **Copy & paste** ► **Paste**.

To delete a message

- 1 Press  and select a folder.
- 2 Select the message to delete and press .

To set default text message options

Press  and select **Settings** ► **Text message**, then select the options to change.

Picture messaging (iMMS)

Picture messages can contain text, pictures, camera pictures, slides, sound recordings, video clips, signatures and attachments. You can send picture messages to a mobile phone or an iMail address.

Before you start

Both you and the recipient must have subscriptions that support picture messaging.

Picture message options

Select how to download your picture messages. You can also create a signature for your picture messages, and set how pictures should be resized.

To set picture message options

Press  and select **Settings** ► **iMMS**, then select the options to change.

To manually download new picture messages

When **Download options** is set to **Manual**, press  and select **Check new** to download new messages.

Sending picture messages



When writing and editing picture messages you can use the copy and paste functionality ► 24 To copy and paste text in a message.

To create and send a picture message

- 1 Press  and select **Write new** ► **iMMS**. Scroll  to use toolbar options. Scroll  or  to select an option. (If you want to save the message for later in **Drafts**, press  ► **Save message**.)
- 2 When ready to send ► **Continue**.
- 3 ► **Enter iMail addr.** or ► **Enter phone no.** or ► **Contacts look-up** to retrieve a number or group in **Contacts** or select from last used recipients.
- 4 ► **More** to add more recipients to the message or change the message subject.
- 5 ► **Send**.

Receiving picture messages

A message notification appears on the screen when you have a new picture

message to download, or the new picture message automatically appears in your inbox (depending on how you have selected to download your picture messages).

To read downloaded picture messages

Press  and select ► **Inbox**, then select a message ► **View**.



iMail

Read your iMail messages in your phone at any time.

Your iMail address is supplied by your network operator. Visit the Web site of your network operator if you want to change your iMail address.

iMail options

Select how to download your iMails and what attachments to allow. You can also create a signature for your iMails, and specify how the original message should be quoted in your replies.

To set iMail message options

Press  and select ► **Settings** ► **iMail settings**, then select the options to change.

To manually download new iMail messages

► 25 *To manually download new picture messages.*

Sending iMail messages



When writing and editing iMail messages you can use the copy and paste functionality ► 24 To copy and paste text in a message.

To write and send an iMail message

- 1 Press  and select **Write new** ► **iMail**.
- 2 ► **Add** to enter the recipient field. ► **Enter iMail addr.** to type an iMail address ► **OK**, or ► **Contacts look-up** to select a recipient from Contacts ► **Select**, or select an iMail address from last used recipients ► **Select**.
- 3 ► **Edit** to enter the recipient field (after one is added) to add more recipients. Select **To**, **Cc** or **Bcc** and select recipients to add. When you have selected recipients ► **Done**.
- 4 Press  to select the subject field, type an iMail subject ► **OK**. To edit the subject ► **Edit**.

- 5 Press  to select the text field, write your message ► OK. To edit the message ► Edit. (If you want to save the message for later in **Drafts**, press  ► Save message.)
- 6 Press  to select the attachment field. ► Add and choose the attachment type to add ► Select to select the attachment to add. To add more attachments ► Add.
- 7 ► Continue ► Send.

Receiving iMail messages

A message notification appears on the screen when you have a new iMail to download, or the new iMail automatically appears in your inbox (depending on how you have selected to download your iMail messages).

To read downloaded iMail messages

Press  and select ► Inbox, then select a message ► View.

Imaging

Camera, video, pictures.

Camera and video recorder

Take pictures and record video clips to save, view and send in messages ➡

7 Take pictures or record video clips.

Camera settings

When you are in the viewfinder ►

Settings for options to adjust and enhance your pictures and video clips before taking or recording them.

 *If you try to record with a strong light source such as direct sunlight or a lamp in the background, the screen may black out or the picture may be distorted.*

To use the zoom

Use volume buttons to zoom in and out.

To adjust brightness

Use the navigation key to increase or decrease brightness.

Camera and video options

When the camera or video is activated

► **Settings** for the following options:

- **Switch to video camera** to record a video clip or **Switch to still camera** to take a picture.
- **Shoot mode (camera):**
 - **Normal** – no frame.
 - **Panorama** – join several pictures into one.
 - **Frames** – add a frame to your picture.
 - **Burst** – take a rapid sequence of pictures.
- **Shoot mode (video):**
 - **For picture message**
 - **High quality video**
- **Picture size (camera)** – select from:
 - **2 MP** (1600x1200 pixels)
 - **1 MP** (1280x960)
 - **VGA** (640x480)
- **Turn on night mode** – adapt to poor lighting conditions.
- **Turn on self-timer (camera)** – take a picture a few seconds after pressing the camera button.
- **Effects** – select from:
 - **Off** – no effect.
 - **Black & white** – no colour.
 - **Negative** – reversed colours.
 - **Sepia** – brown tint.
- **White balance** – adjust colours to lighting conditions. Select from **Auto**, **Daylight**, **Cloudy**, **Fluorescent** or **Incandescent**.
- **Picture quality (camera):**

- **Normal**
- **Fine**
- **Turn off mic.** (video) – set microphone.
- **Shutter sound** (camera) – select different shutter sounds.
- **Turn on time and date** (camera) – add time and date to a picture to appear as red text in the lower right corner. View in 1:1 size or use zoom when viewing a picture to see the text.
- **Reset file number** – reset the file number counter.
- **Save to** – select to save to **Memory Stick** or **Phone memory**.

Camera shortcuts

When using the camera, you can also use keys as shortcuts to common options. Press  for a camera key guide.

Transferring pictures

Transfer to your computer

Using the USB cable, you can drag and drop camera pictures to a computer ➡ *34 Transferring files using the USB cable.*

To further enhance and organize camera pictures on a computer, Windows® application users can install Adobe™ Photoshop™ Album

Starter Edition, included on the CD with phone.

Pictures

View and use pictures.

To view and use pictures

- 1 ► **File manager** ► **Pictures**.
- 2 Select a picture ► **View** or ► **More** ► **Use as** and select an option.

To send a picture

► **File manager** ► **Pictures** and scroll to a picture. ► **More** ► **Send** and select a transfer method.



Some phones cannot receive large picture sizes.

To receive a picture

► **Settings** ► **Connectivity** and select a transfer method.

Entertainment

Music and Video player, ringtones and melodies.

Music and video player

Your phone supports, for example, the following file types: MP3, MP4, M4A, 3GPP, AMR, MIDI, iMelody, eMelody, WMA, WMV, WAV (16 kHz maximum sample rate) and Real®8. The phone also supports streamed files that are 3GPP compatible.

To play music and videos

- 1 ► **Music player** or ► **Entertainment** ► **Video player**. A player browser opens.
- 2 Browse for music by artist or track, or in playlists. You can also browse for video clips. Select a list ► **Open**.
- 3 Highlight a title ► **Play**.
The following options are available:
 - Press  to play or stop during playback.
 - Press  to stop the playback. Press again to resume playing.
 - Press  to go to the next music file.
 - Press  to go to the previous music file.
 - Press and hold  or  to fast forward or rewind when playing music files or video clips.

- Press **Play** to select a highlighted file.
- When in **Now playing**, press  to go to the music player browser.
- When playing music, ► **More** for options, for example, **Minimize** to use in the background.
- Press and hold  to exit.

Ringtones and melodies

You can exchange music, sounds and tracks, for example, using one of the available transfer methods.

 *You are not allowed to exchange some copyright-protected material. A copyright-protected file has a key symbol.*

To select a ringtone

► **Settings** ► the **Sounds & alerts** tab ► **Ringtone**.

To turn the ringtone on or off

Press and hold  from standby or ► **Settings** ► the **Sounds & alerts** tab for more options. All signals except the alarm signal are affected.

To set ringtone volume

- 1 ► **Settings** ► the **Sounds & alerts** tab ► **Ring volume** and press  or  to decrease or increase the volume.
- 2 ► **Save**.

To set the vibrating alert

► **Settings** ► the **Sounds & alerts** tab ► **Vibrating alert** and select an option.

Sounds and alerts options

From **Settings** ► the **Sounds & alerts** tab, you can also set:

- **Message alert** – select how to be notified of an incoming message.
- **Key sound** – select what sound to hear when you press the keys.

Connectivity

Internet, i-mode™, synchronizing, Bluetooth™ technology, USB cable.

Using Internet

Use **i-mode** to browse i-mode™ pages and other Web pages, and access online services, for example, news and banking.

To start browsing

Press  and select a service such as **i-Menu**, or **Enter address** to any Web page.

To view options

Press  and select **More**.

To stop browsing

► **More** ► **Exit browser**.



For more information contact your network operator.

Synchronizing

Synchronize phone contacts, appointments, tasks and notes via Bluetooth™ wireless technology, Internet services or the USB cable included with the phone.

Synchronization with a computer

Install synchronization software for your computer found in the Sony Ericsson PC Suite on the CD, included with the phone. The software includes help information. You can also visit www.sonyericsson.com/support to download the software or the document *Getting started guide for synchronization*.

Remote synchronization via Internet

Synchronize online via an Internet service.

Before you start

- Register a synchronization account online.
- Enter remote synchronization settings.

To enter remote synchronization settings

- 1 ► **Organizer** ► **Synchronization** ► **New account** ► **Yes** to create a new account.
- 2 Enter a name for the new account ► **Continue**.
- 3 Enter the following:
 - **Server address** – server URL.
 - **Username** – account username.
 - **Password** – account password.

- **Connection** – select an Internet profile.
 - **Applications** – mark applications to synchronize.
 - **App. settings** – select an application and enter a database name, and if required, username and password.
 - **Sync. interval** – set how often to synchronize.
 - **Remote initiation** – select to always accept, never accept or always ask when starting synchronization from a service.
 - **Remote security** – insert a server ID and a server password.
- 4 ► **Save** to save your new account.

To start remote synchronization

► **Organizer** ► **Synchronization** and select an account ► **Start**.

Bluetooth™ wireless technology

The Bluetooth™ function makes wireless connection to other Bluetooth devices possible.



We recommend a range within 10 metres, with no solid objects in between, for Bluetooth communication.

Before you start

- Turn on the Bluetooth function to communicate with other devices.
- Add Bluetooth devices to your phone to communicate with.



Please check if local laws or regulations restrict the use of Bluetooth wireless technology. If Bluetooth wireless technology is not allowed, you must ensure that the Bluetooth function is turned off. The maximum allowed Bluetooth radio output power in the phone is automatically adjusted according to possible local restrictions. This means range may vary.

To turn the Bluetooth function on

► **Settings** ► the **Connectivity** tab ► **Bluetooth** ► **Turn on**.

Adding devices to your phone

Enter a passcode to set up a secure link between your phone and the device. Enter the same passcode on the device when prompted. A device with no user interface, such as a handsfree, will have a predefined passcode. Consult the device User guide for more information.



Make sure that the device you want to add has the Bluetooth function activated and is visible.

To add a device to your phone

- 1 ► **Settings** ► the **Connectivity** tab ► **Bluetooth** ► **My devices** ► **New device** to search for available devices. Make sure the other device is visible.
- 2 Select a device from the list.
- 3 Enter a passcode, if required.

To allow connection or edit your device list

- 1 ► **Settings** ► the **Connectivity** tab ► **Bluetooth** ► **My devices** and select a device from the list.
- 2 ► **More** to view a list of options.

To add a Bluetooth handsfree

- 1 ► **Settings** ► the **Connectivity** tab ► **Bluetooth** ► **Handsfree**.
- 2 ► **Yes** if you are adding a Bluetooth handsfree for the first time or ► **My handsfree** ► **New handsfree** ► **Add** if you are adding another Bluetooth handsfree. Ensure that your handsfree is in the correct mode. Consult the device User guide for more information.

Phone name

Enter a name for your phone to be shown as when other devices find it.

To enter a phone name

► **Settings** ► the **Connectivity** tab ► **Bluetooth** ► **Phone name**.

Visibility

Choose to make your phone visible to other Bluetooth devices or not. If your phone is set to hide, only devices in ► **Settings** ► the **Connectivity** tab ► **Bluetooth** ► **My devices** are able to find your phone via Bluetooth wireless technology.

To show or hide your phone

► **Settings** ► the **Connectivity** tab ► **Bluetooth** ► **Visibility** ► **Show phone** or **Hide phone**.

Transferring files using the USB cable

Connect your phone to a computer, via the USB cable, to use your phone in one of the following: **File transfer** or **Phone mode**.

File transfer

Drag and drop files between your memory card and computer in Microsoft Windows Explorer.

 
Use Sony Disc2Phone (music transfer) or Adobe™ Photoshop™ Album Starter Edition (picture transfer/

storage). These applications are found on the CD that come with the phone or at www.sonyericsson.com/support, and can only be used with file transfer mode.

 *Only use the USB cable that comes with the phone, and connect the USB cable directly to your computer. Do not remove the USB cable from the phone or computer during file transfer as this may corrupt the memory card.*

To use file transfer mode

- 1 Connect the USB cable to the phone and the computer.

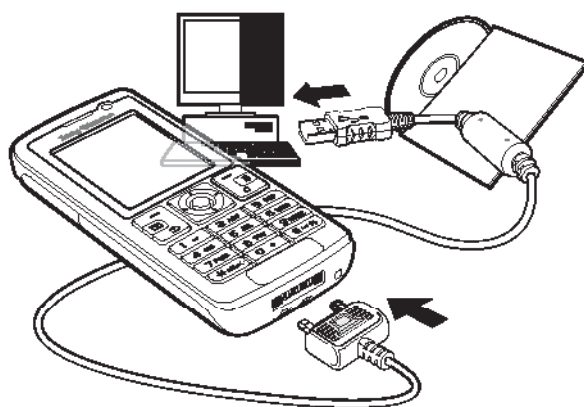

- 2 **Phone:** Select **File transfer** or ► **Settings** ► the **Connectivity** tab ► **USB** ► **USB connection** ► **File transfer**. The phone shuts down.

- 3 Wait until your memory card appears as an external disk in Windows Explorer. You can use:
 - Windows Explorer to drag and drop files between your memory card and computer.
 - Sony Disc2Phone to transfer music to your memory card.
 - Adobe™ Photoshop™ Album Starter Edition, to transfer and organize your pictures on your computer.

To disconnect the USB cable safely

- 1 When using file transfer mode, right-click the removable disk icon in Windows Explorer and select Eject.
- 2 Remove the USB cable from your phone.

Phone mode

Synchronize contacts and calendar, transfer files, use the phone as modem and more from your computer. Applications supported in phone mode include: Synchronization, File manager and Mobile Networking Wizard. For other applications, use the file transfer mode.

You need to install and use Sony Ericsson PC Suite, included on the CD

that came with the phone or found at www.sonyericsson.com/support.



Your computer needs to have one of the following operating systems to be able to use this feature: Windows 2000 with SP3/SP4, Windows XP (Pro and Home) with SP1/SP2. USB drivers are installed automatically with the PC Suite software.

To use phone mode

- 1 **Computer:** Install the Sony Ericsson PC Suite from the CD that came with your phone.
- 2 **Computer:** Start PC Suite from Start/Programs/Sony Ericsson/PC Suite.
- 3 Connect the USB cable to the phone and the computer.
- 4 **Phone:** Select **Phone mode** or ► **Settings** ► the **Connectivity** tab ► **USB** ► **USB connection** ► **Phone mode**.
- 5 **Computer:** Wait while Windows installs the required drivers.
- 6 **Computer:** When PC Suite has found your phone you are notified. All applications that you can use with your connected phone are found in the Sony Ericsson PC Suite.

More features

Alarm clock, calendar.

Alarms

Set an alarm for a specific time or specific days to recur on.

To use alarms

- 1 ► **Organizer ► Alarms** and select an alarm to set ► **Edit**.
- 2 **Time:** ► **Edit** and set a time ► **OK**.
Select more options, if required:
 - **Recurrent:** ► **Edit** and set a day or days ► **Mark** ► **Done**.
 - **Alarm signal:** ► **Edit** and select a sound.
 - Press  to edit text, pictures and the silent mode for alarms.
- 3 ► **Save**.

To turn an alarm signal off when it sounds

Press any key. If you do not want to repeat the alarm ► **Turn off**.

To cancel an alarm

► **Organizer ► Alarms** and select an alarm, ► **Turn off**.

Calendar

You can use the calendar to keep track of important meetings. The

calendar can be synchronized with a computer calendar or with a calendar on the Web ► **31 Synchronizing**.

Appointments

Add new appointments or use existing appointments as templates.

To add a new appointment

- 1 ► **Organizer ► Calendar** and select a date ► **Select ► New appointm.** ► **Add**.
- 2 Select from the following options and confirm each entry, if required:
 - **General** tab - subject, start time, duration, reminder, start date.
 - **Details** tab - location, description, all day, recurrence.
- 3 ► **Save**.

To view an appointment

- 1 ► **Organizer ► Calendar** and select a day (appointment days marked with frames).
- 2 Select an appointment ► **View**.

To view a calendar week

► **Organizer ► Calendar ► More** ► **View week**.

To set when reminders should sound

- 1 ► **Organizer ► Calendar ► More** ► **Advanced** ► **Reminders**.

- 2 ► **Always** for a reminder to sound even when the phone is turned off or set to silent.

Navigating in your calendar

Use the navigation key to move between days or weeks. In the monthly and weekly views, you can also use the keypad as follows.

	C Today's date
1 Back a week	3 Next week
4 Back a month	6 Next month
7 Back a year	9 Next year

Calendar settings

► **Organizer** ► **Calendar** ► **More** to select an option:

- **View week** – view the week's appointments.
- **New appointm.** – add a new appointment.
- **Change date** – go to another date in the calendar.
- **Advanced** – find an appointment, set reminders or select a start day for the week.
- **Delete** – delete old or all appointments.
- **Help** – for more information.

Exchanging appointments

Exchange appointments using a transfer method. You can also synchronize appointments with a computer ► **31 Synchronizing**.

To send an appointment

Select an appointment in the list for a certain day ► **More** ► **Send** and select a transfer method.

Important information

Sony Ericsson Consumer Web site

On www.sonyericsson.com/support is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and support

From now on you will have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support
- A global network of Call Centers
- An extensive network of Sony Ericsson service partners
- A warranty period. Learn more about the warranty conditions in this User guide

On www.sonyericsson.com, under the support section in the language of your choice, you will find

the latest support tools and information, such as software updates, Knowledge base, Phone setup and additional help when you require it.

For operator-specific services and features, please contact your network operator for more information.

You can also contact our Call Centers. Use the phone number for the nearest Call Center in the list below. If your country/region is not represented in the list, please contact your local dealer. (The phone numbers below were correct at the time of going to print. You can always find the latest updates on www.sonyericsson.com.)

In the unlikely event that your product needs service, please contact the dealer from whom it was purchased, or one of our service partners. Save your proof of purchase, you will need it if you need to claim warranty.

You will be charged for a call to one of our Call Centers according to national rates, including local taxes, unless the phone number is a toll-free number.

Country

Phone number

Australia	1-300 650 050
Argentina	800-333-7427
Austria	0810 200245
Belgium	02-7451611
Brazil	4001-0444
Canada	1-866-766-9374
Central Africa	+27 112589023
Chile	123-0020-0656
China	4008100000
Colombia	18009122135
Croatia	062 000 000
Czech Republic	844 550 055
Denmark	33 31 28 28
Finland	09-299 2000

Email address

questions.AU@support.sonyericsson.com
questions.AR@support.sonyericsson.com
questions.AT@support.sonyericsson.com
questions.BE@support.sonyericsson.com
questions.BR@support.sonyericsson.com
questions.CA@support.sonyericsson.com
questions.CF@support.sonyericsson.com
questions.CL@support.sonyericsson.com
questions.CN@support.sonyericsson.com
questions.CO@support.sonyericsson.com
questions.HR@support.sonyericsson.com
questions.CZ@support.sonyericsson.com
questions.DK@support.sonyericsson.com
questions.FI@support.sonyericsson.com

France	0 825 383 383	questions.FR@support.sonyericsson.com
Germany	0180 534 2020	questions.DE@support.sonyericsson.com
Greece	801-11-810-810	
	210-89 91 919 (from mobile phone)	questions.GR@support.sonyericsson.com
Hong Kong	8203 8863	questions.HK@support.sonyericsson.com
Hungary	+36 1 880 47 47	questions.HU@support.sonyericsson.com
India	1800 11 1800 (Toll free number)	
	39011111 (from mobile phone)	questions.IN@support.sonyericsson.com
Indonesia	021-2701388	questions.ID@support.sonyericsson.com
Ireland	1850 545 888	questions.IE@support.sonyericsson.com
Italy	06 48895206	questions.IT@support.sonyericsson.com
Malaysia	1-800-889900	questions.MY@support.sonyericsson.com
Mexico	01 800 000 4722	
	(international toll free number)	questions.MX@support.sonyericsson.com
Netherlands	0900 899 8318	questions.NL@support.sonyericsson.com
New Zealand	0800-100150	questions.NZ@support.sonyericsson.com
Norway	815 00 840	questions.NO@support.sonyericsson.com
Philippines	02-6351860	questions.PH@support.sonyericsson.com
Poland	0 (prefix) 22 6916200	questions.PL@support.sonyericsson.com
Portugal	808 204 466	questions.PT@support.sonyericsson.com
Romania	(+4021) 401 0401	questions.RO@support.sonyericsson.com
Russia	8(495) 787 0986	questions.RU@support.sonyericsson.com
Singapore	67440733	questions.SG@support.sonyericsson.com
Slovakia	02-5443 6443	questions.SK@support.sonyericsson.com
South Africa	0861 632222	questions.ZA@support.sonyericsson.com
Spain	902 180 576	questions.ES@support.sonyericsson.com
Sweden	013-24 45 00	questions.SE@support.sonyericsson.com
Switzerland	0848 824 040	questions.CH@support.sonyericsson.com
Taiwan	02-25625511	questions.TW@support.sonyericsson.com
Thailand	02-2483030	questions.TH@support.sonyericsson.com
Turkey	0212 47 37 777	questions.TR@support.sonyericsson.com
Ukraine	(+380) 44 590 1515	questions.UA@support.sonyericsson.com
United Arab Emirates	43 919880	questions.AE@support.sonyericsson.com
United Kingdom	08705 23 7237	questions.GB@support.sonyericsson.com
United States	1-866-766-9374	questions.US@support.sonyericsson.com
Venezuela	0-800-100-2250	questions.VE@support.sonyericsson.com

Guidelines for Safe and Efficient Use

Please read this information before using your mobile phone.

These instructions are intended for your safety. Please follow these guidelines. If the product has been subject to any of the conditions listed below or you have any doubt as to its proper function make sure you have the product checked by a certified service partner before charging or using it. Failure to do so might entail a risk of product malfunction or even a potential hazard to your health.



Recommendations for safe use of product (mobile phone, battery, charger and other accessories)

- Always treat your product with care and keep it in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire.
- Do not expose your product to liquid or moisture or humidity.
- Do not expose your product to extremely high or low temperatures. Do not expose the battery to temperatures above +60°C (+140°F).
- Do not expose your product to open flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Do not attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Do not use your product near medical equipment without requesting permission from your treating physician or authorized medical staff.
- Do not use your product when in, or around aircraft, or areas showing the sign "turn off two-way radio".



- Do not use your product in an area where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.



CHILDREN

KEEP OUT OF CHILDRENS REACH. DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BECOME DETACHED AND CREATE A CHOKING HAZARD.



Power supply (Charger)

Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug. If the plug does not fit into the outlet, have a proper outlet installed by a qualified electrician.

Use only Sony Ericsson branded original chargers intended for use with your mobile phone. Other chargers may not be designed to the same safety and performance standards.

Battery

We recommend that you fully charge the battery before you use your mobile phone for the first time. A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used. The battery should only be charged

in temperatures between +5°C (+41°F) and +45°C (+113°F).

Use only Sony Ericsson branded original batteries intended for use with your mobile phone. Using other batteries and chargers could be dangerous. Talk and standby times depend on several different conditions such as signal strength, operating temperature, application usage patterns, features selected and voice or data transmissions when the mobile phone is being used.

Turn off your mobile phone before removing the battery. Do not put the battery into your mouth. Battery electrolytes may be toxic if swallowed. Do not let the metal contacts on the battery touch another metal object. Doing this could short-circuit and damage the battery. Use the battery for the intended purpose only.

Personal medical devices

Mobile phones may affect the operation of pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, use it at the ear on the opposite side of the body to the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information.

For other medical devices, please consult your physician and the manufacturer of the device.

Driving

Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions. We recommend that you use only Sony Ericsson handsfree solutions intended for use with your product.

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna has been installed.

Always pay full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

Emergency calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. You should therefore never rely solely upon any mobile phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

Antenna

This phone contains a built-in antenna. Use of antenna devices not marketed by Sony Ericsson specifically for this model could damage your mobile phone, reduce performance, and produce SAR levels above the established limits (see below).

Efficient use

Hold your mobile phone as you would any other phone. Do not cover the top of the phone when it is in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and standby times.

Radio frequency (RF) exposure and Specific Absorption Rate (SAR)

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while it is operating can be well below this value. This is because the mobile phone is designed to use the minimum power required to reach the network.

Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

For phones sold in the U.S., before a phone model is available for sale to the public, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when used with the original Sony Ericsson

accessory intended for this phone and worn on the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

A separate leaflet with SAR information on/about this mobile phone model is included with the material accompanying this mobile phone. This information can also be found, together with more information on radio frequency exposure and SAR, on: www.sonyericsson.com/health.

Accessible Solutions/Special Needs

For phones sold in the US, you can use your TTY terminal with your Sony Ericsson mobile phone (with the necessary accessory). For information on Accessible Solutions for individuals with special needs call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or visit the Sony Ericsson Special Needs Center at www.sonyericsson-snc.com.

Disposal of old electrical & electronic equipment

This symbol indicates that all electrical and electronic equipment included shall not be treated as household waste. Instead it shall be left at the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Disposing of the battery

Please check local regulations for disposal of batteries or call your local Sony Ericsson Call Center for information.

The battery should never be placed in municipal waste. Use a battery disposal facility if available.



Memory Card

Your product comes complete with a removable memory card. It is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use.

The memory card is formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

WARNING:

If your device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on Memory Card Use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the M2 adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.

- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

End User Licence Agreement

This wireless device, including without limitation any media delivered with the device, ("Device") contains software owned by Sony Ericsson Mobile Communications AB and its affiliated companies ("Sony Ericsson") and its third party suppliers and licensors ("Software").

As user of this Device, Sony Ericsson grants you a non-exclusive, non-transferable, non-assignable license to use the Software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device.

You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this license for a term of the useful life of this Device. You can terminate this license by

transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect.

Sony Ericsson and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms.

The validity, construction and performance of this license shall be governed by the laws of Sweden. The foregoing shall apply to the full extent permitted by, when applicable, statutory consumer rights.

Limited Warranty

Sony Ericsson Mobile Communications AB, S-221 88 Lund, Sweden, (Sony Ericsson), provides this Limited Warranty for your mobile phone and original accessory delivered with your mobile phone (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit www.sonyericsson.com to get further information.

OUR WARRANTY

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of one (1) year.

WHAT WE WILL DO

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony

Ericsson authorised distributors or service partners, in the country/region* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads or other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

CONDITIONS

- 1 The warranty is valid only if the original proof of purchase issued to the original purchaser by a Sony Ericsson authorised dealer, specifying the date of purchase and serial number**, for this Product, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
- 2 If Sony Ericsson repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.

- 3 This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out – this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson.

Minor variations in display brightness and color may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in the appearance of the camera image may occur between phones. This is not uncommon in digital cameras and does not mean that the camera is defective in any way.

- 4 Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system
- 5 This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.
- 6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.

- 7 Tampering with any of the seals on the Product will void the warranty.

- 8 THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

***EUROPEAN UNION (EU)**

If you have purchased your Product in an EU country you can have your Product serviced, under the conditions set out above, within the warranty period in any EU country where an identical Product is sold by an authorised Sony Ericsson distributor. To find out if your Product is sold in the EU country you are in, please call the local Sony Ericsson Call Center. Please observe that certain services may not be possible elsewhere than in the country of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models

sold in other EU countries. It may not be possible to repair SIM-locked Products.

** In some countries/regions additional information is requested. If so, this is clearly shown on the valid proof of purchase.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.



Bluetooth wireless technology

Bluetooth™ Qualified Design ID is B011122.

Declaration of Conformity

We, Sony Ericsson Mobile Communications AB of Nya Vattentorget

S-221 88 Lund, Sweden

declare under our sole responsibility that our product

Sony Ericsson type AAD-3022043-BV

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards 3GPP TS 51.010-1, EN 301908-1, EN 301489-7, EN 301489-24, EN 300328, EN 301489-17 and EN 60950, following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive 99/5/EC with requirements covering EMC directive 89/336/EEC, and Low Voltage directive 73/23/EEC.

Lund, June 2006

CE 0682

A handwritten signature in black ink, reading 'Shoji Nemoto'.

*Shoji Nemoto,
Head of Product Business Unit GSM/UMTS*

We fulfil the requirements of the R&TTE Directive (99/5/EC).

Index

A

alarms 36
 applications 7
 appointments 36
 automatic redialling 17

B

battery
 inserting and charging 4
 use and care 40
 Bluetooth™ wireless technology 32
 business cards 23
 buttons *See* keys 8, 12

C

calendar 36–37
 call list 22
 calls
 answering and rejecting 17
 emergency 18
 international 17
 making and receiving 5, 17
 missed 17
 video 18
 camera 7, 28
 contacts
 adding phone contacts 20
 default contacts 19

groups of 23
 synchronizing 31

E

entering letters 14

F

file manager 15

G

games 7

H

handsfree 9
 help 5

I

iMail 26
 iMMS *See* picture messages 25
 i-mode™ activity menu 6
 Internet
 i-mode™ 31

K

keypad lock 13
 keys 8, 12

M

memory card 9, 15, 43

memory status	15	setup wizard	5
Memory Stick Micro™ (M2™)	9, 43	SIM card	
menu overview	10	contact numbers	20
menus	12	copying to/from	21
messages		SMS See text messages	24
iMail	26	SOS See emergency numbers	18
picture (iMMS)	25	standby	5
text	24	synchronizing	31–32
microphone	17	T	
music player	30	T9™ Text Input	14
N		text messages	24
navigating menus	12	transferring	
networks	16	camera pictures	29
P		files	34
phone overview	8	V	
picture messages (iMMS)	25	video player	30
picture sizes	28	video recorder	28
pictures	29	voice dialling	22
R		volume	
ringtones	30–31	ear speaker	17
S		ringtone	30
safety guidelines	40	W	
sending		warranty	43
appointments and tasks	37	Z	
business cards	23	zoom	28
pictures	29		