

3.2.4.4 Fn-key Settings

ICON	ITEM & FUNCTION	
	• Fn-Key Setting (Figure 3-42)	
	Fn Key	The Application Program of default setting
	F1	Internet Explorer
	F2	Microsoft WordPad
	F3	Inbox
	F4	My Computer
	✓ To assign your favorite application program to F1, F2, F3 and F4 hot keys. ✓ Choose one of F1, F2, F3 and F4 from pull-down list.(Figure 3-43) ✓ To tap “Browse...” inside “Assign program” applet. ✓ Select one application program you want from program list, then, choose “OK”. (Figure 3-43) ✓ To tap “Default” to return back to default setting. (Figure 3-42)	

Table 3-23 **Fn-Key**

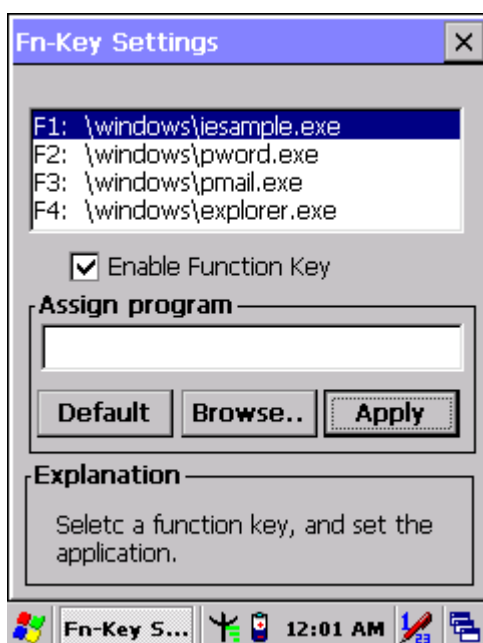


Figure 3-42 **Fn-Key Settings**



Figure 3-43 **Fn-Key Settings**

3.2.5 Date/Time

ICON	ITEM & FUNCTION
 Date/Time	• “Date/Time” Tab :(Figure 2-14)
	✓ Please see the detail information of 2.5.1 Setting Time and Date

Table 3-25 **Date/Time**

3.2.6 Dialing Properties

ICON	ITEM & FUNCTION
 Dialing	• “Dialing Properties” Tab :(Figure 3-44)
	✓ In the When dialing from list, select the “Location” where you want to change settings.(Figure 3-45) ✓ To create a new location, select “New”. Enter the name of the location, and then select “OK”.(Figure 3-46) ✓ Enter or edit the area code and local country code as needed. ✓ In Dial using, select “Tone dialing” or “Pulse dialing”. Most phone lines are tone. ✓ To automatically disable call waiting, select “Disable call waiting by dialing”, select the appropriate number sequence in the list, or enter a new sequence. • Editing dialing patterns (Figure 3-47) ✓ Using the codes listed in the topic; revise the dialing patterns as needed. Notes: ■ If you need to use character other than the ones listed here, use manual dialing. ■ Hyphens and spaces in dialing strings are ignored. ■ Some modems may not respond to the following characters, even though your device lets you add them to the dial string.

Table 3-26 **Dialing properties**

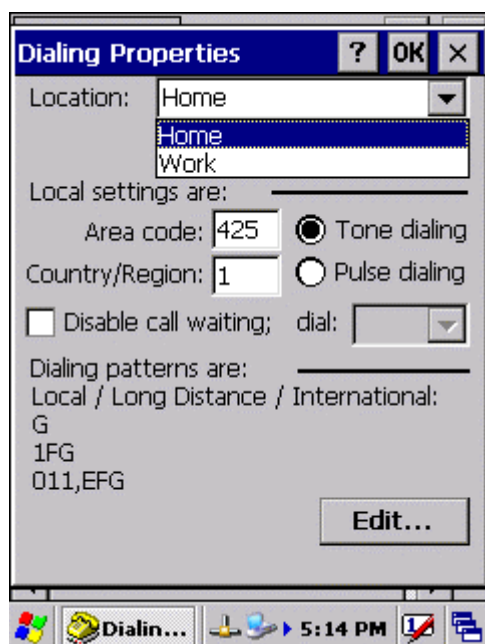


Figure 3-44 Dialing Properties



Figure 3-45 Dialing Properties

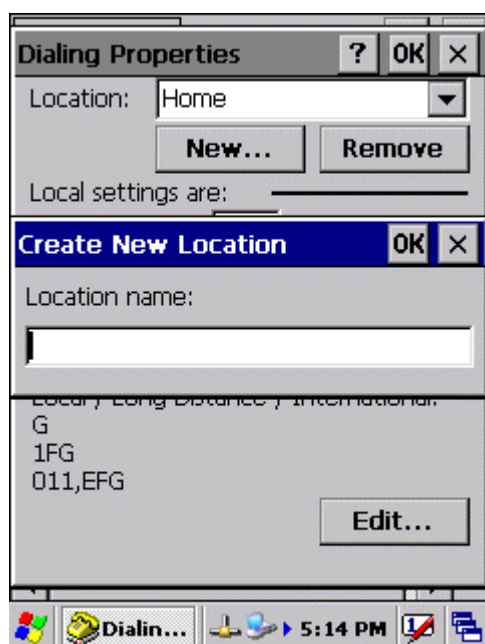


Figure 3-46 Dialing Properties

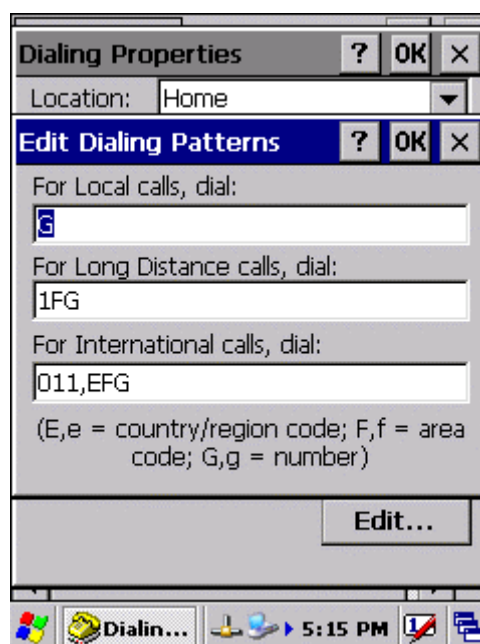


Figure 3-47 Dialing Properties

3.2.7 Display Properties

ICON	ITEM & FUNCTION
 Display	• “Background” Tab : (Figure 3-48)
	✓ From the “Image” list, select an image you want as the background of the desktop.(Figure 3-49) ✓ To locate an image in another folder, select “Browse”.(Figure 3-50) ✓ To have the image cover the entire background, select “Tile image on background”
	• “Appearance” Tab(Figure 3-51)
	✓ Change the color scheme : (Figure 3-52) ➢ From the” Scheme” list, select a scheme. ➢ View your choice in the preview box. If you like the scheme, select “Apply”. ✓ Create a custom color scheme: ➢ From the “Item” list, select a display item. ➢ From the “Basic colors” list, select a color, and select “OK”. ➢ View your color selection(s) in the Preview box. ➢ To save the scheme, select “Save”. ➢ In the “Save this color scheme as” box, enter a name for the scheme, and select “OK”. ➢ Select “Apply”.

Table 3-27 Display properties

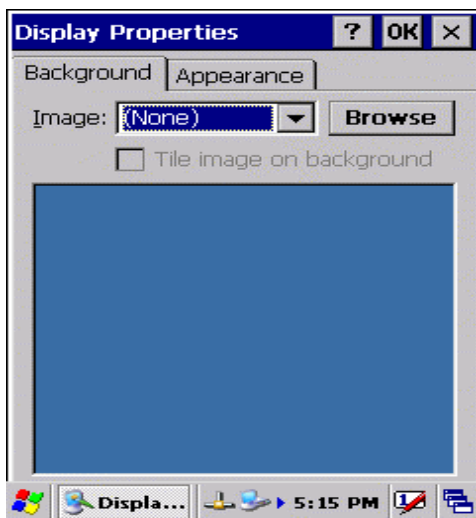


Figure 3-48 Display properties



Figure 3-49 Display properties

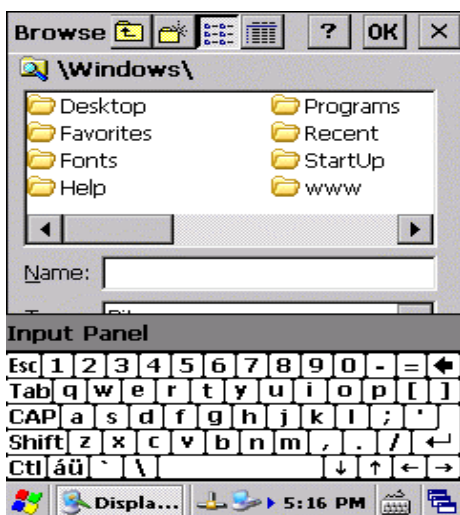


Figure 3-50 Display properties

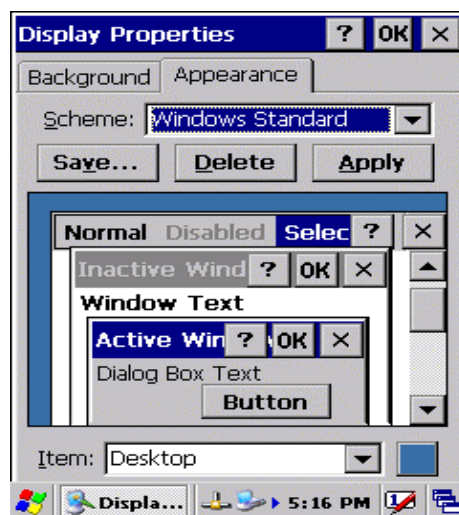


Figure 3-51 Display properties

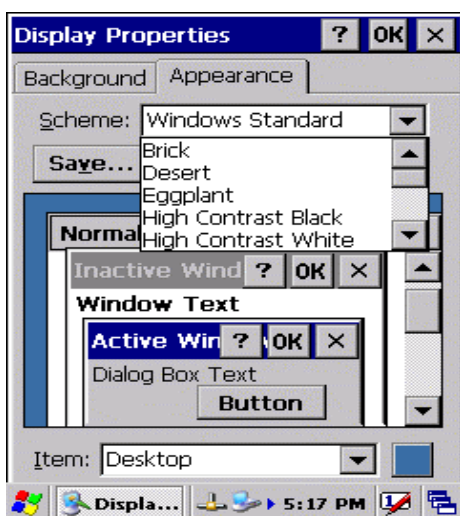


Figure 3-52 Display properties

3.2.8 Input Panel

ICON	ITEM & FUNCTION
 Input Panel	• “Input panel” Tab :(Figure 3-53)
	✓ Select the input method you want to change. ✓ To change the Soft Keyboard Options , tap “Option” (Figure 3-54) .
	• “Options” Tab :
	✓ Change the soft keyboard options as desired, selecting from: ➢ Large or small keys ➢ Using gestures for space, black-space shift, and enter. ✓ To exit the soft keyboard Options, press “OK” on the control bar, or press the <Enter> key on the keypad. ✓ To exit the Input Panel, press “OK” on the control bar, or press the <Enter> key on the keypad.

Table 3-28 Display properties

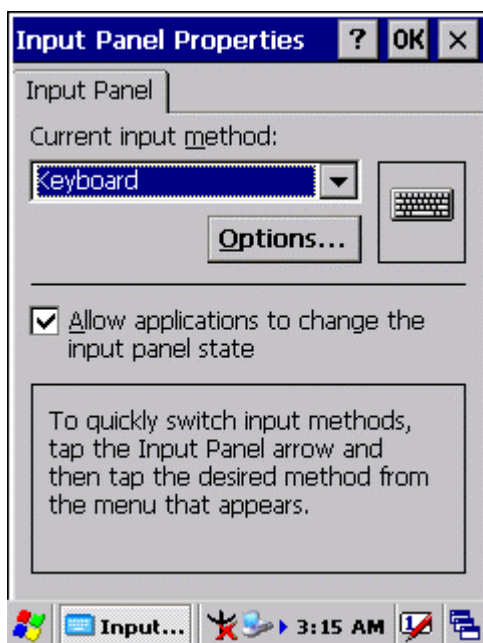


Figure 3-53 Input Panel Properties

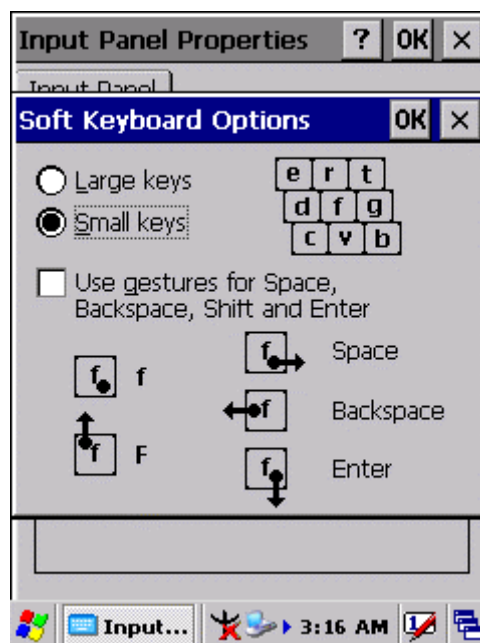


Figure 3-54 Input Panel Properties

3.2.9 Internet Options

ICON	ITEM & FUNCTION
 Internet Options	• “General” Tab :(Figure 3-55)
	✓ Type in the URL of desired start page and the desired search engine. You also change the Cache Size, clear the Cache and Clear the History..
	• “Connection” Tab :(Figure 3-56)
	✓ Modify the network access setting as desired.
	• “Security” Tab (Figure 3-57)
	✓ Modify the security settings as desired. You can enable any of the following by tapping the checkbox: ➤ Allow cookies ➤ Allow TLS 1.0 security ➤ Allow SSL 2.0 security ➤ Allow SSL 3.0 security ➤ Warn when switching across secure and insecure areas.
	• “Advanced” Tab (Figure 3-58)
	✓ Modify the security settings as desired. You can enable any of the following by tapping the checkbox: ➤ Display Image in pages ➤ Play sounds in pages ➤ Enable scripting ➤ Display a notification about every script error ➤ Underline links- ○ Never ○ Always ○ Hover

Table 3-29 Internet Options



Figure 3-55 Internet Settings

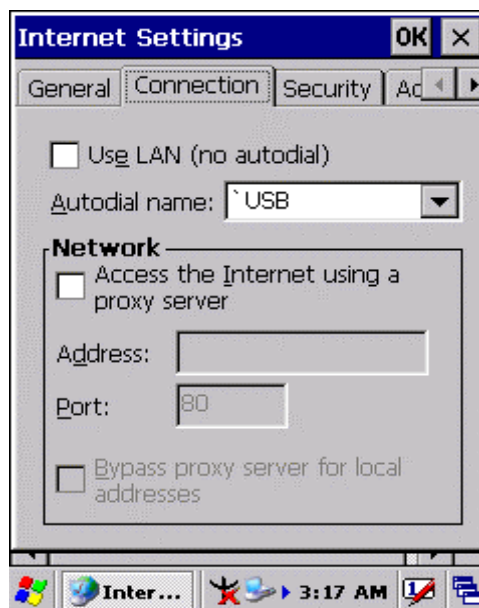


Figure 3-56 Internet Settings

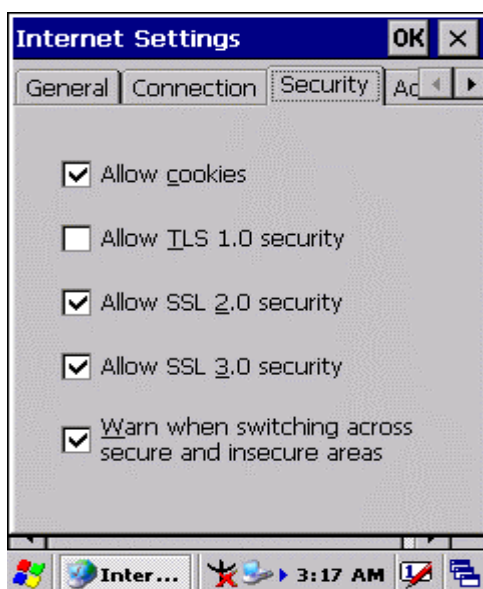


Figure 3-57 Internet Settings

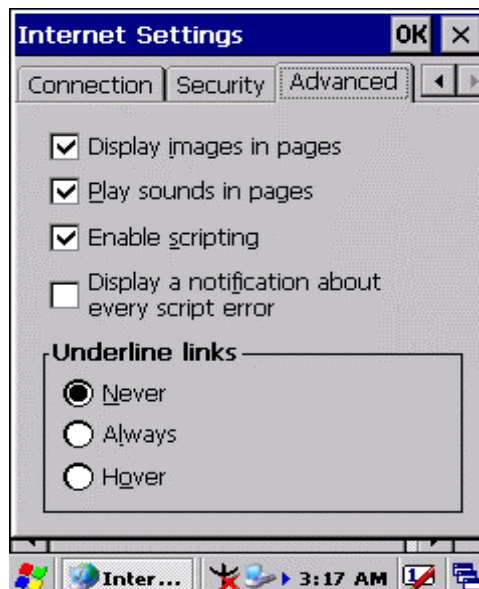


Figure 3-58 Internet Settings

3.2.10 Keyboard

ICON	ITEM & FUNCTION
 Keyboard	• “Repeat” Tab : (Figure 3-59) ✓ To change the amount of time between depressions before repetition starts, adjust the Repeat delay slider ✓ To change the repeat rate, adjust the Repeat rate slider. ✓ Test your new setting. ✓ Tap “ OK” to exit the “Keyboard” Tab.

Table 3-30 Keyboard

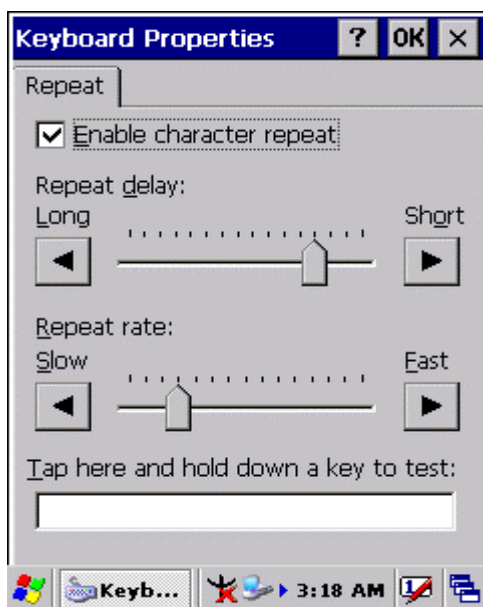


Figure 3-59 Keyboard Properties

3.2.11 Network and Dial-up Connections

ICON	ITEM & FUNCTION
 Network and Dial-up Co...	• “Connection” Tab : ✓ To create a “Dial-up Connection”: ➤ Double-tap the “Make New connection”. ➤ In the “Make New Connection” dialog box, enter a name for the connection. ➤ Select “Dial-Up Connection”. ➤ Select the “Next” button. ➤ Select the modem you want use. ➤ Select “Configure” ➤ Under “Connection Reference”, use the default settings provided. If you can't connect using these settings, see your ISP or network administrator for specific information. If you want to always enter a phone number before connecting, Select “Manual Dial”. Select “OK”. ➤ Select “TCP/IP Settings”. In the “General” tab, ensure “Use Server-assigned IP address” is selected. In the “Name Servers” tab, ensure “Use Server-assigned addresses” is selected, and select “OK”. If you are unable to connect with these default settings, see your ISP or network administrator for specific TCP/IP information. ➤ Select the “Next” button and type the telephone number. ➤ Select the “Finish” button. The connection you just created appears as an icon in the “Network and Dial-up Connections” folder. ✓ Set up a point-to-Point Protocol (PPP) account with an ISP and obtain the following information: ➤ Access telephone number ➤ User name ➤ Password

Once you have established an account, create a new connection on your device. When creating this connection, you should be able to use all of the default TCP/IP settings provided in the Make New Connection Wizard. If you can't connect using the default settings, contact your ISP or access your ISP's Web site for specific TCP/IP information as well as primary and secondary DNS address.

✓ **Modify connection setting**

- Select **Start > Settings > Network and Dialup Connections**
- Select the icon for connection settings you want to modify.
- Select **File > Properties**, or double- tap the appropriate icon.
- Select desired options. There may be additional settings that depend on the connection. To modify, select the icon and select **Advanced Settings...** from the menu.

Table 3-31 **Network and Dial-up Connections**



Figure 3-60 **Network and Dial-up Connections**

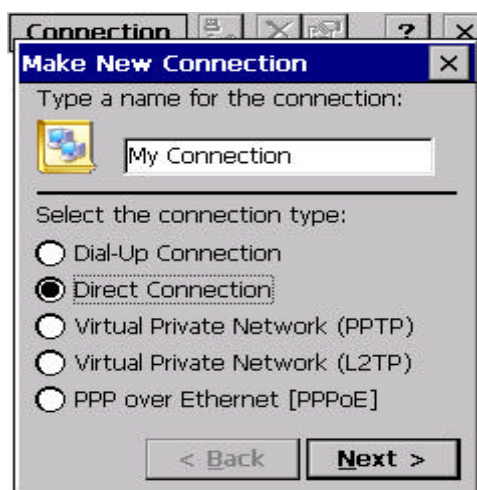


Figure 3-61 **Network and Dial-up Connections**

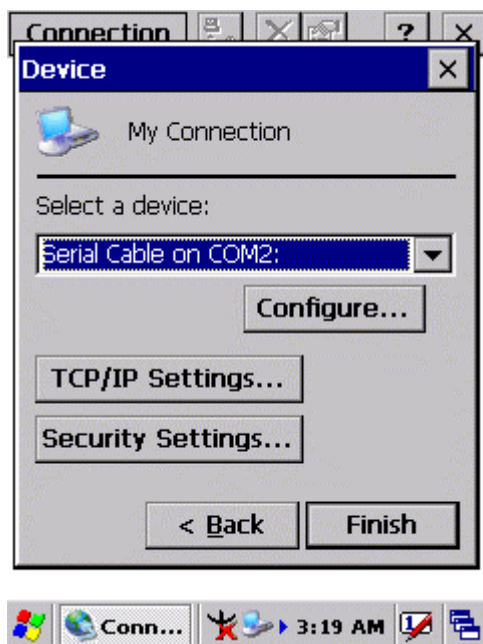


Figure 3-62 Network and Dial-up Connections

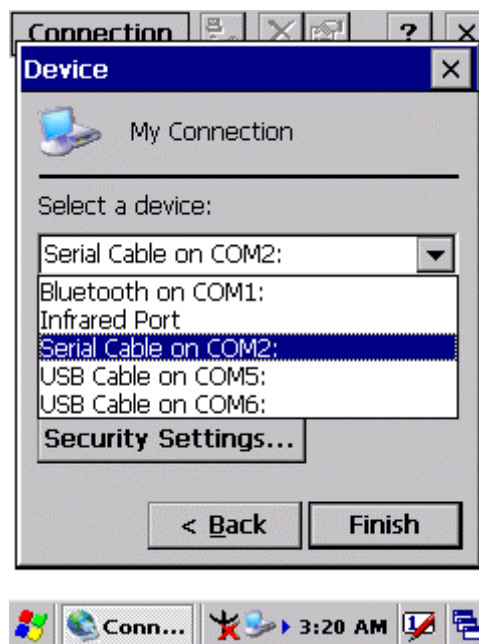


Figure 3-63 Network and Dial-up Connections

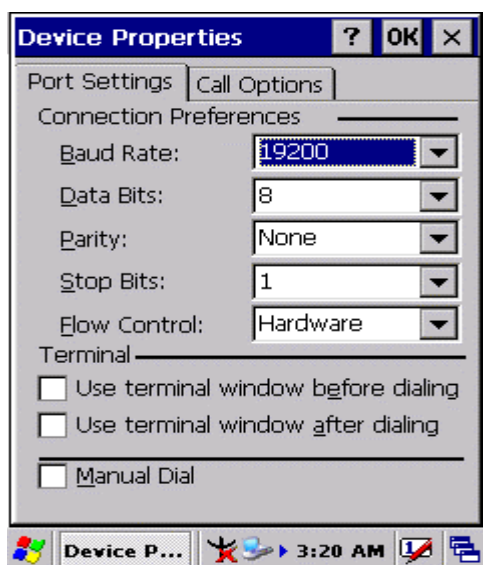


Figure 3-64 Network and Dial-up Connections

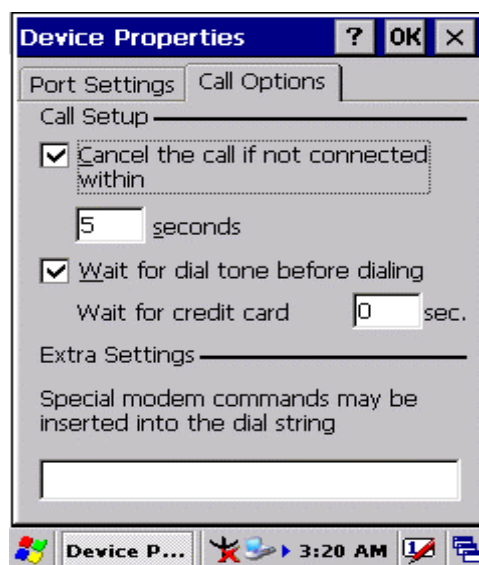


Figure 3-65 Network and Dial-up Connections

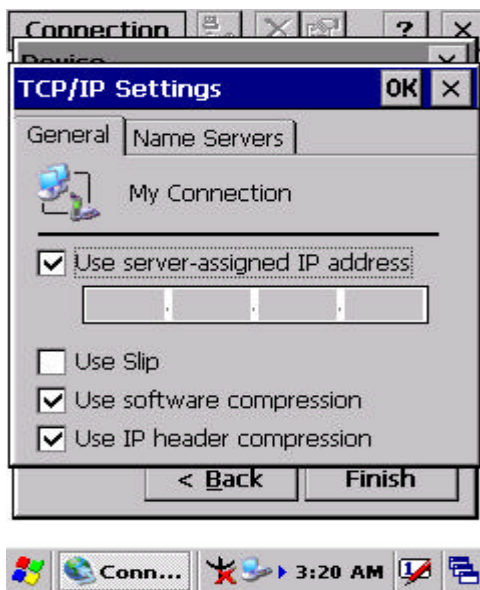


Figure 3-66 Network and Dial-up Connections

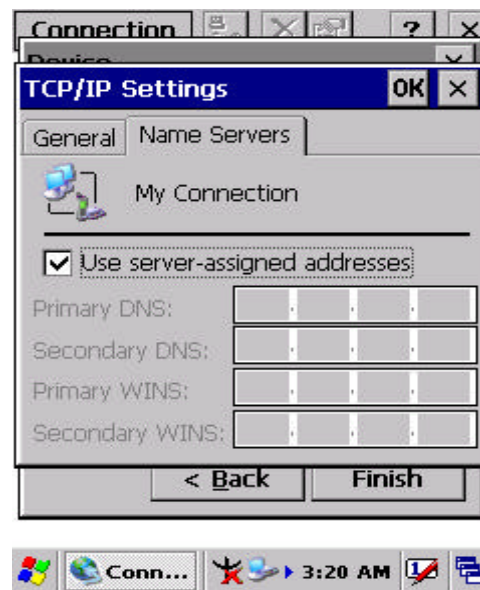


Figure 3-67 Network and Dial-up Connections

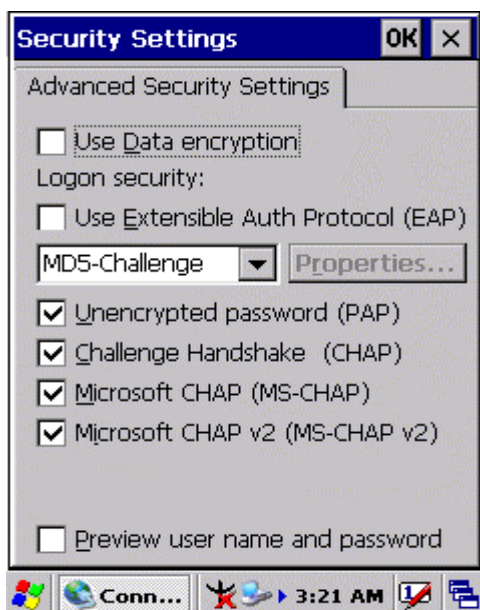


Figure 3-68 Network and Dial-up Connections

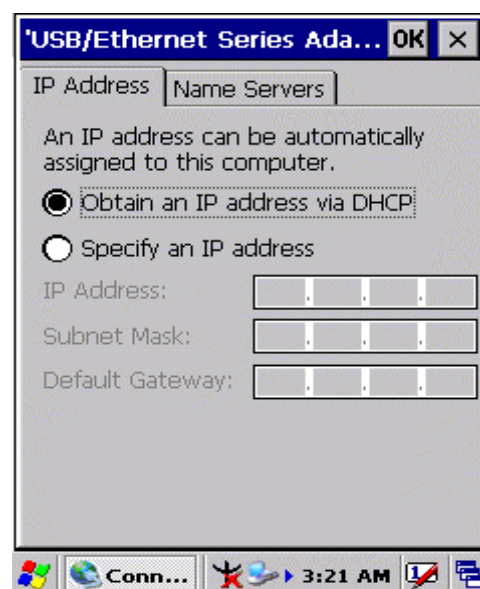


Figure 3-69 Network and Dial-up Connections