


Photographs of EUT

Front View of EUT with cover open, showing user controls.



Photographs of EUT

View of EUT showing front cover open, and controller PC board mount rotated out to access interconnect board.

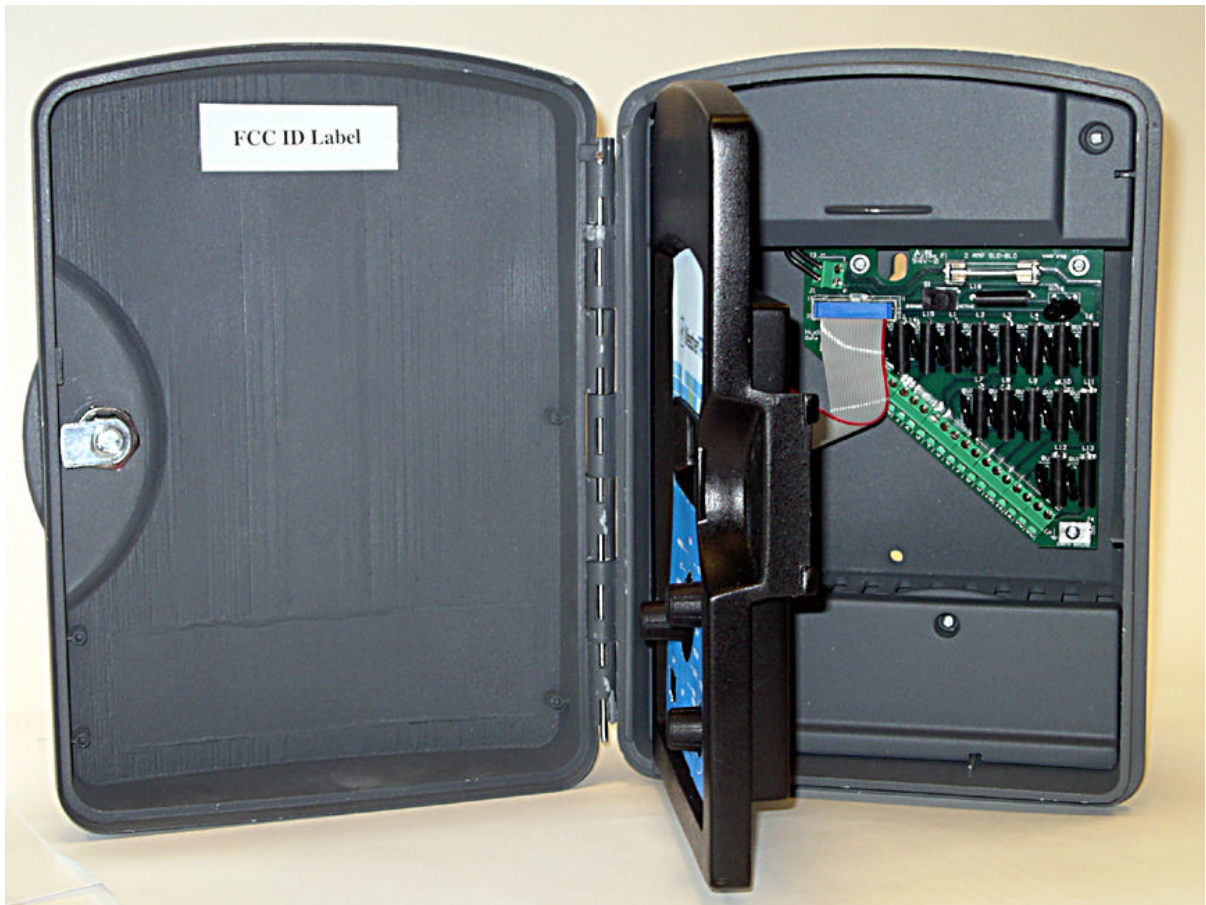


Photographs of EUT

View of cover over controller PC board, external antenna connection, and interconnect board.




Photographs of EUT

Front View of EUT controller board.

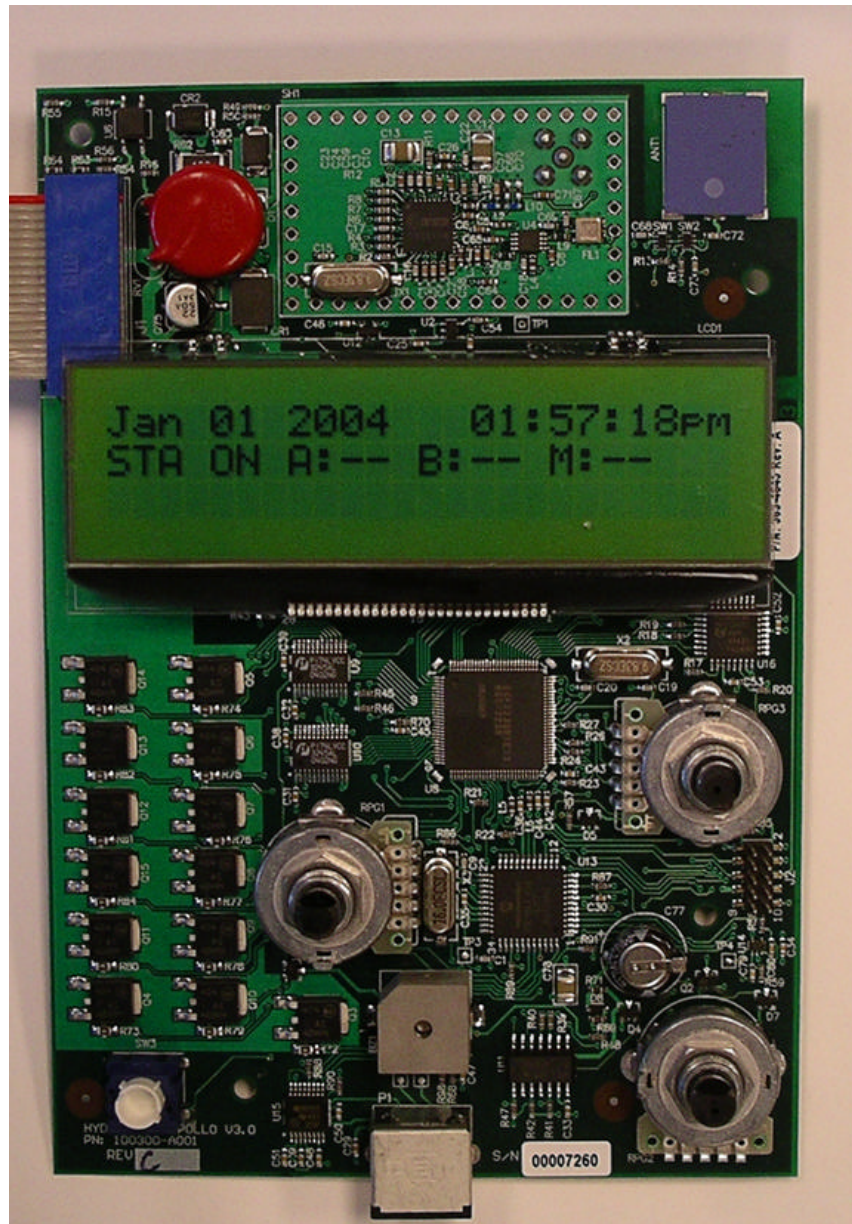


Photographs of EUT

Rear View of EUT controller board showing antenna connection for external antenna.

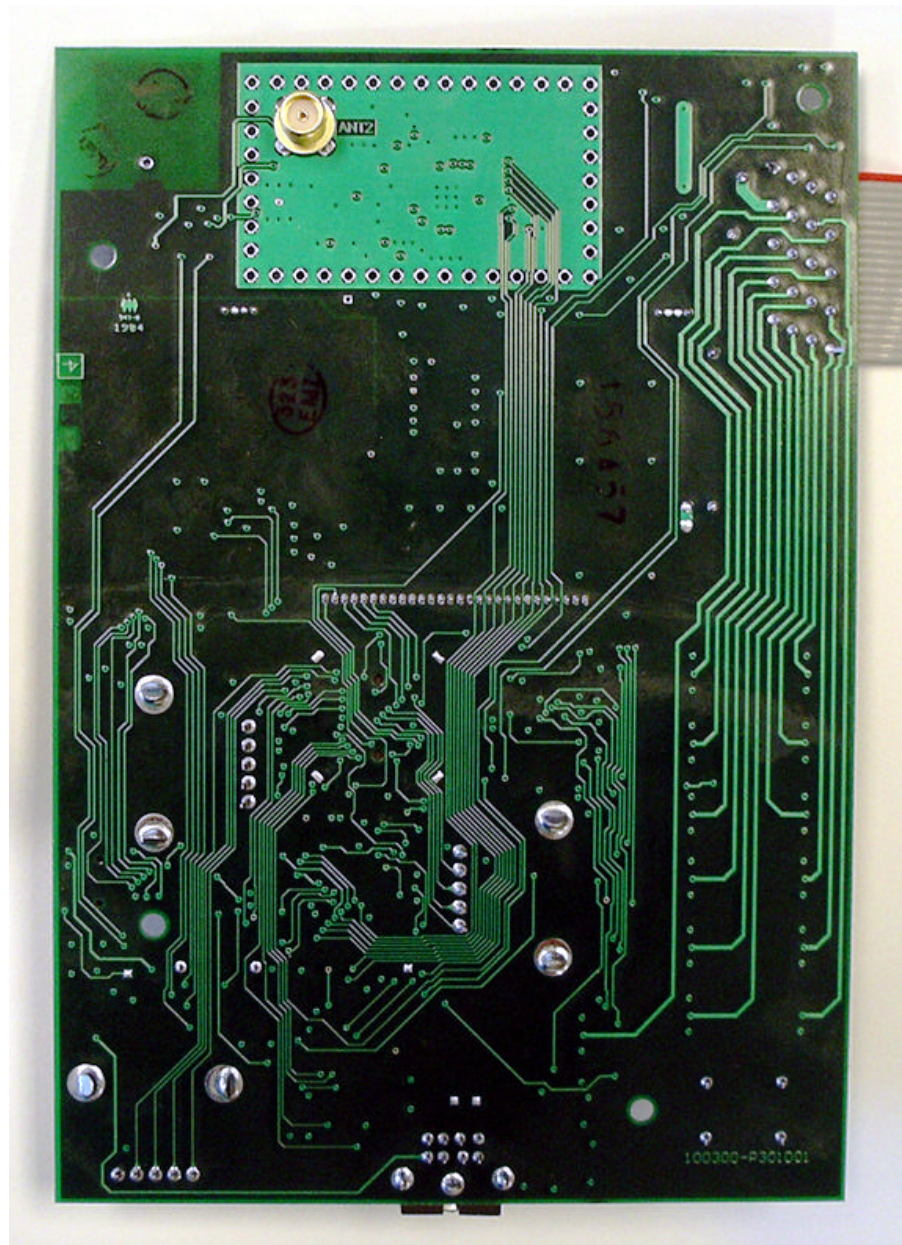

Front view of of interconnect board.

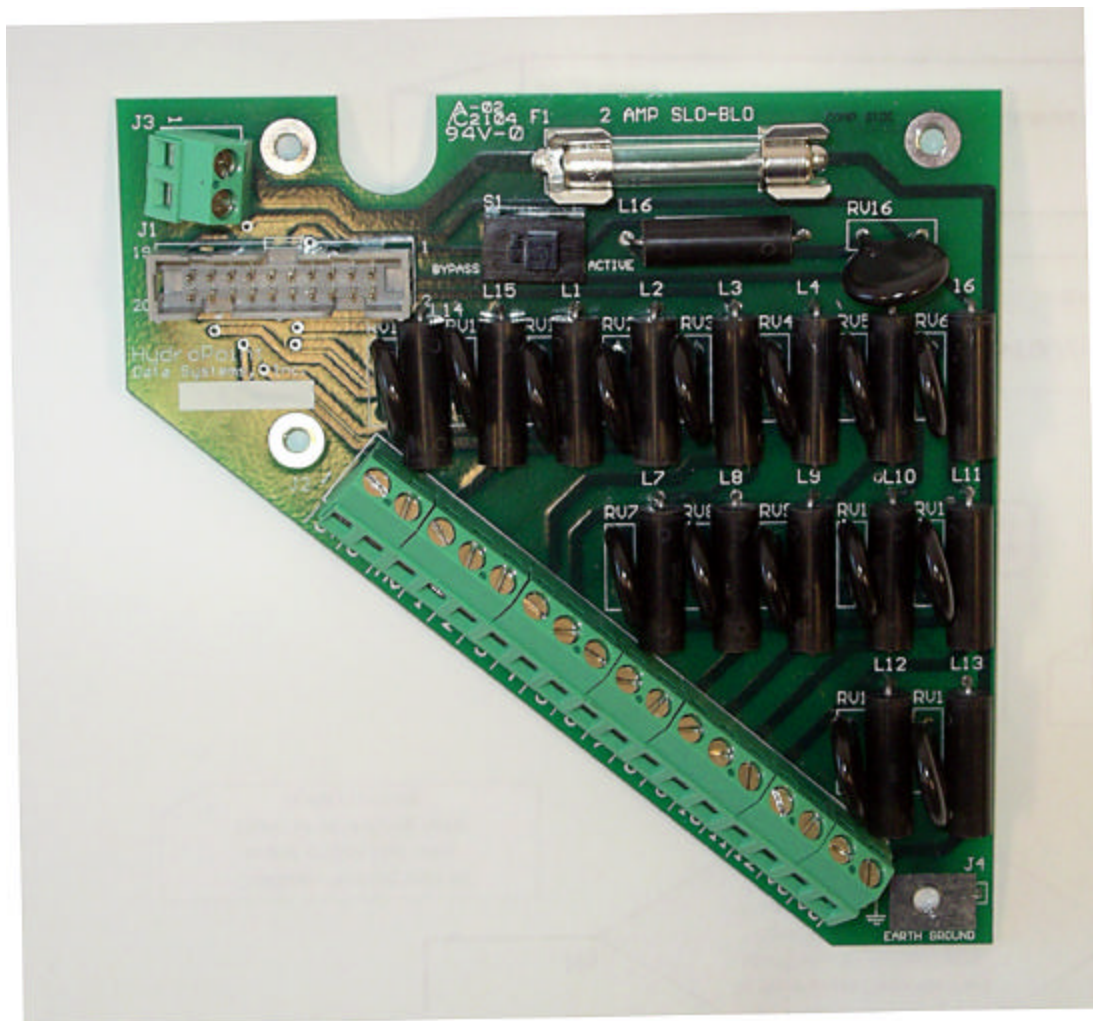

Photographs of EUT

Rear view of interconnect board.

