


ZTE HS320 Wireless HD IP Camera

User's Guide

1 Interfaces

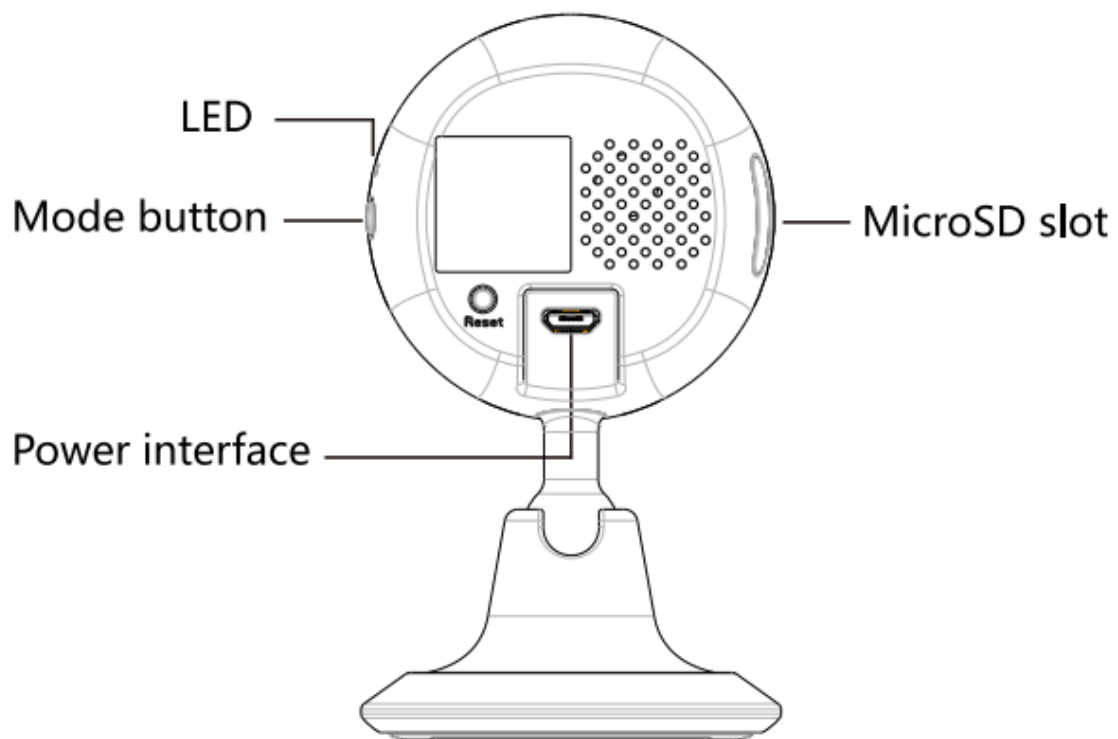

Interface	Function
MicroSD slot	Insert a TF card into the slot to store local videos.
MicroUSBpower interface	Connect a power adapter or power bank to the interface.
Mode button	Switch between function modes. For details, please refer to the instructions given by the app.
Reset button	Press and hold the button until the LED turns red to restore the factory settings.
LED	
Off	The camera is not powered on.
Red	Solid: The camera is starting up.

	Flashing: The camera is being upgraded to the latest version.
Blue	Slow flashing: The camera is awaiting network configuration.
	Fast flashing: The camera is having its WLAN configured.
Blue/Green	Flashing alternately in blue and green: The camera is obtaining its IP address.
Green	Flashing: The camera has obtained its IP address and is attempting to connect to the server.
	Solid: The camera has been connected to the server and is operating normally.

2 Safety Instructions

- Using an authorized or incompatible power adapter may cause fires, explosions or other dangers.
- This product and its fittings include some small parts. Please keep the product and fittings out of children's reach to prevent children from damaging them, swallowing small parts, or being otherwise injured.
- This product is not a toy and should be used by children only under the supervision of an adult.
- Please use this product in the temperature range from -5°C to +40°C. Ambient temperatures that are too high or too low may cause the product to malfunction.
- Please keep this product and its fittings from rain and moisture.
- Do not use this product in thunderstorms as they may cause product failures or electric shocks.
- When using this product, keep it far away from household appliances with a strong magnetic or electric field such as microwave ovens and refrigerators.

3 Preparing to Use the Camera

- Power on the camera. The LED turns on. For the ZTE IP camera to perform its functions, it has to be connected to a wireless router whose routing feature is enabled.
- Make sure that the camera is within range of the wireless router.

4. Installing the HomeCare App

- Use your smartphone to scan the QR code below. Then download and install the HomeCare app.



Tips:

You can also visit <http://www.ztehome.com.cn/homecareapp> from your smartphone to download the app.

- Register on the app as a new user.

5 Adding the Camera

- Wait until the LED starts to slowly flash in blue.

If the LED does not start to slowly flash in blue, restore the factory settings of the camera by pressing and holding the Reset button until the LED turns red. After that, wait again until the LED starts to slowly flash in blue.

- Follow the instructions of the app to add and use the camera.

6 Advanced Functions

Activating cloud storage

After cloud storage is activated, emergency videos can be saved in the cloud server to prevent data loss or damage. The cloud storage service can be purchased and activated within the app.

Locally recording videos

Use a TF card or NAS device to locally record videos. Activate the recording function by selecting on the app whether videos are to be stored in the TF card or NAS device.

7 FCC Statement

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.