

 
 
Turning on/off the player

2 Selecting the function




1 When displayed function selection mode, Press ◀ or ▶ button to select desired a function.

• Music	Playing music files
• Video	Playing video files
• Photo	Viewing photo files
• Radio	Listening FM station
• Record	Recording voice/audio
• Setup	Setting the functions
• Browser	Searching folders/files

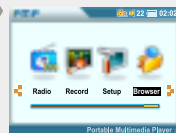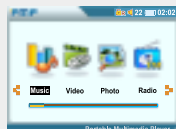

 2 Press SELECT button to execute selected a function.

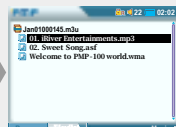

(Playlist)

3 Turning off the player



To turn off the player, press POWER button.

 


Sound control

1 Adjusting the volume




During the music or video file playback, press ▲▼ button to increase or decrease volume

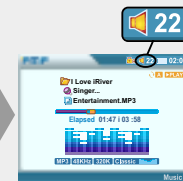

2 Muting the sound




 
During the listening the FM, press A(A-B)button, to mute the sound.
To restore the sound, press A (A-B)button.

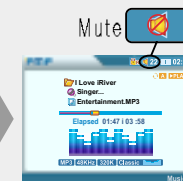

3 Changing the sound EQ



  During the music file playback, press B(EQ/MODE) button, to change the sound EQ.

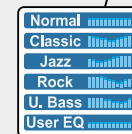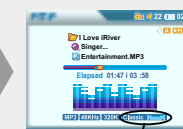


Playing music files

① Basic playback



 - 1** Press the POWER button to turn on.
Function selection screen is displayed.

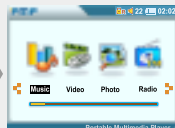

- 2** Press the SELECT button to select "MUSIC" by using the ◀ ▶ button.
The final saved playlist or the playlist played at last is displayed.



You can select Browser or Playlist by turns by pressing the B button.
The playable files with the selected program is only displayed.



- 3** Press the SELECT button after selecting a music file to play by using the ◀ ▶ button.
Press ▶ button to enter into the folder.
Press ◀ button to go the upper folder.
If select Folder, all files and sub folder in the folder are selected.



Playing music files



- 4** Press the SELECT button to add files to keep playing by using the ◀ ▶ button.

 
If select the selected file again, the selection is released.

You can only select files in the same folder.

If select another folder, the previous selected file is released.




- 5** Press the SELECT button after selecting "Select All" on the pop-up menu to select all files in the folder.



- 6** Press the ▶ button to play the selected file directly or press the SELECT button after selecting "Play" on the pop-up menu.

 The selected files add to Playlist and start playback.

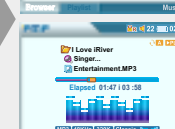




Playing music files

2 Skipping to Next/Previous File



During playing a music file, press the ◀▶ button to skip to the next or previous file in the playlist.

 If pressing the ▶ button while the last file is playing, the playback is stopped and the Playlist screen is displayed.

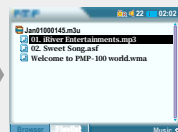


3 Fast searching



Press and hold ◀ or ▶ button to within a music file.

 Release ◀ or ▶ button to play normal speed.

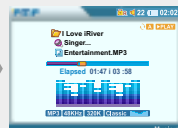

4 Help about a Music



Press the “?(Help)” button. The explanation about each button is displayed.

Press the “?(Help)” button again to exit Help.



<Help>

 


Playing music files

5 To pause playback



During playing, press the ⏸ button to pause playing, press ▶ button again to start playing.

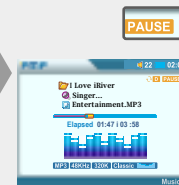

6 Exit playing a music file



 
1 During playing, press and hold the ▶ button to stop playing. The playing finished and the Playlist screen is displayed.



Playlist



2 In Browser or Playlist screen, press and hold the ▶ button to exit playing music files. Function selection screen is displayed.

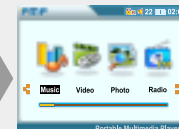

Function selection

Playing with DB Scan

 
 
① Playing with DB Scan



1 Press the SELECT button to open the pop-up menu.



2 Press the SELECT button after selecting "DB Scan" by using the ▲▼ button.

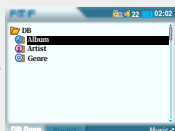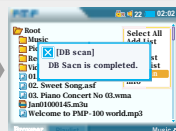

3 Press the SELECT button after selecting a music file by using the ◀▶ button.

Press ▶ button to enter into the folder.

Press ◀ button to go the upper folder.

If select Folder, all files and sub folder in the folder are selected.



Note: Files deleted after DB Scan are turned red. In this case, you can update DB file by using Manager Software.
In case DB Scan is failed, refer to "4-2 Using DB Scan (page ??)" to create DB file.



Playing with DB Scan




4 Press the SELECT button after selecting "All" on the pop-up menu to select all files in the



5 Press the ▶| button to play the selected file directly or press the SELECT button after selecting "Play" on the pop-up menu.
The selected files add to Playlist and start playback.

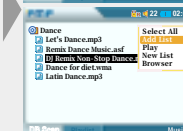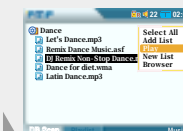  

 6 Press the SELECT button after selecting "Load List" on the pop-up menu by long click of the SELECT button to exit DB

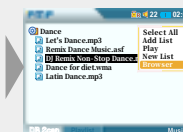

Playing a video file

① Playing a video file directly



- 1** Press the POWER button to turn on.
Function selection screen is displayed.



 
 
- 2** Press the SELECT button to select Video Mode by using the ◀▶ button.

The final saved playlist or the playlist played at last is displayed.
You can select Browser or Playlist by turns by pressing the B button.
The playable files with the selected program is only displayed.



- 3** Press the SELECT button after selecting a motion picture file to play by using the ◀▶▶▶ button.

Press ▶▶▶▶ button to enter into the folder.
Press ◀▶ button to go the upper folder.
If select Folder, all files and sub folder in the folder are selected.

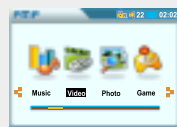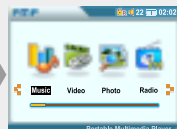

Playing a video file

- 4** Press the SELECT button to add files to keep playing by using the ◀▶▶▶ button.

If select the selected file again, the selection is released.

You can only select files in the same folder.

 
 
 
If select another folder, the previous selected file is released.



- 5** Press the SELECT button after selecting "Select All" on the pop-up menu to select all files in the folder.

- 6** Press the ▶▶▶▶ button to play the selected file directly or press the SELECT button after selecting "Play" on the pop-up menu.

The selected files add to Playlist and start playback.

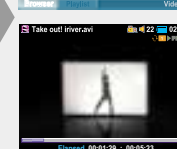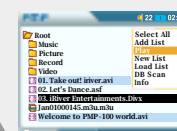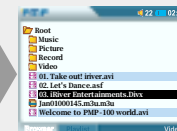




Playing a video file

2 Skipping to Next/Previous File



During playing a motion picture, press the ◀▶ button to skip to the next or previous file in the playlist.

 If pressing the ▶ button while the last file is playing, the playback is stopped and the Playlist screen is displayed.

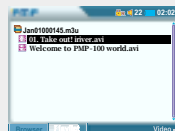


3 Fast Playing



Press and hold the ◀▶ button for fast-forward or fast-reverse playback.

 Release the button for normal playback.

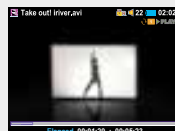

4 Help about a Motion Picture



Press the “?/Help” button. The explanation about each button is displayed.

Press the “?/Help” button again to exit Help.



<Help>



 
Playing a video file

5 Changing Playback Mode



While playing a video file, press the B (EQ/MODE) button to change the playback mode.

The playback mode is changed whenever it is pressed. (1 → All → Normal)

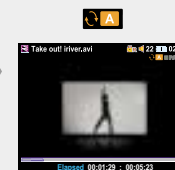


6 View information about a video file



Press the B (EQ/MODE) button to view information about a video file.

 Press the B (EQ/MODE) button again to exit viewing information about a video file.

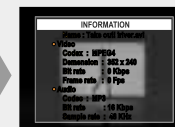


7 Muting Sound (BG Mute)



Press and hold the A (A-B) button to mute while playing a video file.

 Press and hold the A (A-B) button again to release the muting.

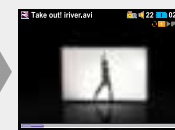


Playing a video file

8 Pause playing



 During playing, press the **PAUSE** button to pause playing, press **PAUSE** button again to start playing.

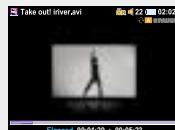


9 Exit playing a video file



1 During playing, press and hold the **PAUSE** button to stop playing. The playing finished and the Playlist screen is displayed.



 2 In Browser or Playlist screen, press and hold the **PAUSE** button to exit playing a video file. Function selection screen is displayed.

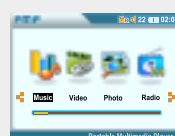



Viewing photo files

1 Viewing photo files directly



1 Press the **SELECT** button to select Photo Mode by using the **SELECT** button.

  The final saved playlist or the playlist played at last is displayed. You can select Browser or Playlist by turns by pressing the **B** button. The playable files with the selected program is only displayed.

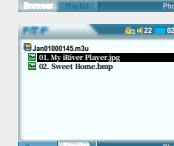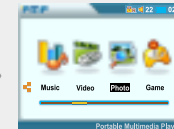


2 Press the **SELECT** button after selecting picture file to view by using the **SELECT** button.

Press **ENTER** button to enter into the folder.

Press **BACK** button to go the upper folder.

 If select Folder, all files and sub folder in the folder are selected.

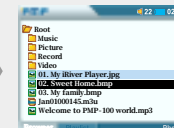

Viewing Image Files



3 Press the SELECT button to add files to keep viewing by using the ◀▶ button.

If select the selected file again, the selection is released.

You can only select files in the same folder.

If select another folder, the previous selected file is released.

 
 


4 Press the SELECT button after selecting "Select All" on the pop-up menu to select all files in the folder.



5 Press the ▶ button to play the selected file directly or press the SELECT button after selecting "Play" on the pop-up menu.

The selected files add to Playlist and start playback.

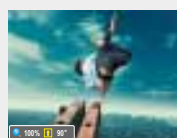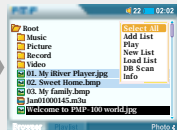

Viewing photo files



2 View photo file's Information

Press the B (EQ/MODE) button to view image information.
In case of "exif" file, press it again for detail information.

 
Press the B (EQ/MODE) button again to exit viewing image information.



3 Skipping to next/previous file

During playing picture, press the ◀▶ button to skip to the next or previous file in the playlist.

If pressing the ▶ button while the last file is playing, the playback is stopped and the Playlist screen is displayed.

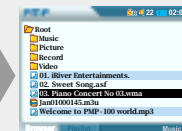


4 Zooming a picture

1 Press the A button to enlarge the picture by 2/ 4/ 8/ 1 times.



 2 Press the ◀▶ button to move zoom point at Zoom mode.

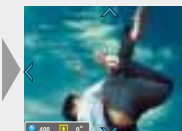




Viewing photo files


5 Zooming with zoom point



 
- 1** Press the B button to use zoom mode.

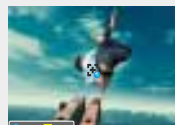

 - 2** Press the A button to enlarge the image centering around zoom point.
The scale ratio is 2/ 4/ 8/ 1 times

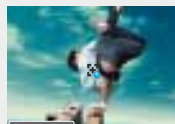

 - 3** Press the ◀ button to move the zoom point at the zoom mode.

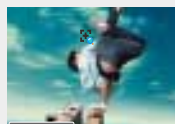

- 4** Press the B button to exit zoom mode.
Zoom cursor is disappeared and the original image is played.



6 Help about photo viewing



Press the ?(Help) button.
The explanation about each button is displayed.

Press the ?(Help) button again to exit Help.



Viewing photo files

4 Exit viewing photo files



- 1** Press and hold the ► button to stop playback while image file is playing.
Playlist screen is displayed.



 
- 2** Press and hold the ► button again.
Image viewing exit and function selection screen is displayed.

Using playlists


① Playing with playlists



- 1** Press the B button to open Browser at the stop mode.
You can select Browser or Playlist by turns by pressing the B button.
The playable files with the selected program is only displayed

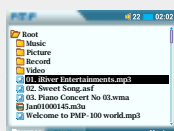

<Browser>

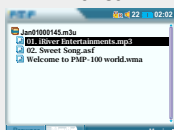 

<Playlist>



- 2** Press the SELECT button after selecting Playlist to play by using the ◀▶▶▶ button.



- 3** Press and hold the SELECT to display the pop-up menu.



Using Playlists



- 4** Press the SELECT button after selecting "Open List" by using the ▲▼ button.
Files in the Playlist is displayed..



- 5** Press the B button to select "Playlist" screen.
Confirm the Playlist.



- 6** Press the ▶|| button to play the selected file directly or press the SELECT button after selecting "Play" on the pop-up menu.



The selected files play in sequential order.

