

A photograph of a disassembled laptop, likely a Dell XPS 13, showing the internal components. The laptop is open, and the back cover is removed, revealing the battery, keyboard, and various connectors. Red boxes highlight the 'Main Ant' and 'Aux Ant' locations on the screen bezel. The 'Main Ant' is located near the top edge, and the 'Aux Ant' is located near the bottom edge. The laptop is resting on a blue surface.





