


## 6. SETUP PHOTOS

### 6.1. STANDARD CONFIGURATION


#### DYNAMIC FREQUENCY SELECTION MEASUREMENT SETUP

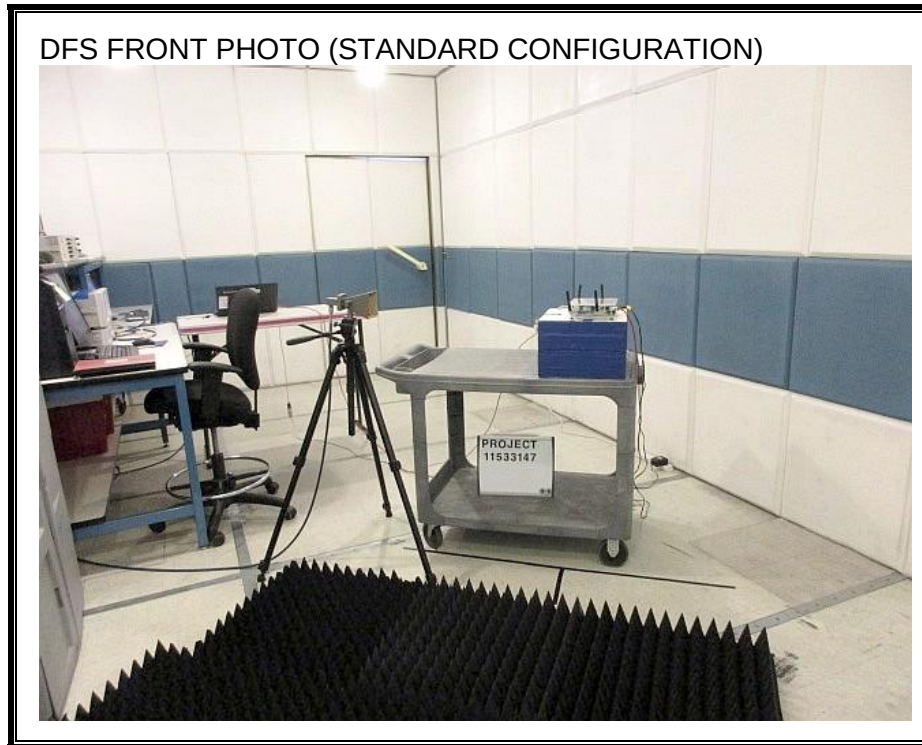




## 6.2. BRIDGE MODE CONFIGURATION

### DYNAMIC FREQUENCY SELECTION MEASUREMENT SETUP

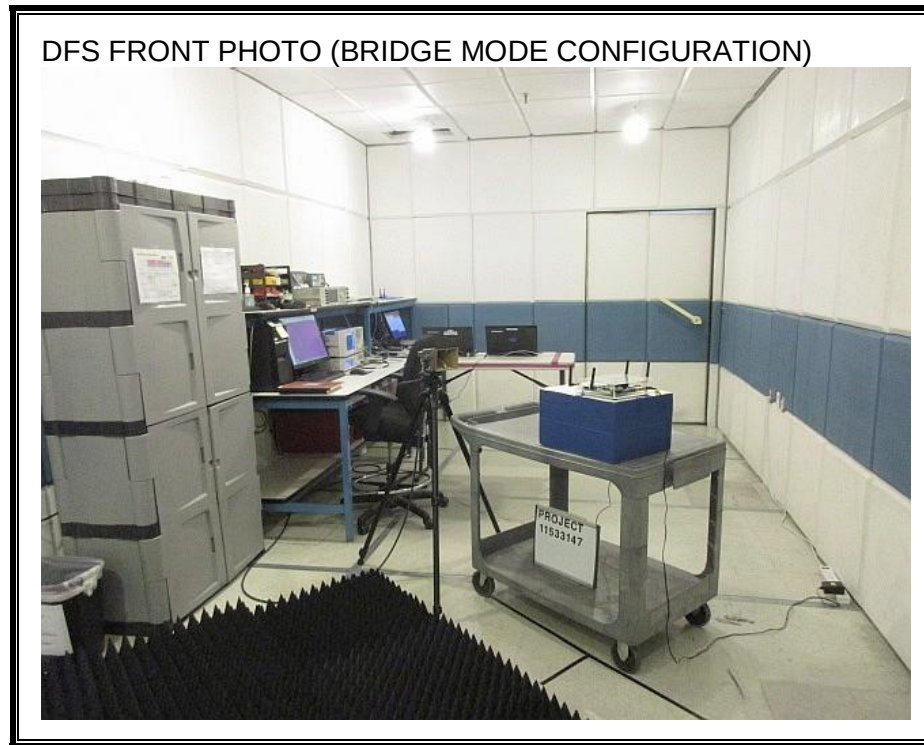

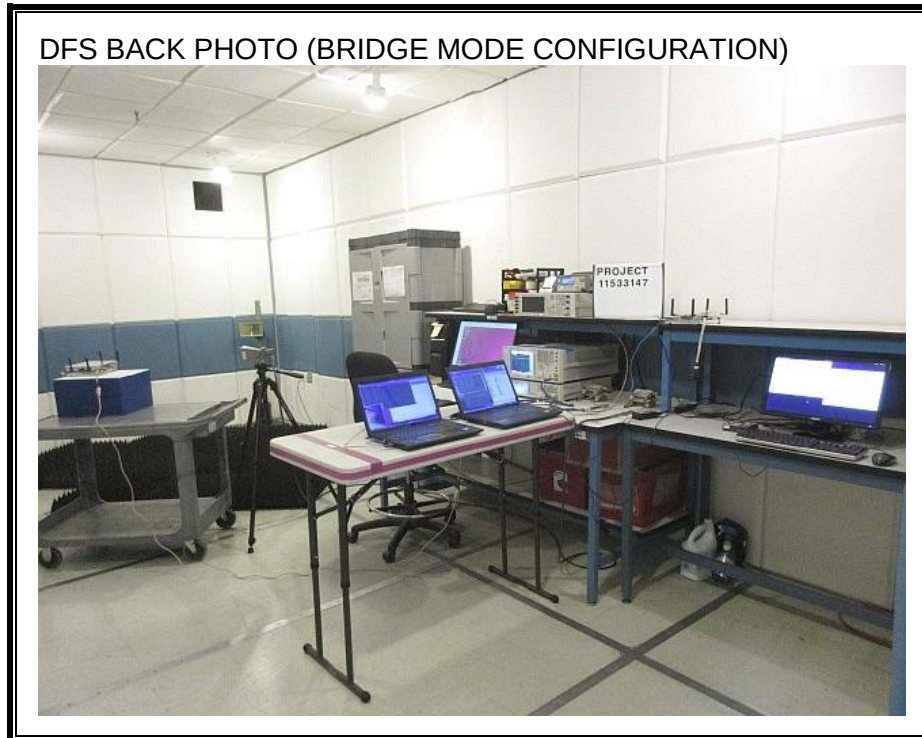

**END OF REPORT**