 



BATTERY INSTALLATION FOR THE HAND HELD UNIT:

1. Unscrew the battery compartment door with a small Philip's screwdriver. (Fig. 4)

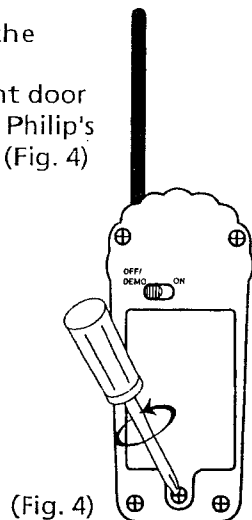

(Fig. 4)

 2. Replace 3x1.5V (AAA-LR03) Alkaline batteries as shown in Fig. 5

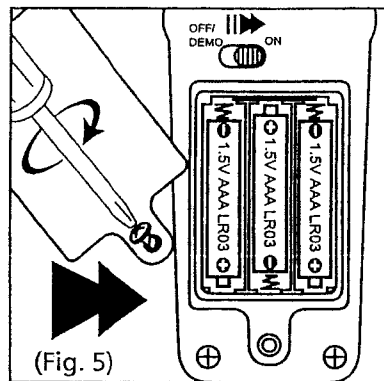

(Fig. 5)

3. Replace the battery compartment door and slide the switch from "OFF/DEMO" to the "ON" position.

 
Hayley's voice will come out of the Hand Held Unit, "Let's play Hide-N-Seek - Listen To My Clues."...

4. The "TRY ME" button on the front will be disabled once the unit is in the "ON" position.

HOW TO PLAY WITH HAYLEY:

1. Twist the legs of Hayley so that she is in a sitting position. (Fig. 6)

2. Hide Hayley anywhere you want making sure she is in an upright sitting position.

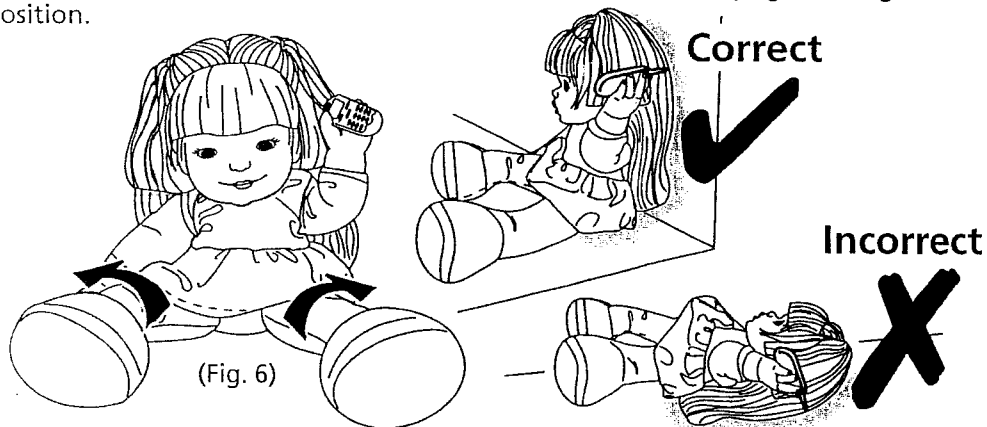

(Fig. 6)

3. The child (Seeker) will get messages from Hayley through the Hand Held Unit. Hayley will tease the seeker with sayings like: "I Love Playing With You!" & "Hurry, Come Find Me!"...

4. The seeker can call out to Hayley by pressing the "PLAY" button once and Hayley will respond as the seeker looks for her. (Fig. 7)

5. Hayley knows just where the seeker is, and is in constant communication with the seeker. If the seeker is away, Hayley will give clues like: "You Looks Like A Popsicle"... If the seeker is very close, Hayley will give clues like: "I'm Not That Far, Look I'm Waving At You"...

6. The LED indicators on the front of the Hand Held Unit will also indicate if the seeker is far away from Hayley or not:

Blue - The seeker is at a far distance

Yellow - The seeker is getting close but is at a medium distance

Red - The seeker is very close

7. When the red indicator lights up, the seeker knows they are very close. Continue to search for Hayley and when you find her she will say: "Wow You Did A Great Job! Let's Play Again!"...

8. Repeat step 1-7 to play again.

If the red indicator does not light up when the Hand Held Unit is very close to Hayley, interference may be occurring. Try to move Hayley to some other locations and try again. Also, Hayley's batteries could be weak, please replace all batteries by an adult.

FINISHED PLAYING WITH HAYLEY:

1. Slide the ON/OFF switch on the back of Hand Held Unit to the "OFF/DEMO" position.

2. Open the fastener strip on the back of Hayley and slide the ON/OFF switch to the "OFF" position.

 
IMPORTANT NOTES:

1. The doll itself does not talk. Hayley's voice comes out of the Hand Held Unit only.

2. You have to turn off the power of the Hand Held Unit AND the module inside Hayley when you finished playing with Hayley, or the batteries will be drained quickly.

3. Do not Hide Hayley inside any metallic containers (e.g. Refrigerator or Oven) or near large metallic objects, as it will affect the signals transmitted from Hayley.

4. If there is no response from the Hand Held Unit even when the seeker has pressed the "PLAY" button, check if the power switch in the back is in the "ON" position.

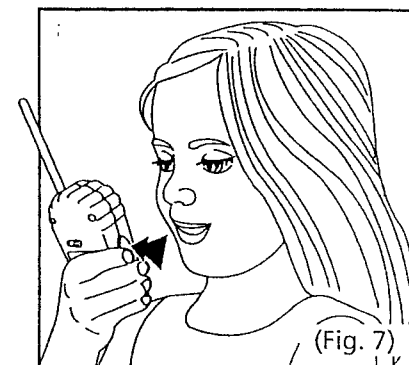

(Fig. 7)

5. If the blue indicator does not change to yellow or red even the seeker has moved closer to Hayley, check if the power switch in the back of Hayley is in the "ON" position.

6. When the Hand Held Unit is in the "OFF/DEMO" mode, the "TRY ME" button on the front will be activated. Once the "TRY ME" button is pressed, a demo sequence will be triggered. The unit will go into sleeping mode when the sequence completed, and will not be reactivated until the "TRY ME" button is pressed again.

BATTERY PRECAUTIONS:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Check and replace batteries periodically to prevent corrosion.
- Keep unit away from extreme heat.
- Do not dispose of batteries in fire, batteries may explode or leak.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference, including interference that may cause undesired operation.

Hereby, Kid-Riffic Toys Ltd., declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

U.S. Patent # 6,494,457

© 2004 Kid-Riffic Toys Ltd. All Rights Reserved.

2300 Millpark Drive, Suite 114, St. Louis, MO 63043, U.S.A.

For parts or service questions in the U.S.A. and Canada call: 1-888-565-1777 or
contact: www.kid-riffic.com MADE IN CHINA No. 5801

For ages 3 & up

Hide N Seek Hayley™ Operating Instruction



No. 5801

(V2/05)

 
WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

CAUTION:

Adult supervision is required when play with this product.
Only adult should replace batteries.



Hayley requires 4x1.5V (AAA-LR03) Alkaline batteries, and the Hand Held Unit requires 3x1.5V (AAA-LR03) Alkaline batteries.

BATTERY INSTALLATION FOR HAYLEY:

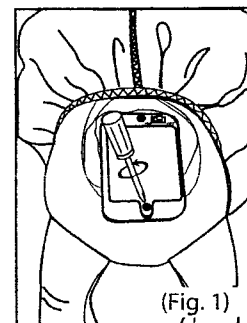

1. Open the fastener strip on the back of Hayley and open the battery compartment door with a small Philip's screwdriver. (Fig. 1)

  2. Install 4x1.5V (AAA-LR03) Alkaline batteries into the battery compartment as shown in Fig. 2

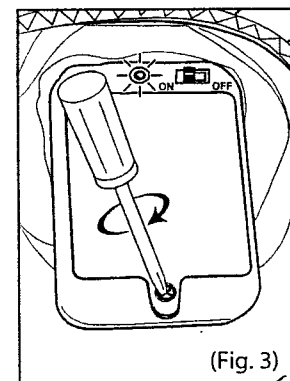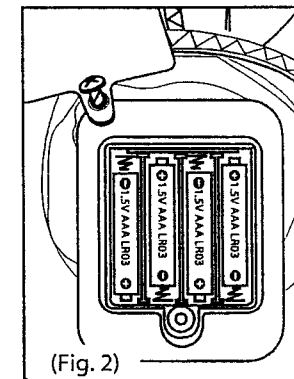

3. Replace the battery compartment door and slide the ON/OFF switch to the "ON" position. The LED will light up to indicate the circuit is activated. (Fig. 3)

4. Close the fastener strip.