

OSD(On Screen Display) BUTTONS



: Opens and closes the OSD window.



 
 
 
 
 
: Changes audio volume without OSD.
Select a menu on OSD mode.



: Selects a channel on TV MODE without OSD.
Moves to a menu on OSD mode.





MAIN MENU

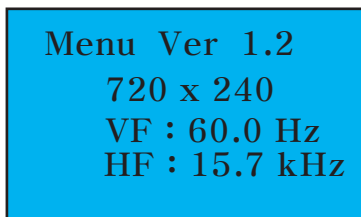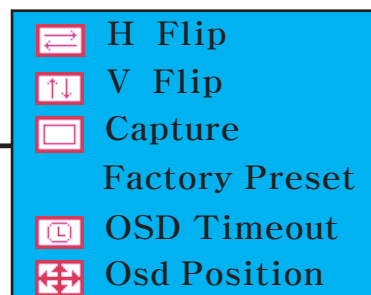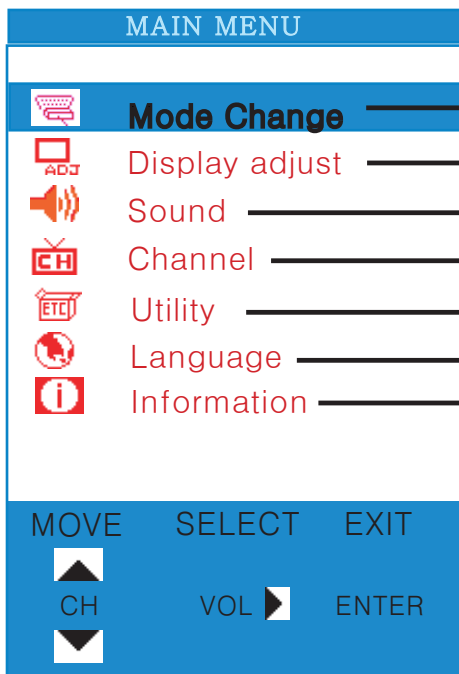

OSD ADJUSTMENT (TV / Video / S-Video MODE)

 
 
Select TV

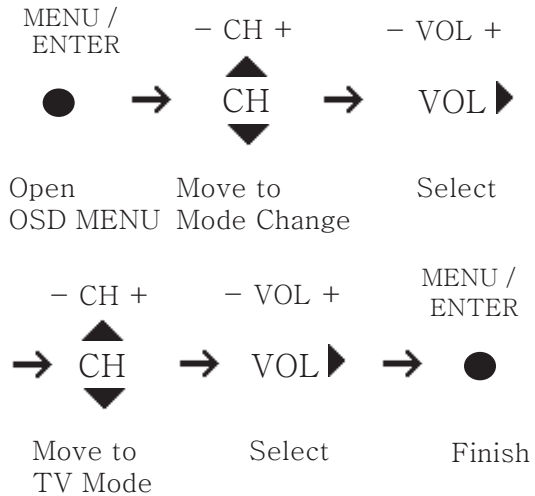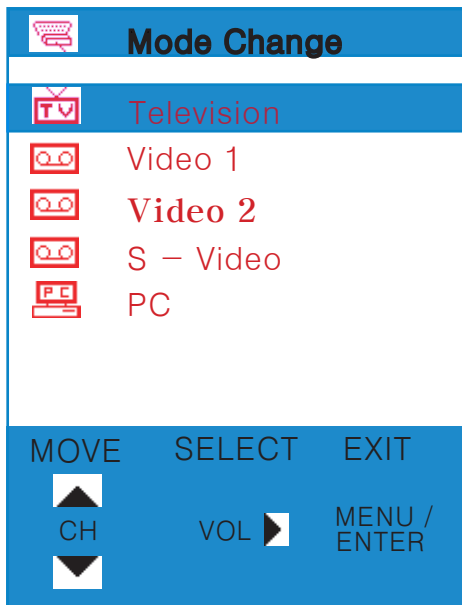



- Move and Select TV or Video or S-Video

Display Adjustment

 
 
Brightness Adjustment

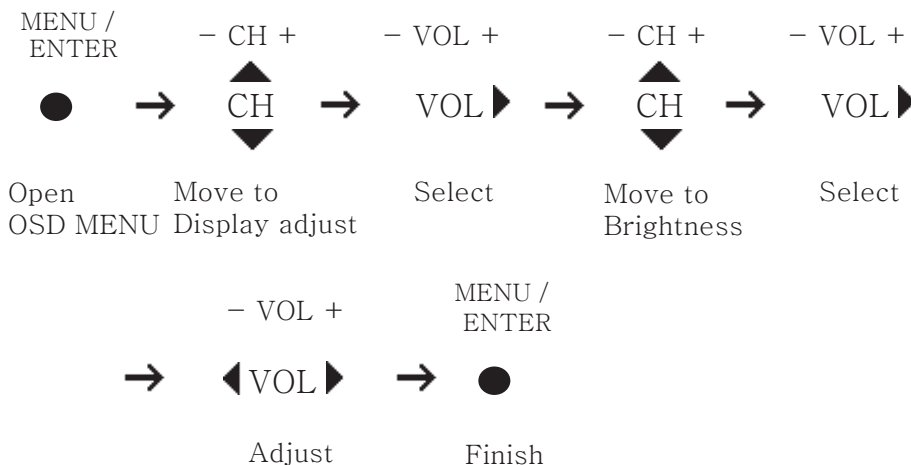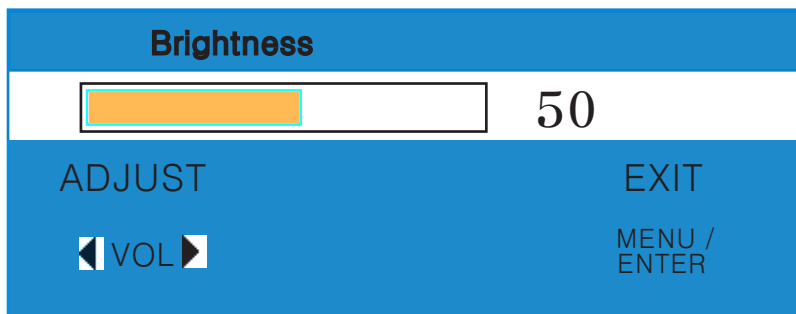



– Contrast Adjustment

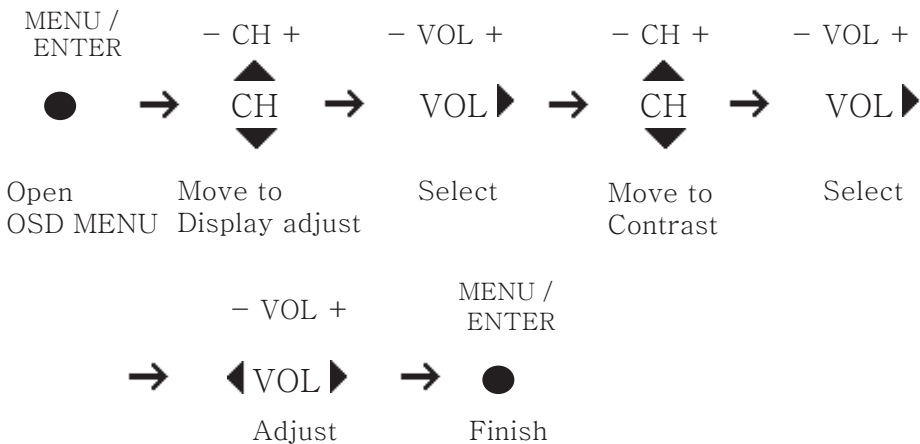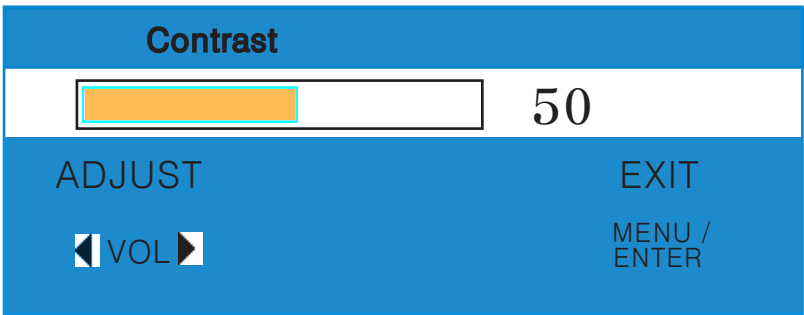  

– Saturation Adjustment

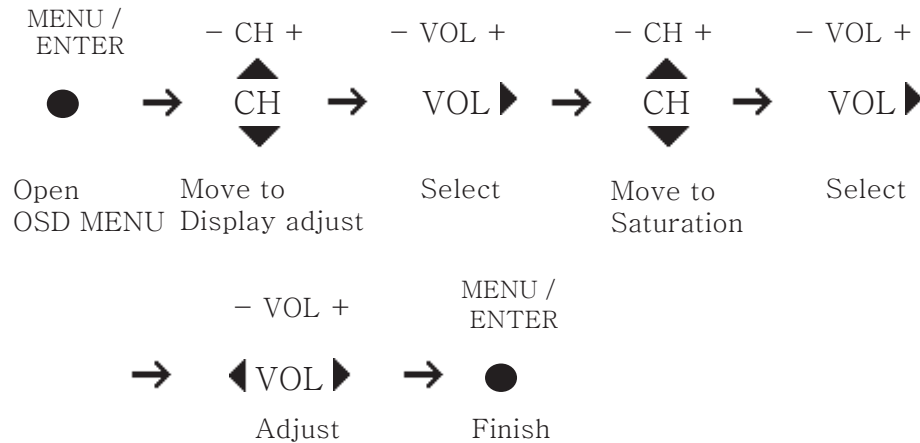 
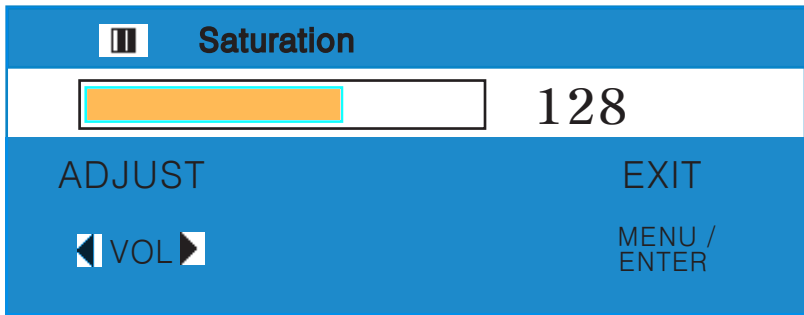 


– Hue Adjustmnet

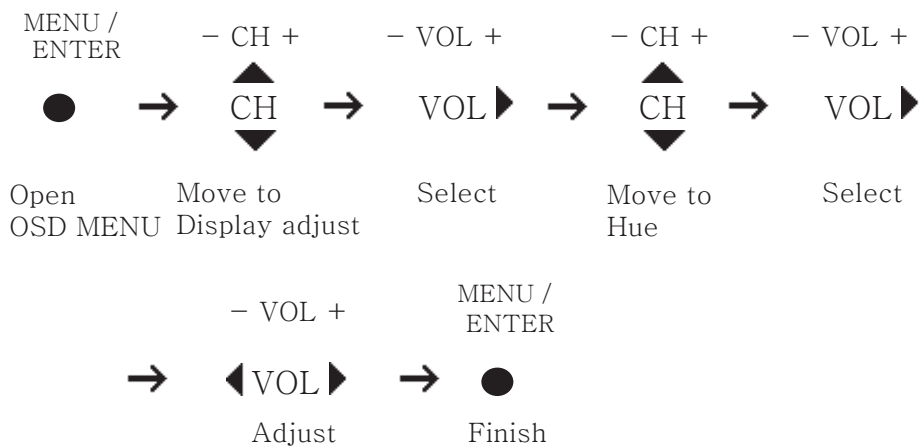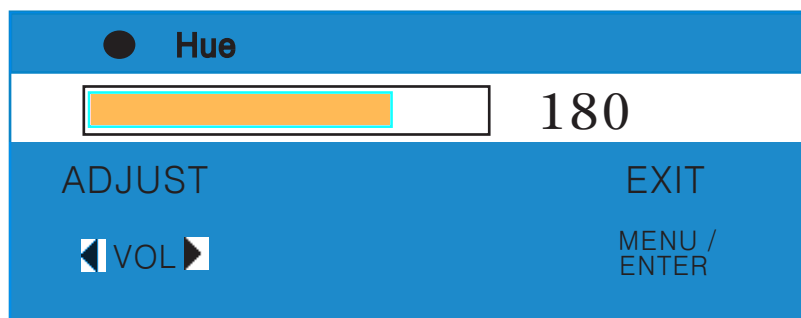  


■ Sound Adjustment

  
- Volume Adjustment

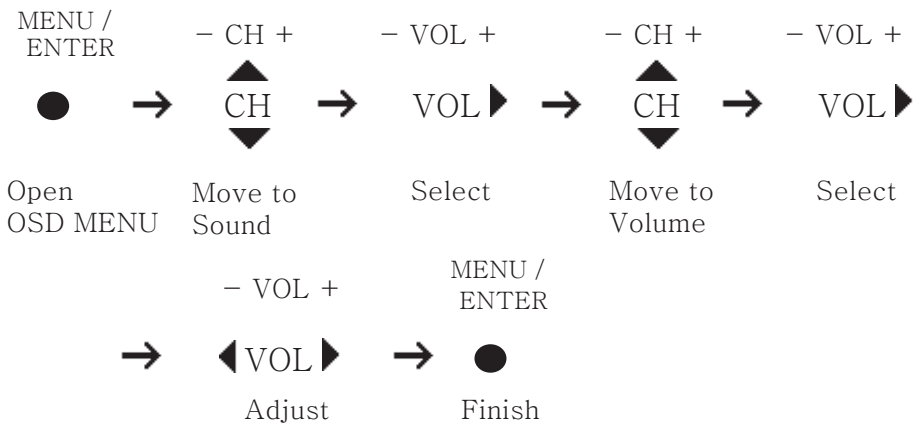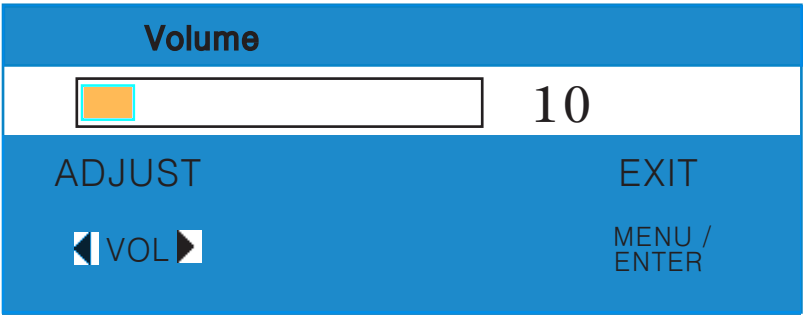


- Mute

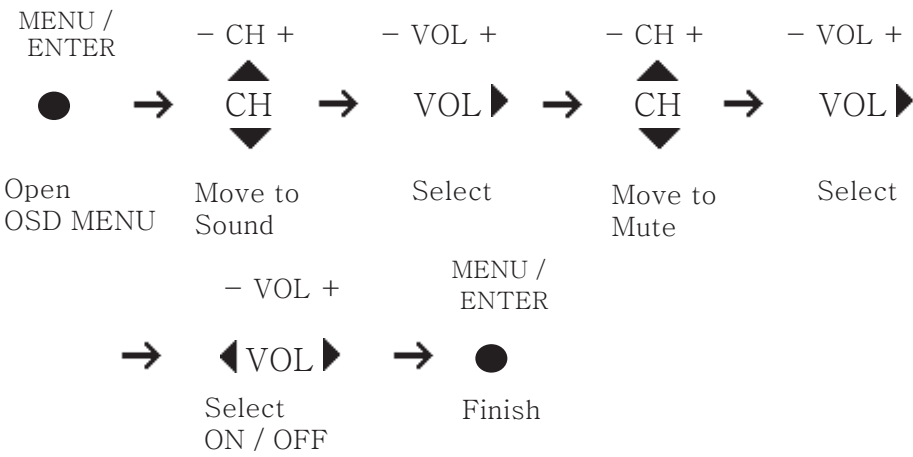 



- Channel Add/Delete

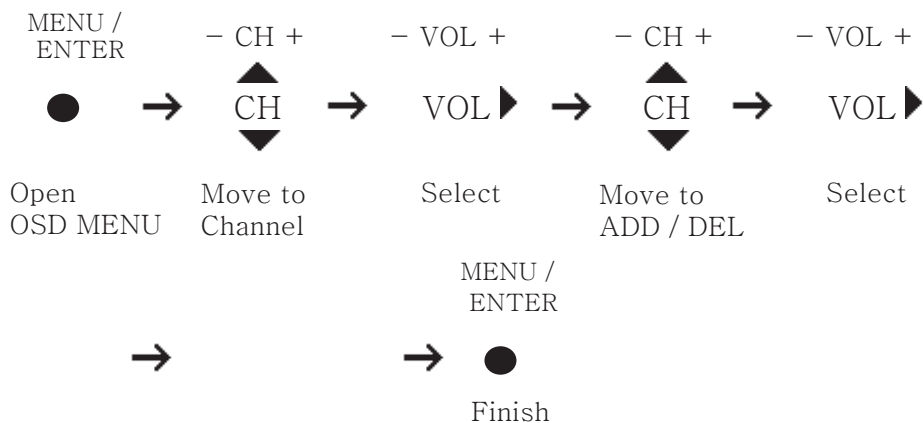 



- Auto Search

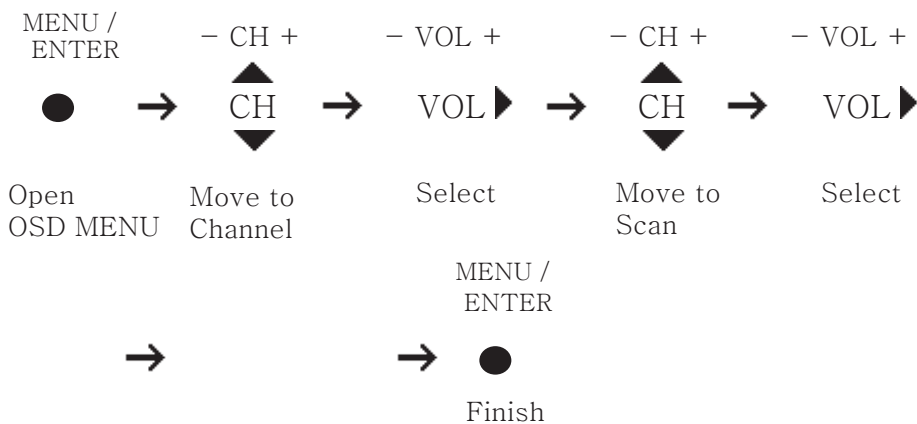 

- TV System

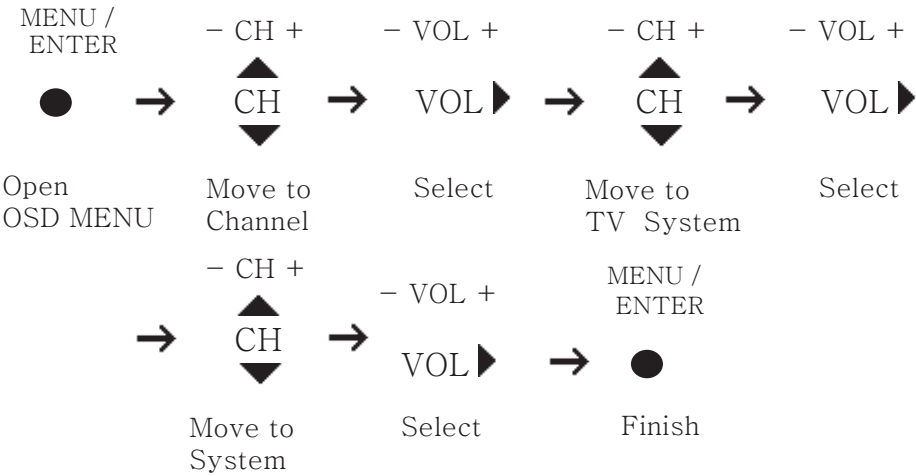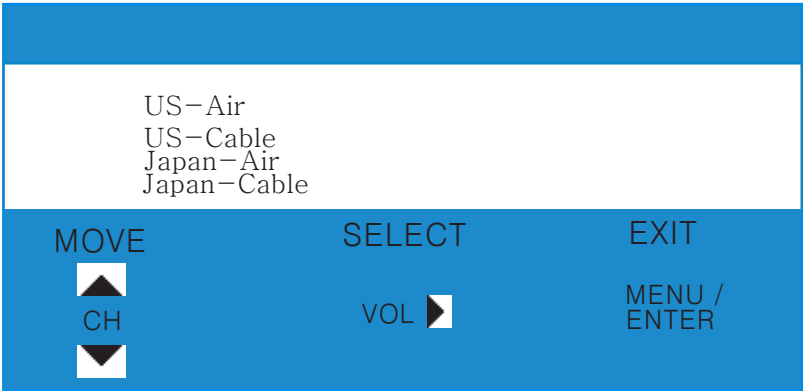  


- Fine Adjustment

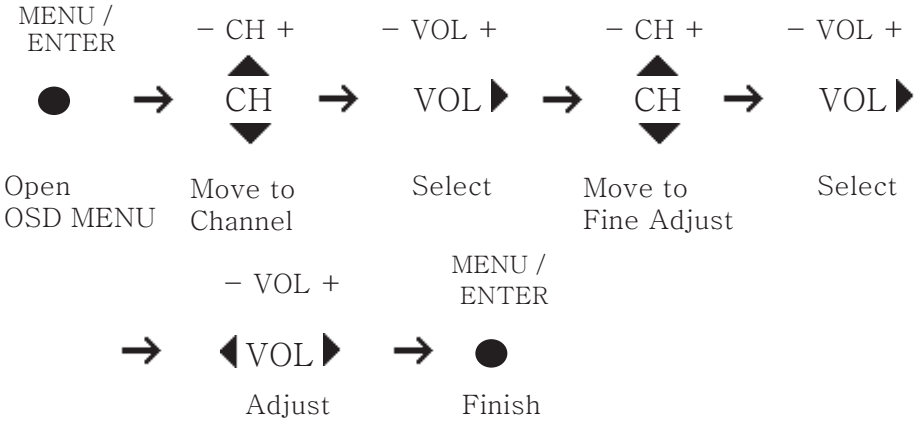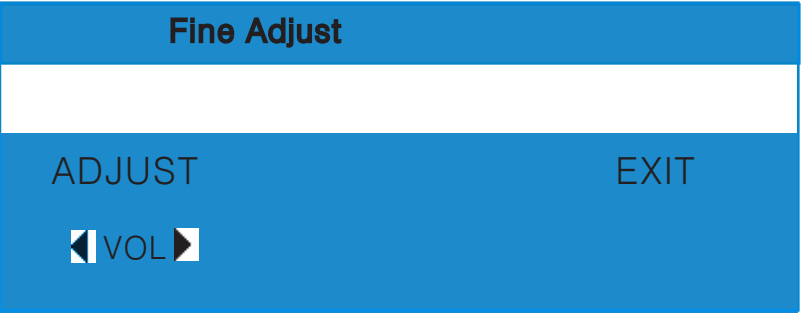  


- Capture

Capture		
Yes No		
MOVE	SELECT	EXIT
▲ CH ▼	VOL ▶	MENU / ENTER


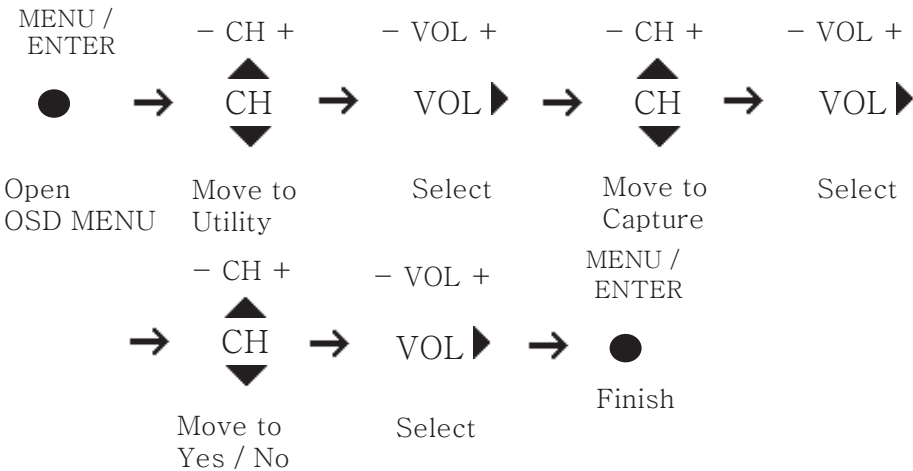 


- Factory Preset

Factory Preset		
Yes No		
MOVE	SELECT	EXIT
▲ CH ▼	VOL ▶	MENU / ENTER

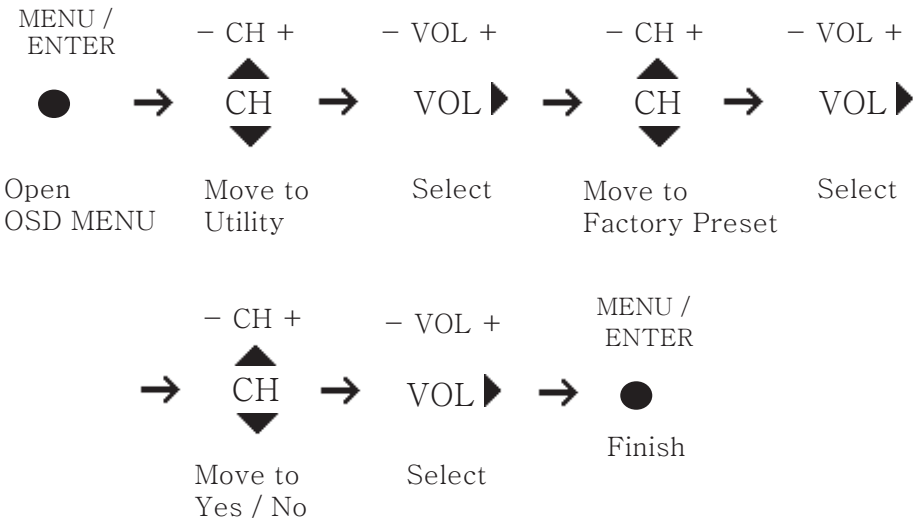 

– OSD Timeout

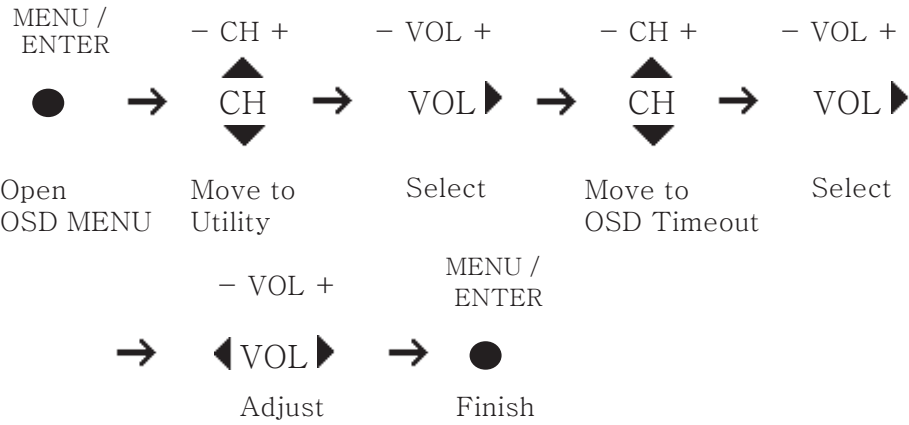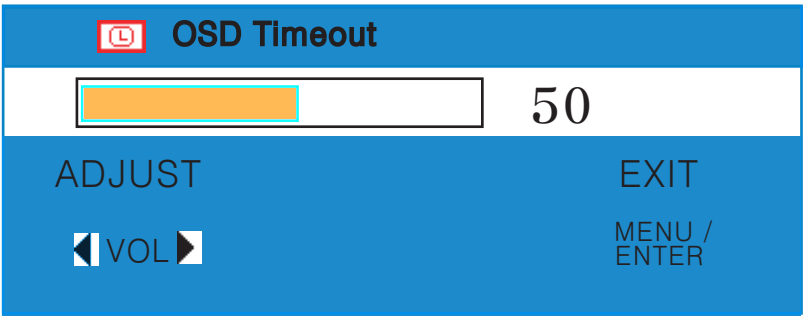  

- OSD Position Adjustment
- Horizontal Position Adjustment


H-Position

 
50

ADJUST

◀VOL▶

EXIT

MENU / ENTER

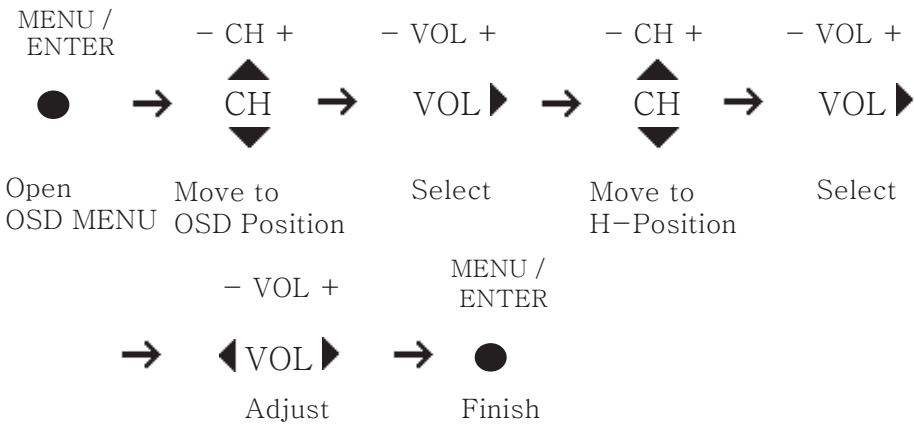

Vertical Position Adjustment


V-Position

50

ADJUST

◀VOL▶

EXIT

MENU / ENTER

MENU / ENTER

→

- CH +

▲

CH

▼

→

- VOL +

VOL▶

→

- CH +

▲

CH

▼

→

- VOL +

VOL▶

Open OSD MENU

Move to OSD Position

Select

Move to V-Position

Select

→

- VOL +

◀VOL▶

→

MENU / ENTER

 
 
●

Adjust

Finish

INSTRUCTION

– Language Selection

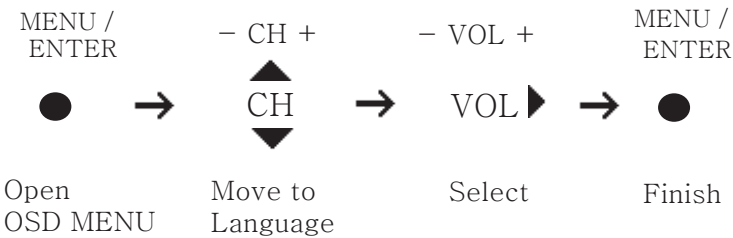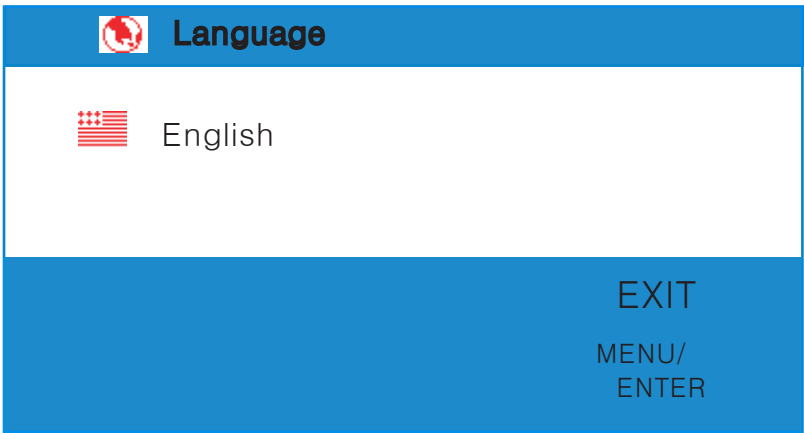

– Information

