

HOW TO USE VOTE-TRAKKER


1. Press on the “Press to Begin Voting” bar on the screen.



2. Insert your VID card into the card slot on the right side.



3. Make your selection for Party Line or Not Party Line voting.

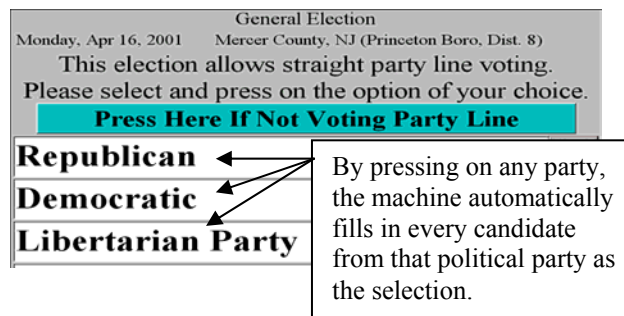

4. Make your selections for each contest and question.

Choice 1: Press on a candidate's name to select it

Choice 2: Press on "Write-In" to enter a not-listed candidate.

Choice 3: Press on "No Vote" to abstain.

General Election
Worcester County, NJ (Worcester Precinct, Dist. 16) Monday, Apr 16, 2001
Presidential Elector For
(Vote for 1. Press on your choice.)

Republican	George W. BUSH
	Dick CHENEY
Democratic	Al GORE
	Joe Lieberman
Libertarian Party	Harry BROWNE
	Art Olivier
Constitution Party	Howard PHILLIPS
	Curtis Frazier
Independent	John HAGELIN
	Laura Tricadi
Reform Party	

Cast Vote **No Vote (Abstain)** **Write-In Candidate**

5. When all the contests and questions have been completed press the large yellow "Cast Vote" bar.

The following represents your current choices. Pressing any of the boxes will allow you to change that choice.

President and Vice President Republican George W. BUSH Dick CHENEY	State Senator Democratic John S. CORZINE
Mayor Republican Dink ZIMMER	Congressman Dem-Partner Dawn MARTIN
Public Question YES	

Cast Vote

😊 You have just completed your choices. If you want to change any selection, press that selection box on the left. Otherwise, press the "Cast Vote" button to continue.

6. You will asked to verify your vote. You may change your selection at any time by simply pressing on that contest on the left side of the screen.