

Setting the Operating Time

Press the OFF button to call up the next operating time.
To store the setting:
- do not actuate any button for 10 seconds, or
- actuate the ON button.



Returning to the Default Setting


Press the ON and OFF buttons simultaneously for approx. 10 seconds until the LED extinguishes.



Default setting: heating mode, 30 minutes.

Checking the Batteries

Press the ON or OFF button.

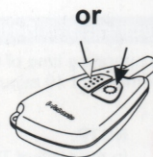

Batteries	LED	Action
okay	after 1 sec. lights up for 0.5 sec.	
low charge	after 1 sec. flashes in orange for 3 sec.	- Warm up batteries to above 0°C - Replace batteries at the next opportunity
discharged	after 1 sec. lights up for 5 sec. in orange	- Warm up batteries to above 0°C - Replace batteries

CAUTION

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


FCC ID: QNFT70-USA-RX
FCC ID: QNFT70-USA-TX

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interferences, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Operating Instructions Telestart T70



Webasto Thermosysteme GmbH
Postfach 80 - D-82132 Stockdorf - Hotline (01805) 93 22 78
Hotfax (0395) 55 92-353 - <http://www.webasto.de>

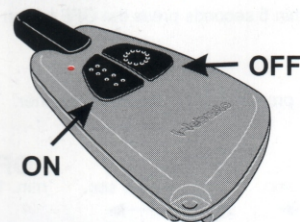

General


The wireless Webasto Telestart T70 enables Webasto heating units - Thermo Top, Thermo Top T, Thermo Top Z/C and Thermo Top E - or the vehicle fan to be switched on and off from a distance of up to 600 m. To switch on the vehicle fan for ventilating the vehicle interior requires a mode change on the transmitter to be carried out. The receiver limits the operating time once the heater has been switched on by the transmitter. The maximum range can be achieved in open country. In built-in areas the range is likely to be reduced.

NOTE:

A minimum distance of 2 m must be maintained between the Telestart hand-held transmitter and the antenna in the vehicle in the following cases:

- teaching the codes of the Telestart hand-held transmitter
- switching the heater on and off
- switching the vehicle fan on and off.

Or else, cover the antenna at the hand-held transmitter with your hand during the transmitting operation.

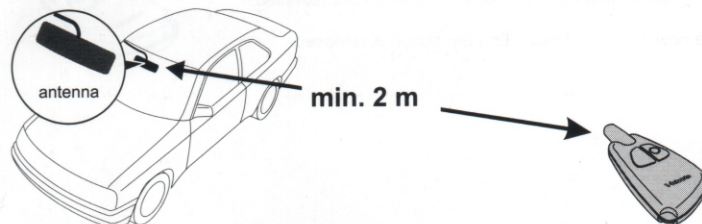

ste 60/0012

3/0003

Ident-Nr. 670 788