


SMM-112

- PROFESSIONAL WIRELESS MICROPHONE


Please read before using this unit.

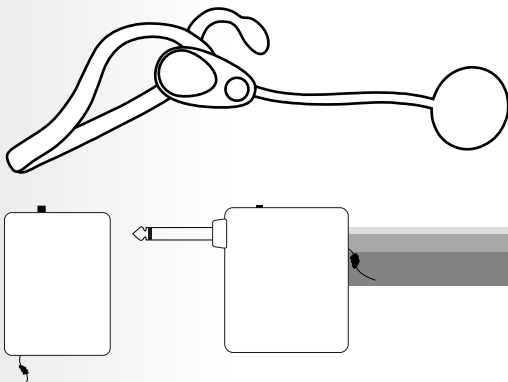

CE 06780

Contents

 1. Headset Wireless Microphone x 1
2. Microphone Receiver x 1
3. Microphone Transmitter x 1



Congratulations on your purchase of a Singing Machine Wireless Microphone. We at the Singing Machine know that it will provide you and your friends with endless hours of entertainment. Inside you will find instructions on how to use and maintain this unit.

Microphone Transmitter Details

Settings

The switch on the transmitter of your Singing Machine Wireless Microphone has three settings:

1. ON - The switch is set to ON position. The microphone will function. The red indicator light is on. The microphone will use battery power.
2. STANDBY - The switch is set to STANDBY position. The microphone will not function. The red indicator light is on. The microphone will use battery power.

NOTE: The purpose of this setting is to maintain a connection between the microphone and the receiver when moving around the area in which it is being used.

3. OFF - The switch is set to OFF position. The microphone will not function. The red indicator light is off. The microphone will not use battery power.

Important Note: When the microphone transmitter switch is set to OFF, noise may be generated from the karaoke machine. Please make sure to reduce both the MASTER VOLUME and MIC VOLUME to the low level OR switch off the receiver before turning off your microphone.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into the slot located at the bottom of the transmitter.
2. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
3. Plug the 3.5mm microphone cord into the transmitter input jack.
4. Hold the transmitter on the belt by attached clip.
5. Properly wear the wireless headset microphone and adjust the mic head by its flexible cord to appropriate position.
6. Set the switch on the transmitter to the STANDBY position.
7. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
8. Set the switch on your Singing Machine karaoke machine to the ON position.
9. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
10. Set the switch on the receiver to the ON position.
11. Set the switch on the transmitter to the top ON position.

Your Singing Machine Wireless Microphone set is now ready for use!

Maintenance

- To ensure long battery life, please make sure that both the Receiver and the Transmitter are set to the OFF position when not in use. To be absolutely certain, we advise you to remove the 9-Volt batteries from both the Receiver and the Transmitter when they are not in use.
- Please remove the Receiver from the Microphone Input Jack of your Singing Machine karaoke machine when not in use. This will reduce the possibility of damage to the Receiver.

Troubleshooting

1.PROBLEM: The Transmitter indicator light is on, but there is no sound when I sing.

- a) Is the Transmitter switch set to ON?
- b) Is the Singing Machine karaoke machine correctly plugged in and switched on?
- c) Are the Microphone Volume and Master Volume controls of your Singing Machine set to a high enough level?
- d) Does the Receiver contain one (1) 9-volt battery, is it properly connected to your Singing Machine, and is it turned on?

2.PROBLEM: The Receiver indicator light is on, but there is no sound when I sing.

- a) Is the Receiver properly connected to the Singing Machine?
- b) Is the Transmitter switch set to ON?
- c) Does the Transmitter contain one (1) 9-volt battery?
- d) Is the Singing Machine karaoke machine correctly plugged in and switched on?
- e) Are the Microphone Volume and Master Volume controls of the Singing Machine karaoke machine set to a high enough level?

3.PROBLEM: The Singing Machine karaoke machine I am using is switched on, but there is no sound when I sing.

- a) Is the Transmitter switch set to ON?
- b) Does the Transmitter contain one (1) 9-volt battery?
- c) Are the Microphone Volume and Master Volume controls of your Singing Machine set to a high enough level?
- d) Does the Receiver contain one (1) 9-volt battery, is it properly connected to your Singing Machine, and is it turned on?

Troubleshooting

CAUTION: Two of same microphones should not be used in same location unless with one wireless and one wired microphone.

Please call Customer Service at (866) 670-6888 if the Troubleshooting Guide information does not correct your problem.

Servicing of a Singing Machine by an unauthorized repair facility will void your warranty. The Singing Machine cannot guarantee future repairs on machines that have been tampered with by unauthorized personnel.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

The Singing Machine Company, Inc.

6601 Lyons Road, Bldg. A7, Coconut Creek, FL33073-9902, USA.
TEL: (954) 596-1000 FAX: (954) 596-2000

PRINTED IN CHINA

VISIT OUR WEBSITE www.singingmachine.com