 


Call transfer

You can make 2 calls connect each other, and hang up
While on calls

1. Press  (Select)
2.  (Move) to Call transfer
3. Press  (Select)

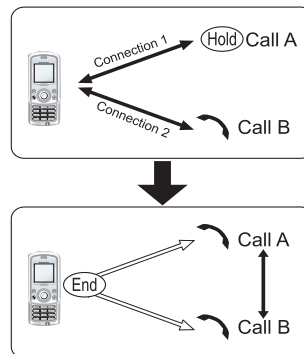

Multi-party (Conference)

You can make Multi-party in one connection and have up to 5 calls in it. Only one Multi-party is available at a time.

Making a Multi-party

While on 2 calls, one connection is on hold

 
 
 
 
1. Press (Select)
2. (Move) to Conference call
3. Press (Select)

Add more calls

You can have up to 5 calls in a Multi-party.

While on a Conference

1. Press (Hold)
The Conference is on hold
2. Make another call
OR
Answer an incoming call
3. Press (Select)
4. (Move) to Conference call
5. Press (Select)

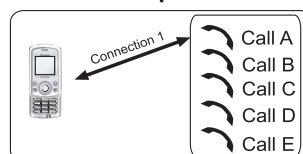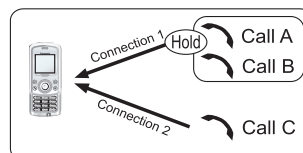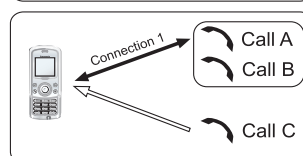
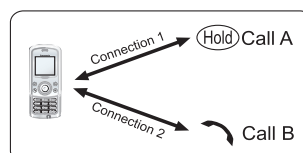


Splitting a call

You can split a call from a Multi-party and make it another connection.

While on a Multi-party

  1. Press (Select)
2. (Move) to Private call
3. Press (Select)
4. (Move) a to required phone number
5. Press (Select)
6. Multi-party is on hold

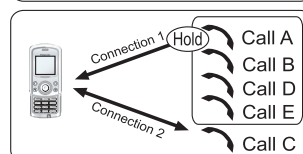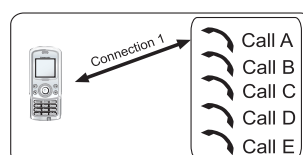


Ending a call in a Multi-party

You can end a call individually.

While on a Multi-party

 1. Press  (Select)
2.  (Move) to Hang up
3. Press  (Select)
4.  (Move) to a required phone number
5. Press  (Select)

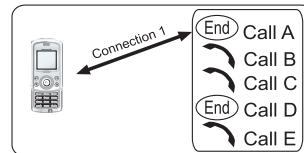


Ending a Multi-party

You can end a Multi-party connection.

While on a Multi-party

 1. Press  (End)
2. All calls are disconnected

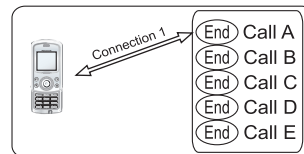

DTMF Tones

DTMF (Dual Tone Multi-Frequency) Tones can be sent during a conversation. These are often used to access voice mail, paging and computerised home banking. For example, you may need to enter a number to remotely access voice mail messages. A phone number may be stored in the Contacts together with a DTMF sequence, allowing the number to be dialled upon recall and the DTMF sequence to be sent automatically.



Text Entry

You can use alphanumeric characters to enter text.

	Text Mode					
Key	T9®	Normal (U)	Greek (V)	Extended (W)	Numeric (0 ~ 9)	
	Alternatives	+ _	+ _	+ _	0	
	Punctuation	. @ / : ; * # + - " , ! ; ? ' _ () [] { } & % \ ^ ~ < > = € £ \$ ¥ ¢ §				1
	abc	ABCabc	ABÃ	AAÄÆBCÇ aaaæabc	2	
	def	DEFdef	ÄEÆ	DEÉFdeèéf	3	
	ghi	GHIghi	ÇÈÉ	GHIghii	4	
	jkl	JKLjkl	ÊËÌ	JKLjkl	5	
	mno	MNOmno	ÏÏ	MNÑOOØ mnñooøò	6	
	pqrs	PQRSpqrs	ÐÑÓ	PQRSpqrsß	7	
	tuv	TUVtuv	ÔÖÖ	TUÜVtuüüv	8	
	wxyz	WXYZwxyz	×ØÙ	WXYZwxyz	9	
	Shift/Lock*	Shift/Lock*		Shift/Lock	*	
	Space	Space	Space	Space	#	



  Note: Press once to enter a single capital letter (subsequent characters will be lower case). Pressing * twice acts as a keyboard CAPS LOCK function and subsequent characters will be uppercase. Press a third time to return to lowercase character entry.

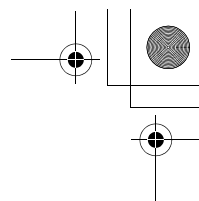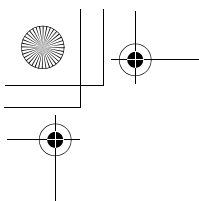

T9® Text Input

Using this mode of text entry dramatically reduces the number of key presses required:

Press a key once for any letter you require on that key. The desired letter may not be displayed. Continue pressing other keys until the end of a word is reached; then check that the word has been typed correctly before continuing on to the next word.

If the combination of letters typed has produced a word which is not the one you require, press  repeatedly until the correct word is displayed. Continue to the next word.

If the word you require is not in the internal dictionary (i.e. it is a proper noun or a rarely used word) then it should be entered using the Normal () mode.

Other Text Modes

 
 
 
To access any of the other text entry modes use  to cycle through until the desired mode is displayed in the left side of the display.

 
 
When using Normal (), Greek () or Extended () text entry modes, each time a key is pressed in quick succession it will display the next character available on that key. Releasing the key, or pressing another key will enter the currently displayed character and the cursor will move to the next position.

Editing Text






Pressing  will move you up or down one text line.

Pressing  will move you left or right one character. When the cursor is moved over a character and another key pressed this will insert the new character immediately before the selected character. Pressing  will delete the character to the left of the cursor or delete the current line when pressed and held.

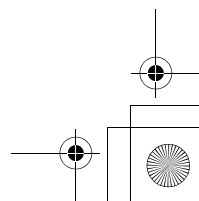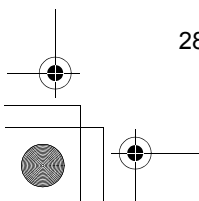

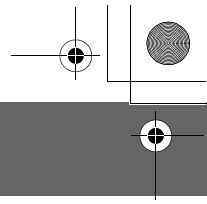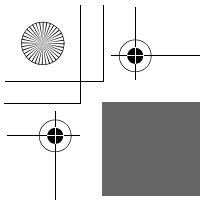

Exploring the Menus

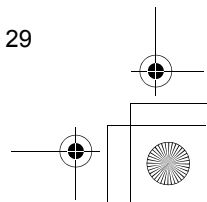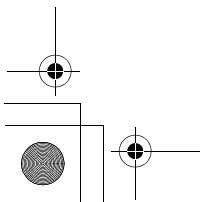     

My Phone

You can customize the phone with this My Phone menu which has various setting options for different events and environments.

Profiles

You can switch in 4 different ways, each with a distinct combination settings of Ring Volume, Ring Type, Message Tone, Slide Open Tone, Slide Close Tone, Keypad Tone, Warning Tone, Alerting Method.



Normal	Suitable for everyday settings
Quiet	Ringtone for formal occasions
Outdoors	For noisy environments
Headset	Ringing with vibration when it is difficult to hear the ringtone
Meeting	For meeting
Customer	For business settings

Editing a profile

From Profile menu

1. (Move) to a required sound set
2. Press (Select)
3. Press (Select) Edit
4. (Move) to a required setting (see "Sounds" on page 31)



Activating a profile

From Profiles menu

1. (Move) to a required sound set
2. Press (Select)
3. (Move) to a required Activate
4. Press (Select)

Sounds

You can select each sound from various preinstalled selection or downloaded melodies.

Volume

You can controll volume of the tone.

From Sounds menu

1. Press  (Select) Volume
2. The phone will start to ring
3.  (Control) the volume
 or  Volume up
 or  Volume down
4. Press  (OK)

Ringtone

You can select a sound of ringtone from various preinstalled selection or downloaded melodies.

From Sounds menu

1.  (Move) to Ringtone
2. Press  (Select)
3.  (Move) to Preinstalled or User data
4. Press  (Select)
5.  (Move) to a required sound and sample sound will be played
6. Press  (OK)



Message tone

You can select a sound of ringtone from various preinstalled selection or downloaded melodies.

From Sounds menu

1. ⏏(Move) to Message tone
2. Press ⏏(Select)
3. ⏏(Move) to Preinstalled or User data
4. Press ⏏(Select)
5. ⏏(Move) to a required sound and sample sound will be played
6. Press ⏏(OK)



Slide open tone

You can set outgoing ringtone Off or select melody from various preinstalled selection or downloaded melodies.

From Sounds menu

1. ⏏(Move) to Slide open tone
2. Press ⏏(Select)
3. ⏏(Move) to Preinstalled or User data
4. Press ⏏(Select)
5. ⏏(Move) to a required sound and sample sound will be played
6. Press ⏏(OK)



Slide close tone

You can set outgoing ringtone Off or select melody from various selection or downloaded melodies.

From Sounds menu

1. ⏏(Move) to Slide close tone
2. Press ⏏(Select)
3. ⏏(Move) to Preinstalled or User data
4. Press ⏏(Select)
5. ⏏(Move) to a required sound and sample sound will be played
6. Press ⏏(OK)



Key tone

The key tone is the sound you hear when you press a key.

From Sounds menu

1.  (Move) to Key tone
2. Press  (Select)
3.  (Move) to On or Off
4. Press  (Select)



Warning tone

Warning tone informs you of low battery.

From Sounds menu

1.  (Move) to Warning tone
2. Press  (Select)
3.  (Move) to On or Off
4. Press  (Select)



Alerts

You can set the phone how the Alerts informs you.

From Sounds menu

1.  (Move) to Alerts
2. Press  (Select)
3.  (Move) to On or Off
4. Press  (Select)



Display

Wallpaper

You can change the Wallpaper of the idle screen.

From Display menu

1. (Move) to Wallpaper
2. Press (Select)
3. (Move) to a required folder
4. Press (Select)
5. (Move) to a required Wallpaper
6. Press (Select)



Colour themes

You can change the Colour themes which affect the colour of the cursor and text.

From Display menu

1. (Move) to Colour themes
2. Press (Select)
3. (Move) to a required Colour theme
4. Press (Select)



 
 
Greeting

You can set your original greeting which is displayed after startup animation.

From Display menu

1. (Move) to Greeting
2. Press (Select)
3. Enter your original greeting
See "Text Entry" on page 27 for entering text
4. Press (OK)



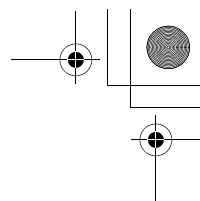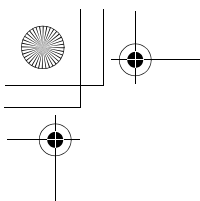

Operator notice

Operator notice is the feature which remind you how to operate selected feature after you left the display idle few minites.

From Display Menu

1. ⬅️ (Move) to Operator notice
2. Press ⬇️ (Select)
3. ⬅️ (Move) to On or Off
4. Press ⬇️ (OK)



Backlight time

You can set the time length of the backlight 3 different length.

From Display Menu

1. ⬅️ (Move) to Backlight time
2. Press ⬇️ (Select)
3. ⬅️ (Move) to a required time length
4. Press ⬇️ (OK)

 
 
 


Key backlight

You can turn on or off the Key backlight for numeric key pad.

From Display Menu

1. ⬅️ (Move) to Key backlight
2. Press ⬇️ (Select)
3. ⬅️ (Move) to On or Off
4. Press ⬇️ (OK)

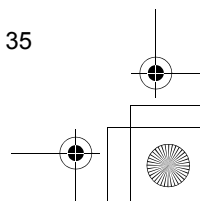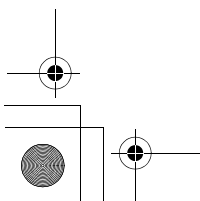

Slide settings

You can set some actions with opening or closing the phone body.

Key guard

You can set the Key guard on or off when closing the phone body.

From Slide settings menu

1.  (Select) Key guard
2.  (Move) to On or Off
3. Press  (OK)



Active slide

Set the Active slide on or off.

From Slide settings menu

1.  (Move) to Active slide
2.  (Select)
3.  (Move) to On or Off
4. Press  (OK)



Open action

You can select the action with opening the phone body.

From Slide settings menu

1.  (Move) to Open action
2.  (Select)
3.  (Move) to a required action
4. Press  (OK)



Language

You can change the display language of the phone. If you select Automatic, the network will select a proper language (A).

From My Phone menu

1. ⬅️ (Move) to Language
2. ⬤ (Select)
3. ⬅️ (Move) to a required language or Automatic
4. Press ⬤ (OK)



Auto answer

When you connect the Personal Handsfree earpiece, you can set the Auto answer on and answer a call automatically.

From Phone Menu

1. ⬅️ (Move) to Auto answer
2. ⬤ (Select)
3. ⬅️ (Move) to On or Off
4. Press ⬤ (OK)



Shortcut key

You can change the function of the right soft key.

From Phone Menu

1. ⬅️ (Move) to Shortcut key
2. Press ⬤ (Select)
3. ⬅️ (Move) to Short press or Long press
4. Press ⬤ (Select)
5. ⬅️ (Move) to a required function
6. Press ⬤ (OK)



Menu view

You can change the method of menu displaying.

From Phone Menu

1.  (Move) to Menu view
2. Press  (Select)
3.  (Move) to a required method
4. Press  (OK)

9 launcher mode

In this mode, you can see whole 1st level of the main menu.

In Main menu

1.  (Move) to a required menu
2. Press  (Select)

OR

 -  are available

Scroll launcher

In this mode, you can roll up/down the menu with  and press  to select a required menu, or you can use  -  to select.

If you press , 3 most frequent used next level menu will be displayed. Use  to select a required menu and press  to select.



Phone settings

You can customize the each phone settings.

From Phone Menu

1. ⤴(Move) to Phone settings
2. Press ⬤(Select)
3. ⤴(Move) to a required settings
4. Press ⬤(Select)



Call service

From Phone settings

1. ⤴(Move) to Call service
2. Press ⬤(Select)
3. ⤴(Move) to a required setting
4. Press ⬤(Select)



Show my number

You can select how display your ID.

From Call service menu

1. Press ⬤(Select)
2. ⤴(Move) to a required method
3. Press ⬤(OK)



Connections

You can see the total of the transfferd data. You can reset the total of All connections data.

From Call service

1. ⤴(Move) to Connections
2. Press ⬤(Select)
3. ⤴(Move) to a required All connections or Last connections
4. Press ⬤(Select)

Service charges

You can control the cost of calls with setting the limit on the cost of calls and charge unit of the call time.

From Call services

1.  (Move) to Service charges
2. Press  (Select)
3.  (Move) to a required item to set

You need to enter the PIN2 code to edit the Max cost and Unit price

Call meters

Check the total of the cost

Available to Reset the total



 
Max cost 

Set the Max cost



Price unit 

Set the price per unit to add up the total

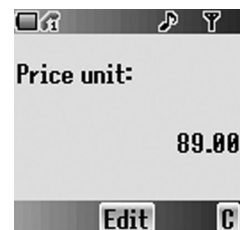

Cost left

Check the Cost left

40 **My Phone**

Calls

You can check the call status.

From Call services

1. ⏏(Move) to Calls
2. Price ⏏(Select)
3. ⏏(Move) to a required status
4. Price ⏏(Select)

Active line

You can select a line to activate.

From Calls menu

1. Press ⏏(Select)
2. ⏏(Move) to Line 1 or Line 2
3. Press ⏏(Select)

Withhold ID

You can check how your call ID is sent.

From Calls menu

 
 
1. ⏏(Move) to Withhold ID
2. Press ⏏(Select)
3. Your sent ID is shown

Caller's ID

You can check how caller's ID is received.

From Calls menu

1. ⏏(Move) to Caller's ID
2. Press ⏏(Select)
3. Received Caller's ID is shown

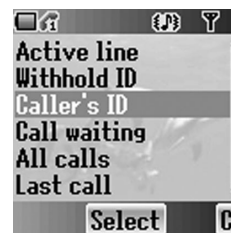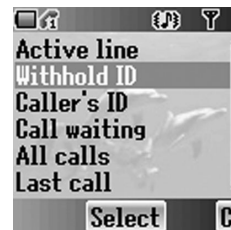

Call waiting

You can activate Call waiting and see the status.

From Calls menu

1. (Move) to Call waiting
2. Press (Select)
3. (Move) to On, Off or Status
4. Press (Select)



All calls

You can see the total of the duration time.

From Calls menu

 
1. (Move) to All calls
2. Press (Select)
Available to Reset the total



Last calls

From Calls menu

1. (Move) to Last call
2. Press (Select)

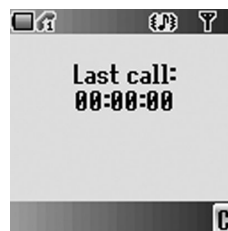

Call diverts

You can divert calls and set the condition by type of the calls.

Cancel all

No calls will be diverted.

From Call diverts

1. Press (Select)
2. Cancel all will be setted



Data calls

Data calls will be diverted.

From Call diverts

1. ⤴(Move) to Data calls
2. Press ⬤(Select)
3. ⤴(Move) to Status, On or Off
When you select On, enter the phone number to divert
4. Press ⬤(Select)



Fax calls

Fax calls will be diverted.

From Call diverts

1. ⤴(Move) to Fax calls
2. Press ⬤(Select)
3. ⤴(Move) to Status, On or Off
When you select On, enter the phone number to divert
4. Press ⬤(Select)

 


Voice calls

You can select from the 4 types of Voice calls.

From Call diverts

1. ⤴(Move) to Voice calls
2. Press ⬤(Select)
3. ⤴(Move) to a required type
4. Press ⬤(Select)
5. ⤴(Move) to Status, On or Off
When you select On, enter the phone number to divert
6. Press ⬤(Select)

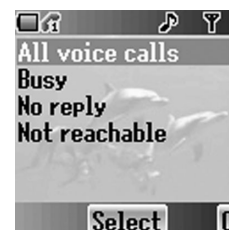

Security

You can put a limit to protect your phone, SIM, calls, information and datas. You must enable the PIN before changing the code.

Fixed dial ☐

You can put a limit your outgoing calls except a certain set of numbers saved in FDN, which is located in your SIM. When Fixed dial is enabled, only FDN is available to dial, and any attempt to call any other number will fail. (see Fixed dial number on page xx)

From Security menu


1. Press  (Select)
2. Enter SIM PIN2 code with  - 
3. Press  (OK)
4.  (Move) to On or Off
5. Press  (OK)

PIN2

You cannot change the PIN2 code without the current PIN2 code.

From Security menu

 1.  (Move) to PIN2
2. Press  (Select)
3. Enter old PIN2 code with  - 
4. Press  (OK)
5. Enter new PIN2 code with  - 
6. Press  (OK)

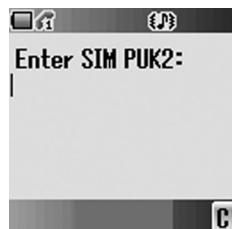

PIN

You can protect your SIM against unauthorised use. If you enable the PIN, every time the phone is switched on, you will be prompted to enter the PIN code.

Enable PIN to change the PIN code and enter PIN to unable.

From Security code

1.  (Move) to PIN
2. Press  (Select)
3.  (Move) to Change or Status
4. Press  (Select)

Changing PIN code

1. Enter old PIN code with  +  
2. Press  (OK)
3. Enter new PIN code with  +  
4. Press  (OK)

Changing the Status

1.  (Move) to On or Off
2. Press  (Select)
3. Enter PIN code with  +  
4. Press  (OK)

Call bar

You can bar certain outgoing and/or incoming calls using password supplied by your service provider. When updating/checking the status of Call bar, the phone must be registered to a network.

From Security menu

1.  (Move) to Call bar
2. Press  (Select)
3.  (Move) to a required function
4. Press  (Select)



Change password

You can change the password.

Cancel all

You can cancel all the Call bar settings.

Bar data

You can bar Data calls and select the type from Off, International calls except home, International calls or All calls.

Bar voice

 
You can bar Voice calls and select the type from Incoming calls and/or Outgoing calls.

Phone lock

You can lock your phone and will be prompted to enter your unlock code when you switch on the phone with a different SIM inserted. If you for get your unlock code, you will need to contact your service provider to unlock the phone.

From Security menu

1.  (Move) to Phone lock
2. Press  (Select)
3.  (Move) to Change code or Status

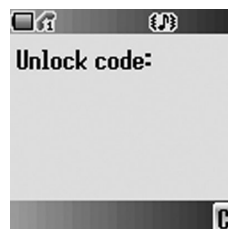

Note: You are advised to write down your unlock code for yourself.

Network

You can select a network that is available in your current location.

From Phone settings menu

1. (Move) to Network
2. Press (Select)
3. (Move) to Search mode or New network
4. Press (Select)

Search mode

You can select an available network by Manual or Automatic.

New network

You can find new network from the list.

Defaults

You can make all personal settings return to the factory default settings.

From My Phone menu

1. (Move) to Defaults
2. Press (Select)
3. Press (Select)



Contacts

You can store phone numbers in two locations, such as SIM Contacts list and the phone Contacts list.



Note: See Text Entry on page xx, for information of entering text.

Contacts list

You can browse SIM and the phone Contacts list individually, or both Contacts lists a time.

Viewing the Contacts list

From Contacts menu

1. (Select)
2. (Move) to a required entry
OR
enter an alphabet to skip to the first entry which starts with that letter



	Located in Phone Contacts list
	Located in SIM Contacts list

In Idle screen

1. Enter any number with -
2. Press (Contacts list)
3. (Move) to SIM or Phone
4. Press (Select)

Viewing the entries in the Contacts list

From Contacts list menu

1. (Move) to a required entry
2. Press (Menu)
3. Press (Select)

