

INSTRUCTIONS

WALKIE TALKIE FEATURES

9-VOLT BATTERY OPERATED
ON / OFF VOLUME CONTROL TO NORMAL LISTENING
PUSH - TO - TALK, RELEASE TO LISTEN BUTTON SWITCH
POWERFUL SIGNAL (4-TRANSISTORS)
FLEXIBLE ANTENNA FOR BEST TRANSMISSION & RECEPTION

HOW TO OPERATE

1. Open battery compartment (Fig. 6) by un-screwing the screw (Fig. 7) and snap in a 9-Volt battery, replace door firmly.
2. Turn the "ON / OFF" switch (Fig. 2) to "ON", and adjust the volume control to normal listening level.
3. Press the "PUSH - TO - TALK" button (Fig. 3) for transmitting, and speak in a normal voice level into the speaker / microphone grille (Fig. 4).
4. Release the "PUSH - TO - TALK" button (Fig. 3) for receiving.
5. Best transmission and reception are obtained when the FLEXIBLE ANTENNA (Fig. 1) is held in vertical position.

1. Your Walkie Talkie have been fully adjusted prior to shipment be sure not to touch the internal components other than replaced the battery.
2. When the sound becomes weak, it is time to change the battery.
3. After use, always turn the ON / OFF / VOLUME CONTROL switch to the "OFF" position.
4. Keep your set in dry place.
5. Take out batteries when Walkie Talkie are not in use.
6. Please do not use any rechargeable batteries.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- ☐ Consult the dealer or an experienced radio / TV technician for help.

