 
 
 


Get Started

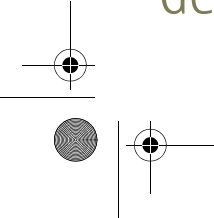

 
Nokia N93i-1

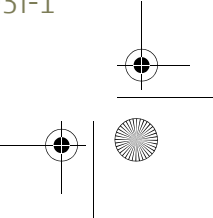

Keys and parts—fold closed


Model number: Nokia N93i-1. Hereinafter referred to as Nokia N93i.

- 1 Main camera unit and lens. Your device has a 3.2 megapixel (2048x1536) main camera for high resolution image capture and video recording.
- 2 LED flash
- 3 Infrared port
- 4 Pop-Port™ connector
- 5 Charger connector
- 6 Loudspeaker outlet
- 7 Cover indicator (only visible when you have missed calls, e-mails, unread messages, or when charging)
- 8 Cover display
- 9 Memory card slot
- 10 Flash key
- 11 Camera mode key
- 12  4-way scroll and selection key
- 13 Capture key
- 14 Zoom key
- 15  Power key
- 16 Stereo microphone

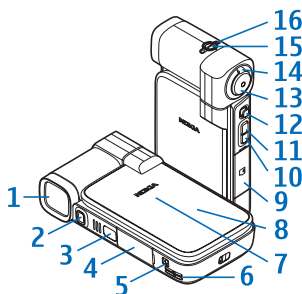

Keys and parts—fold open

 - 1 Secondary camera (1) for video calls (lower resolution than the main camera)
- 2 Right  and  left landscape selection keys
- 3 Right  and left  selection keys
- 4  Menu key
- 5  Call key
- 6  Edit key
- 7 Microphone for voice calls
- 8  Clear key
- 9  End key
- 10  Multimedia key
- 11  4-way scroll and selection key
- 12 Light sensor

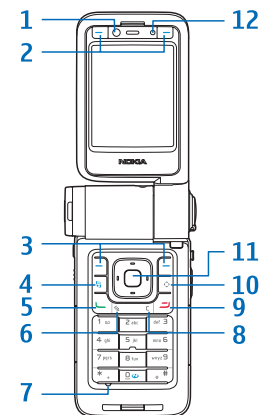

Keypad lock (keyguard)

To lock the keypad in the fold-open mode, press the left selection key, then  . When the keys are locked,  is displayed.

To unlock in the fold-open mode, press the left selection key, then  .

To lock the keypad in the fold-closed mode, press and hold the camera mode key.

To unlock in the fold-closed mode, press and hold the camera mode key.

When the keypad lock is on, calls may be possible to the official emergency number programmed into your device.

To turn on the display light when the keypad lock is on, press . In the fold-closed mode, press any key, except the zoom key.

Insert the (U)SIM card and battery

 
A USIM card is an enhanced version of the SIM card and is supported by UMTS mobile phones.

Keep all SIM cards out of the reach of small children.


Always switch the device off and disconnect the charger before removing the battery.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider or other vendor.


- 1 With the back of the device facing you, press the release button (1), slide the cover (2), and lift it up.

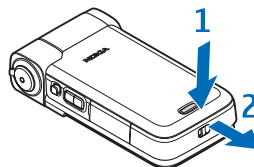

 
- 2 Insert the USIM card into the slot. Ensure that the bevelled corner on the card is inserted first, and that the contact area on the card is facing down.

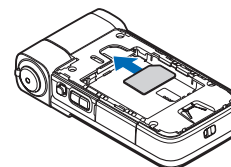

 - 3 Insert the battery. Ensure that the contacts on the top of the battery are facing the connectors on the device.

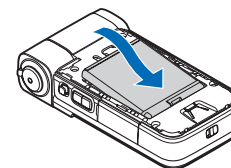

 - 4 To replace the back cover, position the cover onto the device, and slide the cover until it clicks into place.


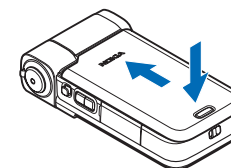


Switch the device on

- 1 Press and hold .
- 2 If the device asks for a (U)PIN code or lock code, enter the code (displayed as ****), and press the left selection key. The UPIN code is usually supplied with the USIM card. The factory setting for the lock code is 12345. For more information on the access codes, see 'Security' in the user guide.


Your device has internal antennas.

   **Note:** As with any radio transmitting device, avoid touching an antenna unnecessarily when the antenna is in use. For example, avoid touching the cellular antenna during a phone call. Contact with a transmitting or receiving antenna affects the quality of the radio communication, may cause the device to operate at a higher power level than otherwise needed, and may reduce the battery life.

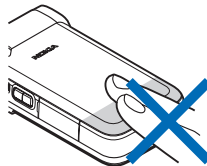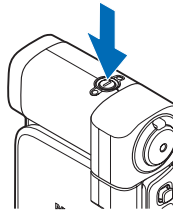

Charge the battery

 - 1 Connect a compatible charger to a wall outlet.
- 2 Connect the power cord to the device. The device can be used while charging. If the battery is completely discharged, it may take a while before the charging indicator starts scrolling.
- 3 When the battery is fully charged, the charging indicator stops scrolling. Disconnect the charger from the device, then from the wall outlet.

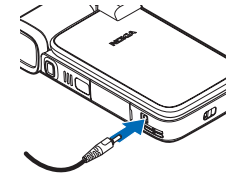

You can also use Nokia Charger Adapter CA-44 to charge the battery with previous compatible Nokia charger models. For enhancements, batteries, and chargers, see 'For your safety' in the user guide.

MMS and mobile internet settings

 
Your Nokia device normally has MMS, GPRS, streaming, and mobile internet settings automatically configured in the device, based on your service provider information.

View images and videos on TV

To view the captured video clips and images on a compatible TV, use a compatible Nokia CA-64U Video-out Cable. See 'TV out mode' and 'TV configuration' in the user guide.

To view images and videos on a compatible TV, do the following:

- 1 Connect the compatible video-out cable to the video input of a compatible TV.

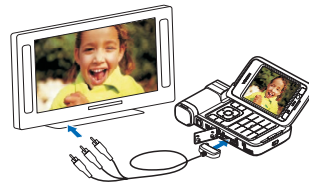

- 2 Connect the other end of the video-out cable to the Pop-Port™ connector of your device.
- 3 Press , and select **Gallery > Images & video** and the file you want to view.

The images are shown in the image viewer, and the videos are played in RealPlayer.

Displays

Remove any protective plastic films covering the displays.

A small number of missing, discolored, or bright dots may appear on the screen. This is a characteristic of this type of display.

Some displays may contain pixels or dots that remain on or off. This is normal, not a fault.

The images in this guide may differ from your device display.

Support

Help

The help function provides instructions when using the device. To access it from an application, select **Options > Help**.

User guide

Refer to the user guide for other important information about your device.

Online

Check www.nokia.com/support or your local Nokia web site for the latest version of the user guide, additional information, downloads, and services related to your Nokia product.

© 2006 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Pop-Port™, Nseries, and N93i are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.