




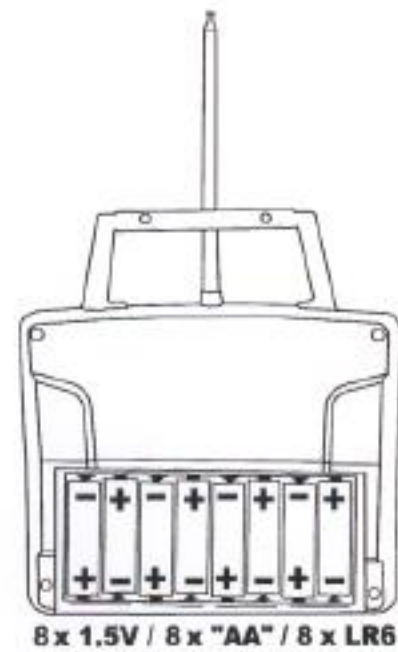


Insert 8 x "AA" battery into the transmitter as the figure 1

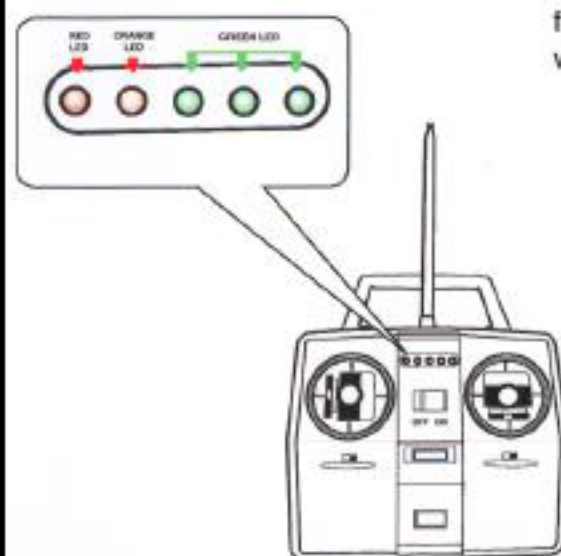


The LED will be lighted after switch on the transmitter

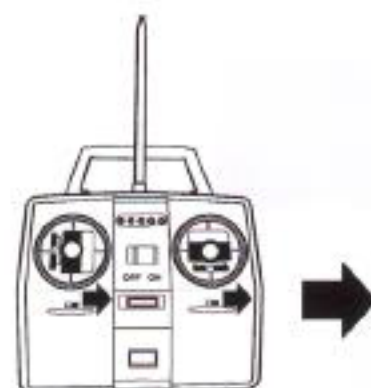


After pushing the reverse buttons to the right, the functions of the control sticks will be as the right figures

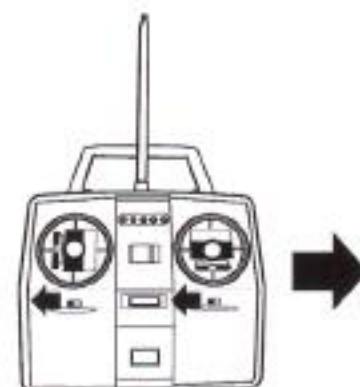

After pushing the reverse buttons to the left, the functions of the control sticks will be as the right figures

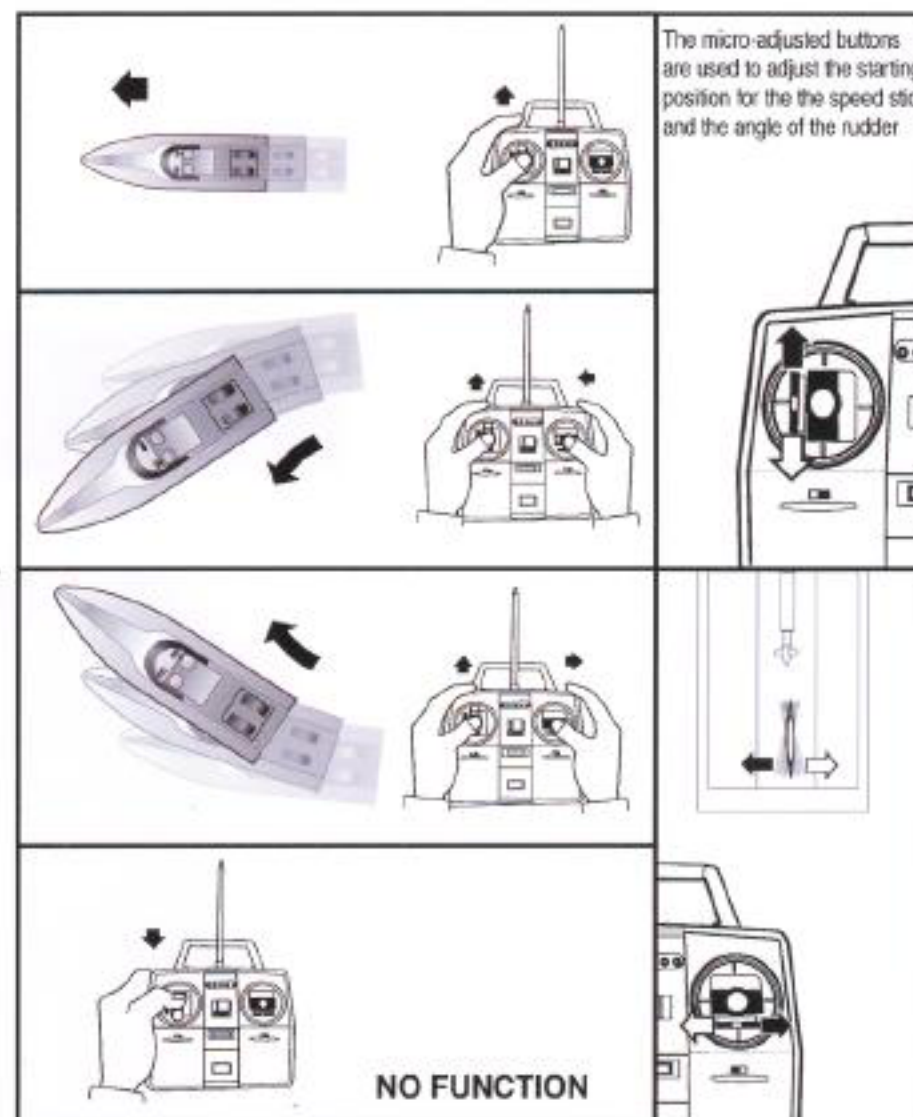

The micro-adjusted buttons are used to adjust the starting position for the the speed stick and the angle of the rudder

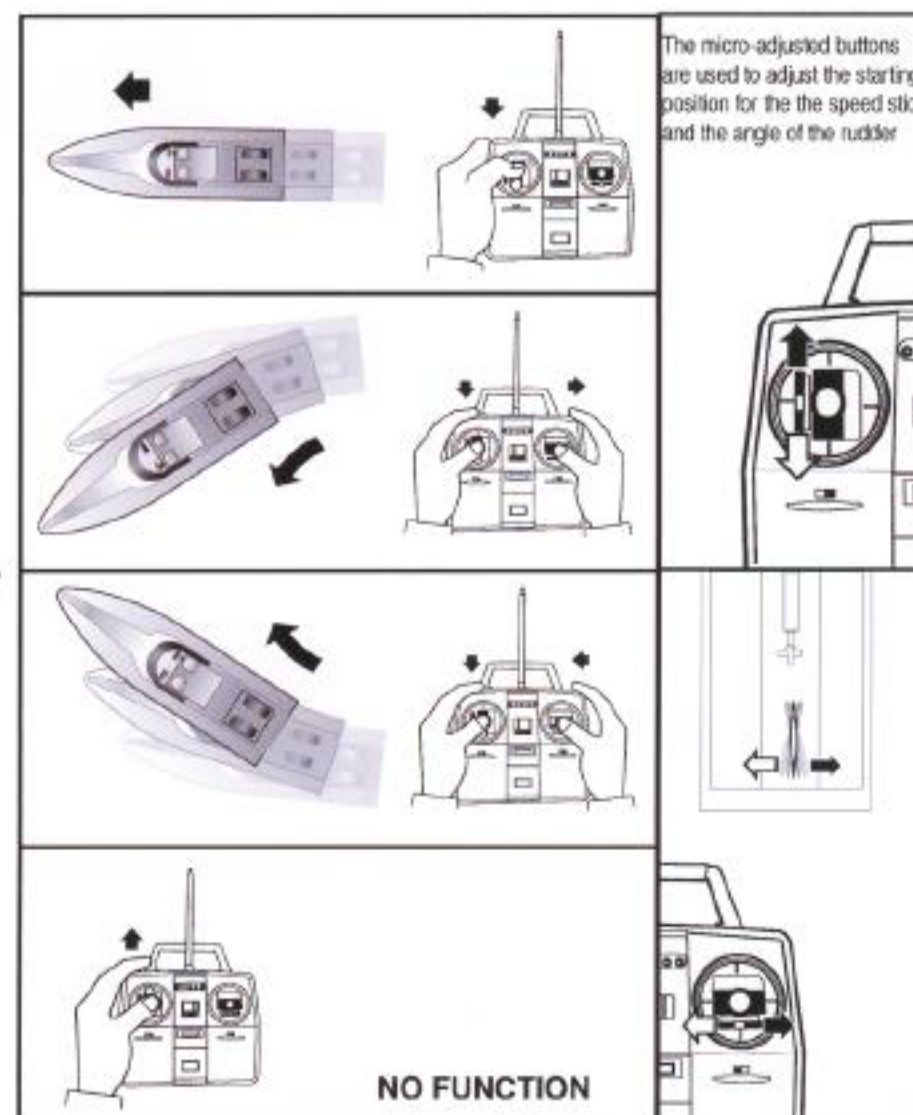

The micro-adjusted buttons are used to adjust the starting position for the the speed stick and the angle of the rudder