

Bluefire™ (Headset)

USER'S GUIDE



PrimeNet

WWW.PRIMENET21.COM



Contents :

Safety and General Information	2
Introduction.....	5
Bluefire™ Basics	7
Using Your Headset.....	11

Safety & General info.

**IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.
READ THIS INFORMATION BEFORE USING YOUR PHONE.**

Interference statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modification statement:

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by PrimeNet Co., Ltd. may void the user's authority to operate the equipment.

Wireless notice

This product emits radio frequency energy, but the radiated output power of this device is far below the FCC radio frequency exposure limits. Nevertheless, the device should be used in such a manner that the potential for human contact with the antenna during normal operation is minimized.

Safety & General info.

Facilities

When instructed to do so, turn off your headset when on board an aircraft. Any use of the headset must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 15 centimeters (six inches) be maintained between a handheld wireless device and a pacemaker.

These recommendations are consistent with the independent research by, and recommendations of , Wireless Technology Research.

Persons with pacemakers should:

- * ALWAYS keep the phone and Bluetooth™ headset more than 15 centimeters (six inches) from your pacemaker when the phone is turned ON.
- * NOT carry the phone and Bluetooth™ headset in the breast pocket.
- * Turn OFF the phone and headset immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you May want to consult with your hearing aid manufacturer to discuss alternatives.

Simultaneous use of a CIC-hearing aid and the Bluefire™ headset is not possible due to lack of space in the ear.

Safety & General info.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to Determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining This information

FCC Notice to Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful Interference in a residential installation. This equipment generates, uses and can radiate radio frequency Energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and the receiver.
- * Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

Introduction

What Is Bluetooth™ Wireless Technology?

Bluetooth™ wireless technology propels you into a new dimension in connectivity, Bluetooth™ devices Communicate without wires, using built – in radio transceivers that operate on a globally available radio frequency to ensure worldwide compatibility. Your Bluetooth™ Wireless Headset can communicate with other Bluetooth™ devices within a range of approximately 10 meters (33 feet).

How Can I Use My Bluetooth™ Wireless Headset?

The Bluetooth™ Wireless Headset lets you connect with another Bluetooth™ device supporting the headset profile

- * Use your phone hands-free
- * Handle incoming and outgoing calls with the headset multifunction control buttons.
- * Use voice activation to make calls.

What Is Included in This Kit?

 
This package includes the following:

- * Bluetooth™ headset – Bluefire™
- * Bluefire™ – user's guide
- * AC/DC Adapter
- * Headset necklace
- * Cigar Jack Adapter (Optional)

Introduction

Headset Features

1. **Headset Indicator Lights (LED)** - Provide visual status of the Headset
2. **Multifunction Buttons** - Controls all Headset Function
3. **Charger Indicator Lights (LED)** - Provide visual status of the charger
4. **Charging Port** - Receives the plug for battery charger
5. **Speaker** - Plays the sound you receive on the call
6. **Microphone** - Picks up your voice input
7. **Rubber - earpiece** - earphone

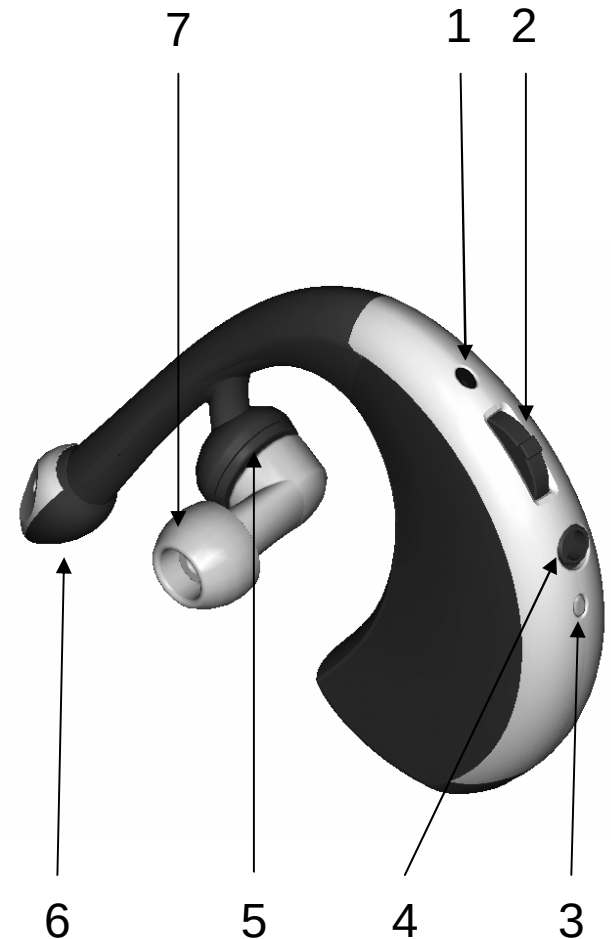


Bluefire™ Basics

Turn headset ON

Rotate the button toward **2** for 1 seconds

The user will hear a sequence of beeps going from low to high tones.
The red headset indicator will flash for 5 seconds.
The blue headset indicator will start lighting every 4 seconds, indicating that the headset is ON.

 (The first time you turn the headset ON, it will automatically go into pairing mode)

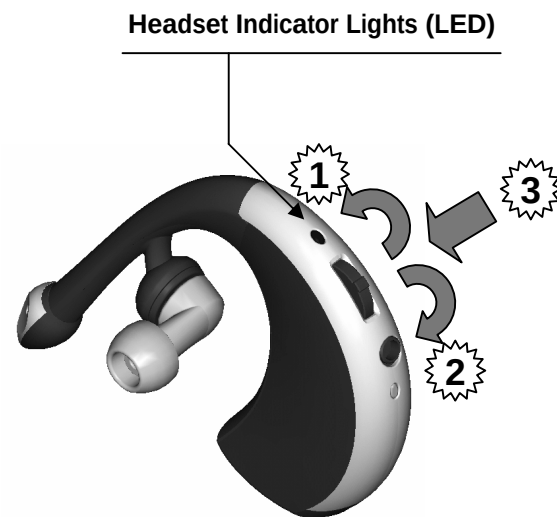

Turn headset Off

Rotate the button toward **2** for 5 seconds

The user will hear a sequence of beeps going from high to low tones.
The red headset indicator will flash for 5 seconds.

Bluefire™ Basics

Only with headset turned ON

Answer a call

Push the button toward  for 1 seconds

When the phone receives a call, the headset generates a ring tone and the blue and red headset indicator starts blinking fast. During conversation the blue headset indicator Lights every 2 seconds.

Initiate a call with phone

Activate call from phone

As placing a call normally. The phone will transfer the call to the headset automatically.

Initiate a call with the headset (voice dial)

 
Push the button toward  for 1 second

When the headset and the phone are ready for Voice-dialing, the user receives a beep from the Headset. The user can now say the name stored In his or her phone – the Voice Tag. If the voice tag is recognized by the phone a call is activated, otherwise the headset will again go into ON mode

Battery Status Low battery indicator

Red headset indicator

Red headset indicator flashing every 10 seconds.

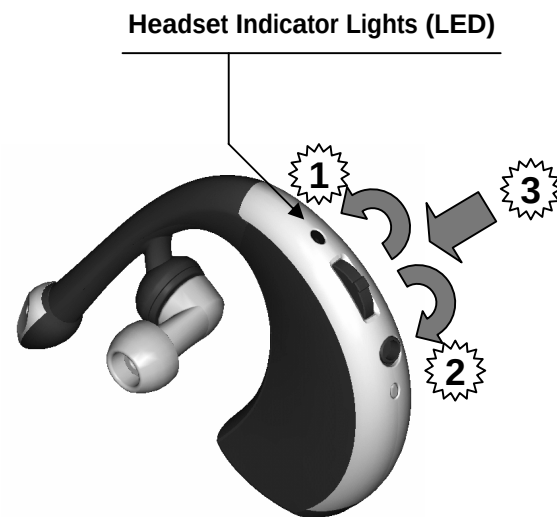

Bluefire™ Basics

Only during an active call

End a call

Push the button toward  for 1 seconds

This will send the headset into ON mode and the headset is again ready to receive a call.

VOLUME

**Increase headset
Speaker volume**

Rotate the button toward 

When maximum volume level is reached you will hear
A beep.

**Decrease headset
Speaker volume**

 
Rotate the button toward 

When minimum volume level is reached you will hear
A beep.

**Battery Status
Low battery
indicator**

Red headset indicator

Red headset indicator flashing every 5 seconds.
(during conversation 2 beeps will be heard every 30 seconds)

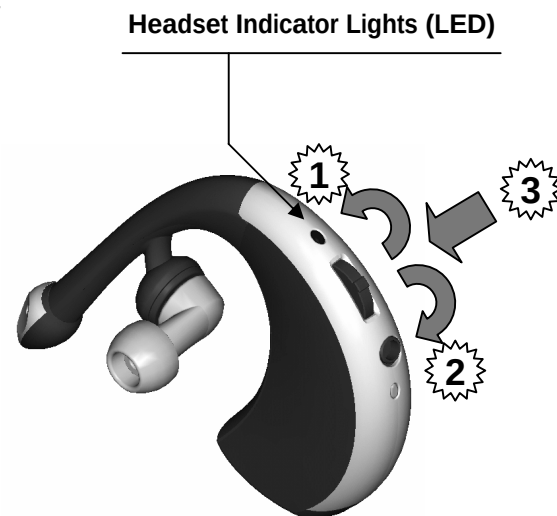

Bluefire™ Basics

Only during charging

LED on charger

Red indicator on charger lights

Battery fully charged

Green indicator on charger lights

Only with headset turned off

PAIRING MODE

 
Get headset read to pair with phone

Rotate the button toward for 7 seconds

When pairing mode is process, the red headset Indicator flash for 3 seconds. And then the blue Headset indicator flash for 1 seconds. Finally, the blue and red headset Indicator flash continually.

If you rotate the button toward **2** during pairing, Pairing will be stopped.

The passkey for pairing the headset with the phone Is 0000.

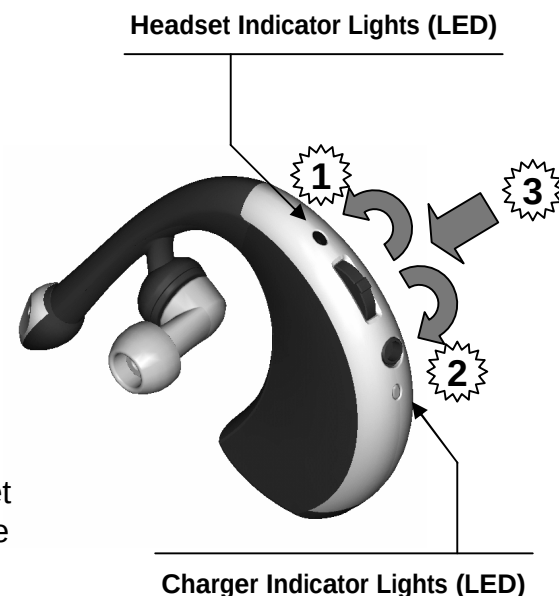

Using Your Headset

Charging Your Headset

WHEN TO CHARGE :

First Time Use – Before you use your headset, You need to charge its contained battery for three hours.

Recharging – When the red indicator on the headset starts flashing, the headset battery needs to be recharged.

HOW TO CHARGE :


Connect the included AC/DC adapter to the headset charging port.

During charging, the red indicator on the charger indicator shows a steady light.

When the battery is fully charged, the green indicator is turns on.

A fully charged headset battery provides up to :

- | | |
|----------------|---------|
| * Talk time | 5 hours |
| * Stand bytime | 4 days |

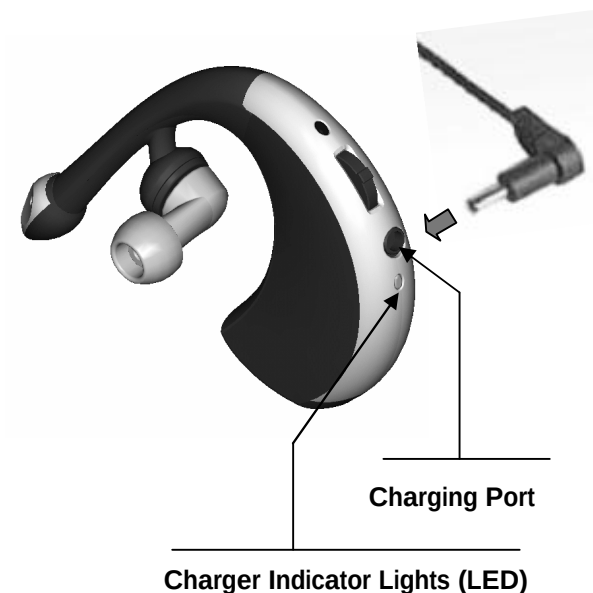 

Using Your Headset

Wearing the Headset

Placing the headset on your ear.

- Choosing left or right ear wearing style.

The headset is configured for wear on the left or right ear. After some practice, you should be able to place the headset on your ear with just one hand.

1. Place headset behind your ear.
2. Loop top of headset over front of ear.
3. Insert rubber-earpiece into ear canal.



right ear



left ear

Using Your Headset

Pairing Your Headset & Phone

Note : You must pair your headset and phone before you can make a call.

You establish a Bluetooth™ link between your headset and phone with a paired link. When you set up a paired link, the phone remembers the headset's ID. Once your headset and phone are paired, your headset automatically connects to your phone any time, you turn your headset on.

Paired Link

With the headset and phone in close proximity :

STEP :

1. Turn headset OFF.
2. Rotate the button toward  for 7 seconds.
3. Perform a device discovery from the phone.

* For details on device discovery for your phone, refer to the user's guide for the phone.

4. Press the Yes key on the phone to bond to the headset.
5. When "Enter Bluetooth Passkey" appears, enter the passkey 0000, then press OK on the phone to pair the headset with the phone.

When pairing mode is process, the red headset Indicator flash for 3 seconds. And then the blue headset indicator flash for 1 seconds. Finally, the blue and red headset Indicator flash continually.

RESULT :

1. Both of the headset indicator are turned off.
2. When pairing mode is process, the red headset Indicator flash for 3 seconds. And then the blue headset indicator flash for 1 seconds. Finally, the blue and red headset Indicator flash continually.
3. HANDSET
- 4.5. The red headset indicator flash twice. And the the blue headset indicator will start lighting every 3 seconds, indicating that the headset is standby mode.

Using Your Headset & AG Dongle

Pairing Your Headset & AG Dongle (PrimeNet)

Note : You must pair your headset and AG Dongle before you make a call.

You establish a Bluetooth™ link between your headset and AG Dongle with a paired link. When you set up a paired Link, the AG Dongle remembers the headset's ID. Once your headset and ag dongle are paired, your headset automatically connects to ag dongle any time, you turn your headset on.

Paired Link

With the headset and ag dongle in close proximity :

STEP : Headset

1. Turn headset On.
2. Rotate the button toward  for 5 seconds.

AG Dongle

3. Turn AG Dongle OFF (serious)
4. Press the button on the phone to bond to the headset.(keep press button about 10 seconds)
“red-blue led on same time for 3 seconds,
off, red-blue led on same time again →
release button.”

When pairing mode is process, the red headset Indicator flash for 3 seconds. And then the blue headset indicator flash for 1 seconds. Finally, the blue and red headset Indicator flash continually.

RESULT :

1. Both of the headset indicator are turned off.
2. The red headset indicator flash twice. And then the blue headset indicator flash for 3 seconds and off continually.

- Both of the ag dongle indicator are turned off
- The red-blue ag dongle indicator flash twice. And the blue headset indicator will start lighting every 3 seconds, indicating that the headset is standby mode.

Using Your Headset

Controlling headset volume.

Increasing and Decreasing Volume

Note : Adjusting volume can only be done during an active call.

**Increase headset
Speaker volume**

 
Rotate the button toward 

When maximum volume level is reached you will hear 2 beep sound.

**Decrease headset
Speaker volume**

Rotate the button toward 

When minimum volume level is reached you will hear 2 beep sound.

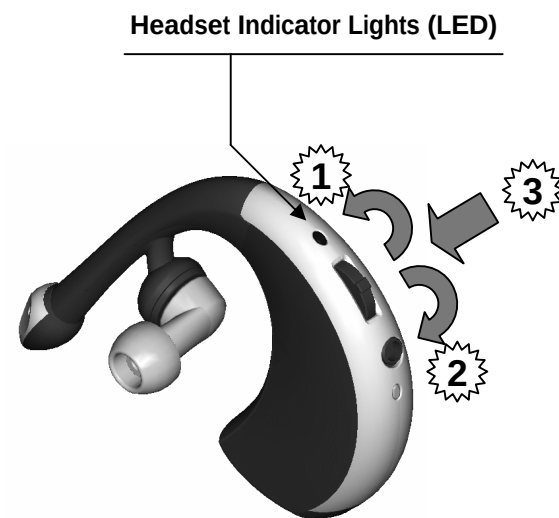

Using Your Headset

Making and receiving a call

You can make a call with your headset in this way:

* Dialing a number from the phone and then push button toward



You must first link your headset and phone as described in “Pairing Your Headset & Phone”

Dialing a Number from the Phone

STEP :

1. Connect Headset & AG Dongle first.
2. Using the phone's keypad, dial the phone number.
3. To send the call

 
Ending a Call from the Headset

To end a call, push the button toward



for 1 seconds.

A sequence of high/low tones indicates that the call has ended.
This will send the headset into ON mode and the headset
is again ready to receive a call.

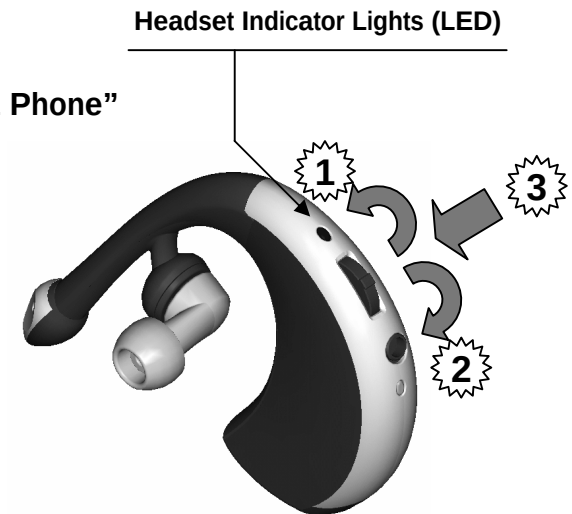

Using Your Headset

Receiving a Call

With the Headset On and paired.

When you receive an incoming call with the headset on and paired, a ring tone is generated in your headset. To pair your headset and Phone, see “Pairing Your Headset & Phone”.

Answer the call by push the button toward  for 1 second

Receiving a Call

With the Headset Off (Paired Link Only)

When you receive a call with the headset OFF, you first have to Turn the headset ON. When you have turned the headset on, Push the button toward  for 1 second.

 
Transferring a Call

Headset to Phone

The transfer must be initiated by the phone. (See the user’s guide for your phone.)

Phone to Headset

If the Bluefire™ is already turned ON and the call is on the phone, push the button Toward  for 1 second.

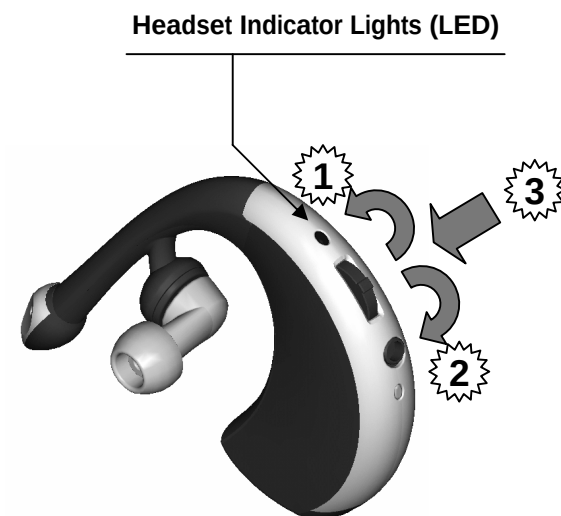

Using Your Headset

 
Disconnecting the Bluetooth™ Link

To terminate the Bluetooth™ connection between the headset and phone, turn the headset OFF

by rotate the button toward  for 5seconds.

The user will hear a sequence of beeps going from high to low tones.

The red headset indicator will flash for 5 seconds.

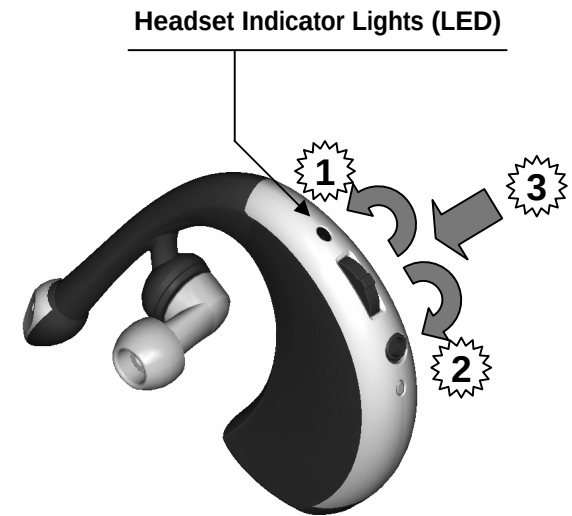

Using Your Headset

Using Your Headset Indicator light and charging Indicator light

RED CHARGING Indicator light

ON

HEADSET:

Charging in progress

GREEN CHARGING Indicator light

ON

HEADSET:

Charging complete

BLUE HEADSET Indicator light

OFF

Flash at a 10 second interval

Flash at a 5 second interval

HEADSET:

Power off

Turned on (not on a call)

Connected (on a call)

RED HEADSET Indicator light

OFF

Flash at a 10 second interval

Flash at a 5 second interval

HEADSET:

Power off

Turned on (not on a call) – Battery Low

Connected (on a call) – Battery Low

BLUE AND RED HEADSET Indicator light

Both blue and red headset indicator flashing repeatedly

HEADSET:

Pairing mode

Note : Both blue and red headset indicator shows a quick flash when the headset is out of range

Using Your Headset

Audio Tones

AUDIO TONES :

A single high tone when button pushed.

Two rapid high tones, repeated every 30 seconds
(only during conversation)

No audio indications ; deteriorating audio quality

Ring tone

A single tone

Several tones high to low

Several tones high to low

Several tones high to low

Several tones high to low

Several tones low to high

HEADSET STATUS :

Volume min. or max

Low battery

Out of range

Incoming call

Initiate voice activation

Voice tag not recognized

End call

Audio link closed

Power OFF

Power ON



PrimeNet

WWW.PRIMENET21.COM

