

尺寸: 75*75mm



M01
USER MANUAL
TWS EARPHONES

Package Contents

Charging Case × 1PC

Earbuds × 1 Pair

Type-C Charging Cable × 1PC

User Manual × 1 PC

Product Overview

Charging Pin

LED Indicator

Type-C Port

Touch Area (MFB)

Ambient Noise Cancellation Mic

Charging Pin

Mic

Touch Control Diagram

The touch area (MFB Touch Panel) is located in the upper part of earbuds handle.

(MFB) Touch Panel

Wearing Earbuds

Note: The left earbud marked with L is worn in the left ear, and the right earbud marked with R is worn in the right ear.

Power ON/OFF

Power on
Auto: Open the charge case to Power on
Manually: Press and hold the MFB for 3s.

Power off
Auto: Place both Earbud in your charging case, Close the lid. Manually: Press and hold the MFB for 5s.

Put earbuds in to power off

Touch to turn off

Pairing

1. Open the charging case, and take out the earbuds, earbud will just automatically. One of the earbuds flashes blue and red, the another earbud light goes out.
2. Activate Bluetooth on the device, turn on Bluetooth, search for pairing name "M01 Airbass", and click on it.

Tip: Next use. Open the charging case, earbuds auto connect phone.

Single Mode
When on dual mode, put one earbud into the charging case. Only take one earbud out of the charging case and connect it.

Bluetooth Lost

1. Turn off mobile phone's Bluetooth, earbuds will enter the pairing mode and can pair with other devices.
2. If the connection range is exceeded, the earbuds will enter the back connection mode. No connection within 5 minutes, the earbuds will turn off.

Notes For Signal Transmission Distance (as illustrate)

≤ 10m signal works normal

≥ 10m signal will be interrupted

Reset

If your earbuds accidentally only get one earbud to work, or fail to pair, please reset the earphone.

1. Delete all "M01 Airbass" Bluetooth records on the phone, and turn off Bluetooth.
2. Put earbuds into charging case, and then take out to pairing modes, tap L & R MFB 5 times simultaneously, hear "DUL" prompt voice to clear all pairing.
3. Put earbuds into charging case.

Remove M01 Airbass records

Tap L&R 5 times simultaneously

Put earbuds into charging case

Touch Operation

Left Earbud

1x Play / Pause
Tap the MFB once

2x Previous Track
Double tap the left MFB

3x Volume -
Triple tap the left MFB

4x Game mode
Four tap the MFB

2x Voice assistant
Press and hold the MFB for 2s

1x Answer the call
Tap the MFB once

2x End Call/Reject call
Double tap the MFB

Touch Operation

Right Earbud

1x Play / Pause
Tap the MFB once

2x Next Track
Double tap the right MFB

3x Volume +
Triple tap the right MFB

4x Game mode
Four tap the MFB

2x Transparency Mode / ANC ON / ANC OFF

1x Answer the call
Tap the MFB once

2x End Call/Reject call
Double tap the MFB

Earbuds low battery alarm

When the battery power is low, every 3 minute voice reminder "Lower battery" and White light flashing, until the battery power is run out and turn off.

Lower battery

Lower battery

Charge your earbuds

Place your earbuds into the charging case and close the lid, earbuds automatically complete charge.

Product Parameter

Earbud(each)

Model Name: M01

Bluetooth Version: V6.0

Speaker: Ø13mm

Bluetooth Range: 10M

Technology: HSP / HFP / A2DP / AVRCP

Frequency Range: 20Hz-20KHz

Weight: 4.3g

Size: 32.5*19*23mm

Charging Time: 0.5h

Battery Capacity: 40mAh

Play Music Time: 6H

Input: DC 5V ±0.05A

Charging Case

Weight: 68g

Size: 60*39*31mm

Charging Time: 2H

Battery Capacity: 500mAh

Input: DC 5V ±0.3A

Trouble Shooting Guide

1. Pairing Lost
Solution 1
Tap the left and right earbuds simultaneously five times to reset them, place them back into the charging case, then take it out to repair them.
Solution 2 (if solution 1 fails)
Tap the left earbud six times, then tap the right earbud six times to clear the earbuds' mutual pairing records. Return both earbuds to the charging case and take them out again—they will automatically re-pair, which may take 10 to 60 seconds.

2. Earbuds Fail to Charge
Charge the charging case fully first, then check if it can power the earbuds normally.
Wipe the charging contact pins on both the earbuds and charging case with a cotton swab (dampened with rubbing alcohol for best results).

3. Unable to Disconnect Bluetooth
Issue: The earbuds remain connected to your phone even after placing them inside the closed charging case.
Charge the charging case for a period of time, then test if the disconnection function works.

Clean the charging contact pins on the earbuds and charging case.

Earbuds Warning

1. Please do not place the product in an environment where the temperature is too low (below 4°C or below 40°C).
2. Do not dismantle or repair the earbuds under any circumstances, if necessary, please send the product to the seller for repair.
3. Do not throw and drop the earbuds to avoid damage.
4. The earbuds and the BT devices will be disconnected if the distance between them is more than 10 meters.
5. Keep the device and accessories away from children and pets.
6. Do not put the earbuds into the washing machine.

Battery Warning

1. The battery in the product may cause fire disaster or risk of chemical burning if mishandled.
2. Please charge with a rated voltage charger.
3. The discard of battery should obey local law, if possible please recycle it. Do not dispose it as household garbage, because it may cause a explosion.
4. Users are not allowed to take out or replace battery in the product unless there is a stipulation on user manual. It is very hazardous to do this, may cause a damage to product.

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

FCC ID: R5B-M01