




Bienvenido a OPPO Mobile

Esta guía le mostrará el uso del teléfono además de sus funciones más importantes. También, puede visitar nuestra página web oficial de OPPO donde obtendrá mayor información sobre el mismo.

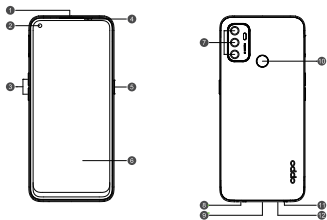

- ① Récepteur
- ② Caméra frontale
- ③ Touches volume
- ④ Capteur de luminosité
- ⑤ Touche marche/arrêt
- ⑥ Écran tactile
- ⑦ Appareil photo arrière
- ⑧ Haut parleur
- ⑨ Prise USB
- ⑩ Défecteur d'empreintes digitales
- ⑪ Enchufe de audifonos
- ⑫ Micro principal

Cómo forzar el reinicio del teléfono

Mantenga presionados los botones de Encendido y Vol (+) hasta que aparezca la animación de inicio de OPPO para forzar el reinicio del teléfono.

Puede utilizar la función de OPPO "Clonar Teléfono" para transferir

rápidamente sus fotos, vídeos, música, contactos y aplicaciones a su nuevo teléfono desde el antiguo. Para ello, siga estos pasos:
Puede usar "Clonar Teléfono" de OPPO para transferir fácilmente fotos, vídeos, música, contactos, mensajes, aplicaciones, etc. desde su antiguo teléfono al nuevo.
1. Si tiene un teléfono Android, primero escanee el código QR que aparece a continuación, seguidamente descargue e instale "Clonar Teléfono", abra la aplicación en ambos teléfonos y siga las instrucciones que aparecen en pantalla para completar la operación.



<https://i.clonephone.coloros.com/download>

2. Si tiene un iPhone antiguo, abra "Clonar Teléfono" directamente en el nuevo teléfono y siga las instrucciones que aparecen en pantalla para iniciar sesión en la cuenta de iCloud y sincronizar los archivos.


Información de los accesorios y el software

Se le proporcionan los siguientes accesorios estándar:
1 Teléfono, 1 Cargador, 1 Auriculares, 1 Cable USB, 1 Guía de seguridad, 1 Guía rápida, 1 Herramienta de extracción de tarjeta SIM, 1 Funda protectora.

NOTA:
Para realizar la configuración inicial (al adquirir el dispositivo o realizar un reseteo de fábrica) es necesario conectarse a una red de datos (WiFi / Datos móviles). Si no se tiene disponible la red de datos, realice la configuración sin tarjeta SIM insertada.

Greetings from OPPO Mobile

This guide will show you how to use the phone and its important functions. You may also visit OPPO official website to get more information about the phone.

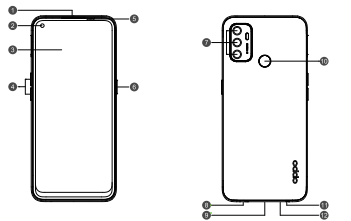

- ① Receiver
- ② Front Camera
- ③ Touch-screen
- ④ Volume Key
- ⑤ Ambient Light Sensor
- ⑥ Power Key & Screen Lock Key
- ⑦ Rear Camera
- ⑧ Speaker
- ⑨ USB Jack
- ⑩ Fingerprint sensor
- ⑪ Earphone Jack
- ⑫ MIC

Standard accessories

You are provided with the following standard accessories:
1 Phone, 1 Charger, 1 Earphone, 1 USB data cable, 1 Safety Guide, 1 Quick Guide, 1 SIM Ejector Tool, 1 Protective Case.

How to reboot the phone

Press and hold the Power Button and Volume Up Button at the same time until the OPPO boot animation is displayed to reboot the phone.

How to Transfer Old Mobile Content to a New Mobile

You can use OPPO Clone Phone to easily transfer photos, videos, music, contacts, messages, apps, etc from your old phone to the new one.
1. If your previous phone was a non-OPPO Android phone, search "OPPO Clone Phone" in the Google Play store and install the app. You can also scan the QR code below to install it. If your previous phone was an OPPO phone, you don't need to install this app. Then run Clone Phone on both phones and follow the on-screen instructions.



<https://i.clonephone.coloros.com/download>

2. If your previous phone was an iPhone, run "Clone Phone" on your new phone, and follow the onscreen instructions to migrate your data from your iCloud account.

English

Especificaciones técnicas

Producto	CPH2127	
Tamaño de la pantalla	16,5cm(6,5 Pulgadas)	
Dimensiones	163.9x75.1x8.4(mm)	
Batería	4890mAh/18,92Wh(Min) 5000mAh/19,35Wh(Typ)	
Cámara	Cuádruple cámara trasera de 13 Mpx + 2 Mpx + 2 Mpx. Cámara delantera de 8 Mpx	
Temperatura para el correcto funcionamiento	0°C-35°C	
Valores SAR	FCC SAR	XXXXW/kg (Cabeza) XXXXW/kg (Cuerpo) XXXXW/kg (Hotspot)
	Entrada	100- 240Vca 50/60Hz 0,5A
Características Eléctricas	Salida	9Vcc 2A
	Especificación Eléctrica del terminal móvil 3,87 Vcc, 2A	
Radio FM	Para acceder al Radio FM. Selecciona Extras - Radio FM Se requiere conectar el audifono a modo de antena.	

Nota: Los valores de SAR anteriores son los mayores registrados para este dispositivo.

Especificaciones de ondas de radio

Radio	Frecuencia	Potencia máx. de salida
GSM	850MHz	32,5±1,5dBm
	900MHz	32,5±1,5dBm
	1800MHz	29,5±1dBm
	1900MHz	29,5±1dBm
WCDMA	Bands 1/2/4/5	23±1,5dBm
LTE FDD	Bands 1/2/3/4/5/12/17/26/28/66	23±1dBm
	Band 7	22,8±1dBm
LTE TDD	Bands 38/41	23±1dBm
Bluetooth	2,4-2,4835GHz	8,5±2dBm(EIRP)
2,4G Wi-Fi	2,4-2,4835GHz	15±2dBm(EIRP)
5G Wi-Fi	5,15-5,35GHz; 5,47-5,725GHz	14±2dBm(EIRP)
	5,725-5,85GHz	14±2dBm(EIRP)

Specification

Product	CPH2127	
Main screen parameter	16.5cm(6.5")	
Dimension	163.9x75.1x8.4(mm)	
Battery	4890mAh/18.92Wh(Min) 5000mAh/19.35Wh(Typ)	
Camera	13Megapixels+2Megapixels +2Megapixels Rear 8Megapixels Front	
Operating temperature	0°C-35°C	
SAR Values	FCC SAR	XXXXW/kg (Head) XXXXW/kg (Body) XXXXW/kg (Hotspot)

Note: The SAR values above are the highest values reported for this device.

Radio Waves Specifications

Radio	Frequency	Max. Output Power
GSM	850MHz	32.5±1.5dBm
	900MHz	32.5±1.5dBm
	1800MHz	29.5±1dBm
	1900MHz	29.5±1dBm
WCDMA	Bands 1/2/4/5	23±1.5dBm
LTE FDD	Bands 1/2/3/4/5/12/17/26/28/66	23±1dBm
	Band 7	22.8±1dBm
LTE TDD	Bands 38/41	23±1dBm
Bluetooth	2.4-2.4835GHz	8.5±2dBm(EIRP)
2.4G Wi-Fi	2.4-2.4835GHz	15±2dBm(EIRP)
5G Wi-Fi	5.15-5.35GHz; 5.47-5.725GHz	14±2dBm(EIRP)
	5.725-5.85GHz	14±2dBm(EIRP)

Some content may differ from your device depending on the region, service provider, or software version, and is subject to change without prior notice.

 
Copyright © Guangdong OPPO Mobile Telecommunications Corp., Ltd. 2020. All rights reserved.



5212021

V0.1

Quick guide



折页

尺寸 140*70mm

材质 90g哑粉

田甜

T: +86 18520871548

This user manual provides the product safety information. Before using the phone, please read the Safety Guide carefully. OPPO Mobile Warranty Information I: Service Terms Thank you for using OPPO Mobile Phone. We provide our products with comprehensive warranty services in accordance with applicable National laws and Regulations. In case of any conflict between the following policies and the National Laws and Regulations, the National Laws and Regulations shall prevail. "Warranty" shall mean and include the services for repair, maintenance and replacement in accordance with the terms and conditions mentioned herein. Warranty Conditions: • The Limited warranty shall be available in case of Manufacturing defect to the Product due to faulty workmanship. • The warranty shall be applicable to the products purchased through our authorized sellers in the territory. The Warranty for the product is applicable during the term of twelve (12) months from the date of Purchase. The warranty for the accessories such as charger, data cable and earphone shall be six (6) months and for the battery specifically (including internal battery) shall be twelve (12) months. In case of any manufacturing defect due to faulty workmanship, consumer can claim the replacement, maintenance or repair within 30 days from the date of purchase. 1. A valid warranty card and valid purchase invoice are pre-requisite to claim warranty.	Explanation: Valid purchase invoice shall mean and include the invoice indicating IMEI number of the mobile phone, factory serial number (batch number) of the accessories (battery and charger), product model, sale date, Seller's sale amount and so on. 2. The warranty card contains important information related to your product. Please preserve it for your future reference. 3. The information filled in the warranty card and the Purchase Invoice shall be complete, true and correct, without alteration. If consumer fails to provide the captured documents herein, Company shall calculate the warranty from the date of activation or post (network/30th) day from the date of manufacturing, whichever is earlier. ⚠ Note: OPPO shall have the right to final review and interpretation for the warranty policy. The Customer waives all rights to claim ambiguity in these terms and conditions. II: Warranty Instructions and Conditions 1. Your warranty (please refer to the Warranty Information Card), is only valid under normal use of your device. All man-made damages (including but not limited to the accidental or liquid damages and any of the following conditions are out of free warranty, but a repair can be still implemented at your own cost: A. The warranty period has expired. B. Damage caused by human factors, including damage caused by usage under improper operating environment and the failure to comply the "user manual". C. The customer disassembles, repairs or modifies the device without the Company's authorization or get it repaired at a unauthorized repair shop.
D. Damage caused by a force majeure (such as floods, fires, earthquakes and lightning). E. The original barcode/serial number is removed from the product. F. Natural wear and tear of the product (such as casing, keypad, display screen, antenna and other accessories). G. Defects caused due to usage of third party material (non-OPPO authorized consumables). H. Barcode and warranty labels are damaged and unrecognizable. I. External damage (including wear, tear, and scratches) are not entitled to the warranty service. J. Faults caused by the Internet and wireless information service providers (operators) are not covered under the warranty. 2. Other terms: A. If the device or accessory gets faulty due to manufacturing defect Company shall replace the device or accessory free of cost (Only if the same meets the replacement guarantee!) during the warranty period. Consumer can visit the nearest authorized service center to claim the warranty. B. If any of our products is required to be fixed, you may take it to any authorized service center of the Company in the territory along with the document as captioned in this warranty manual. C. If the product is damaged and requires repair, then the customer is required to sign the repair agreement form with the OPPO Customer Service Centre first. D. All defective components, parts and accessories replaced during the warranty period shall become the property of the Company.	III: Considerations for Sending the Device for Repair and Collecting It 1. When completing the OPPO Mobile Phone Repair Form, the customer must fill in valid information in clear handwriting as required (name, address, phone number and bank details). 2. Before sending your device for repair, please back up all information and data you have saved on the mobile phone (such as phone numbers, text messages and pictures) before you deliver them to prevent loss or damage during the testing and inspection process. In any circumstances, OPPO Customer Service Centre and its staff will not be responsible or obligated to back up or recover your information and data, or accept responsibility for any consequence arising from the loss, damage or leakage of your information and data. Please ensure the legality of the information and data you have saved. To respect your privacy, we will not transmit, backup or examine your information and data (unless they are necessary for us to provide you with services), and we reserve the right to refuse to provide services for illegal content. 3. The Customer shall collect the mobile phone by presenting the OPPO Mobile Phone Repair Form. In case the Customer loses the Customer Copy, the Customer shall go through the loss-reporting procedures with his/her personal ID or valid proof of identity before collecting the mobile phone.
Statement The product important information and warranty card contains information about safety and operation, and customer service information. Before using the OPPO smart phone, please read all the instructions and the security information below, and keep the backup. More detailed instructions, the company's electronic documents are kept on this product. Please read the built-in instructions on the OPPO Smartphone. To get the latest information, please visit http://www.oppo.com Security Information A mobile phone is suitable for working in an environment of 0°C to 35°C. Storage documents should be between -20°C and 45°C. Excessive low temperature can affect the use of mobile phones and even damage the cell phone and battery. And use mobile phones as much as possible in ordinary telephone, television, radio, and other automation in order to avoid the effect of the use of these devices and mobile phones. Please charge more than 5°C and below 35°C, so as not to reduce battery performance and reduce standby time. If the phone has a fastback function, the temperature is below 15°C or more than 35°C, and the cell phone may not be able to enter the flash charge. The operating system of this product supports official system updates. If the user brushes the ROM system of the third party or modifies the system file by cracking, it may lead to the security risk of the system. OPPO will not provide any support and responsibility for the final use of these cases.	Battery precautions in use • Please do not weld battery terminals. Otherwise, it may cause battery leakage, overheat, explosion and fire. • Please do not press or pierce the battery with hard objects (for example needles or other sharp objects), to avoid damage, battery leak, overheating or fire. • Battery liquid may be harmful if contacted with skin or clothes, your skin might be hurt. Please immediately wash it with water, or go to hospital at once to seek medical help if necessary. • If there are any abnormalities (like high temperature, discoloration, distortion, bulging, leakage, etc.) during operation, charging or preservation, please cease to use the device. • Do not expose the battery liquid to eyes. It might cause potential blindness. When happens, wash your eyes immediately or go to the hospital if serious. • Do not disassemble or modify the battery as it may cause battery leakage, overheating, explosion or fire. • Do not place or use the battery near fire, heater or other high temperature places. Otherwise, it may cause battery leakage, overheat, explosion or fire. • If there is battery leakage or strange smell, please immediately move it from open flame in order to avoid fire or explosion. • Please keep the battery away from moist or wet areas from moisture. Otherwise, it may cause battery overheat, burning and corrosion. • Do not place the battery directly in sunlight, or other high temperature areas. Otherwise, battery leakage and overheating may make battery performance decreased and service life affected. Keep the battery in a well-ventilated area.
• Do not use the battery or connect it with a high-voltage power supply, otherwise it may cause a short circuit or burn. • The battery can be charged and discharged hundreds of times at least, but it will eventually wear out. • Do not dispose the battery as household waste. Dispose the battery according to local regulations and environmental laws or as instructed by the Company from time to time. • Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions and environmental laws. ⚠ Warning: Please do not charge the battery over 12 hours. FCC Regulatory Conformance FCC Statement This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation. ⚠ Warning: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment. Warning: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications.	However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. FCC Caution • Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. • The antenna(s) used for this transmitter must not be collimated or operate in conjunction with any other antenna or system. • The country code selection is for non-US model only and is not available for all US models. Per FCC regulation, Wi-Fi products marketed in US must be fixed to US operation channels only. RF Exposure Information (SAR) • This device is designed and manufactured not to exceed the emission limits for exposure to radio waves exceed the emission limits for exposure to radio waves set by the Federal Communications Commission of the US. Government. • The SAR limit set by the FCC is 1.6W/kg. The highest SAR value of this device type complies with this limit. And please see the "Quick Start Guide" to find the highest SAR value reported to FCC. • Tests for SAR are conducted using standard operating positions accepted by the FCC, with the device transmitting at its highest certified power level in all tested frequency bands.
Warranty Card User Information User Name: _____ Phone No.: _____ User Address: _____ Zip Code: _____ E-mail: _____ Product Information & Dealer Information Model/Color/IMEI: _____ Dealer's Name: _____ Date of purchase (DD/MM/YY): _____	Warranty Card User Information User Name: _____ Phone No.: _____ User Address: _____ Zip Code: _____ E-mail: _____ Product Information & Dealer Information Model/Color/IMEI: _____ Dealer's Name: _____ Date of purchase (DD/MM/YY): _____

oddo	• Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. • While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement. • This device has also been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions the handset a minimum of 15mm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Position the handset a minimum of 15mm from your body when the device is switched on. • Choose the built clips, holsters, or other similar body-worn accessories which do not contain metallic components to support the minimum distance of body-worn operation. Cases with metal parts may change the RF performance of the device, including its compliance with RF exposure guidelines, in a manner that has not been tested or certified, and use such accessories should be avoided. Hearing Aid Compatibility (HAC) regulations for Mobile phones • Your phone is compliant with the FCC Hearing Aid Compatibility requirements. • The FCC has adopted HAC rules for digital wireless phones. These rules require certain phones to be tested and rated under the American National Standard Institute(ANSI) C63.19-2011 hearing aid compatibility standards. • The ANSI standard for Hearing Aid compatibility contains two types of ratings: • M Ratings: Rating for less audio frequency interference to enable acoustic coupling with hearing aids. • T Ratings: Rating for inductive coupling with hearing aids in tele-call mode. Not all phones have been rated, a phone is considered hearing aid compatible if it is rated M1 or M2 or M3 or M4 or M5 or M6 or M7 or M8 or M9 or M10 or M11 or M12 or M13 or M14 or M15 or M16 or M17 or M18 or M19 or M20 or M21 or M22 or M23 or M24 or M25 or M26 or M27 or M28 or M29 or M30 or M31 or M32 or M33 or M34 or M35 or M36 or M37 or M38 or M39 or M40 or M41 or M42 or M43 or M44 or M45 or M46 or M47 or M48 or M49 or M50 or M51 or M52 or M53 or M54 or M55 or M56 or M57 or M58 or M59 or M60 or M61 or M62 or M63 or M64 or M65 or M66 or M67 or M68 or M69 or M70 or M71 or M72 or M73 or M74 or M75 or M76 or M77 or M78 or M79 or M80 or M81 or M82 or M83 or M84 or M85 or M86 or M87 or M88 or M89 or M90 or M91 or M92 or M93 or M94 or M95 or M96 or M97 or M98 or M99 or M100 or M101 or M102 or M103 or M104 or M105 or M106 or M107 or M108 or M109 or M110 or M111 or M112 or M113 or M114 or M115 or M116 or M117 or M118 or M119 or M120 or M121 or M122 or M123 or M124 or M125 or M126 or M127 or M128 or M129 or M130 or M131 or M132 or M133 or M134 or M135 or M136 or M137 or M138 or M139 or M140 or M141 or M142 or M143 or M144 or M145 or M146 or M147 or M148 or M149 or M150 or M151 or M152 or M153 or M154 or M155 or M156 or M157 or M158 or M159 or M160 or M161 or M162 or M163 or M164 or M165 or M166 or M167 or M168 or M169 or M170 or M171 or M172 or M173 or M174 or M175 or M176 or M177 or M178 or M179 or M180 or M181 or M182 or M183 or M184 or M185 or M186 or M187 or M188 or M189 or M190 or M191 or M192 or M193 or M194 or M195 or M196 or M197 or M198 or M199 or M200 or M201 or M202 or M203 or M204 or M205 or M206 or M207 or M208 or M209 or M210 or M211 or M212 or M213 or M214 or M215 or M216 or M217 or M218 or M219 or M220 or M221 or M222 or M223 or M224 or M225 or M226 or M227 or M228 or M229 or M230 or M231 or M232 or M233 or M234 or M235 or M236 or M237 or M238 or M239 or M240 or M241 or M242 or M243 or M244 or M245 or M246 or M247 or M248 or M249 or M250 or M251 or M252 or M253 or M254 or M255 or M256 or M257 or M258 or M259 or M260 or M261 or M262 or M263 or M264 or M265 or M266 or M267 or M268 or M269 or M270 or M271 or M272 or M273 or M274 or M275 or M276 or M277 or M278 or M279 or M280 or M281 or M282 or M283 or M284 or M285 or M286 or M287 or M288 or M289 or M290 or M291 or M292 or M293 or M294 or M295 or M296 or M297 or M298 or M299 or M300 or M301 or M302 or M303 or M304 or M305 or M306 or M307 or M308 or M309 or M310 or M311 or M312 or M313 or M314 or M315 or M316 or M317 or M318 or M319 or M320 or M321 or M322 or M323 or M324 or M325 or M326 or M327 or M328 or M329 or M330 or M331 or M332 or M333 or M334 or M335 or M336 or M337 or M338 or M339 or M340 or M341 or M342 or M343 or M344 or M345 or M346 or M347 or M348 or M349 or M350 or M351 or M352 or M353 or M354 or M355 or M356 or M357 or M358 or M359 or M360 or M361 or M362 or M363 or M364 or M365 or M366 or M367 or M368 or M369 or M370 or M371 or M372 or M373 or M374 or M375 or M376 or M377 or M378 or M379 or M380 or M381 or M382 or M383 or M384 or M385 or M386 or M387 or M388 or M389 or M390 or M391 or M392 or M393 or M394 or M395 or M396 or M397 or M398 or M399 or M400 or M401 or M402 or M403 or M404 or M405 or M406 or M407 or M408 or M409 or M410 or M411 or M412 or M413 or M414 or M415 or M416 or M417 or M418 or M419 or M420 or M421 or M422 or M423 or M424 or M425 or M426 or M427 or M428 or M429 or M430 or M431 or M432 or M433 or M434 or M435 or M436 or M437 or M438 or M439 or M440 or M441 or M442 or M443 or M444 or M445 or M446 or M447 or M448 or M449 or M450 or M451 or M452 or M453 or M454 or M455 or M456 or M457 or M458 or M459 or M460 or M461 or M462 or M463 or M464 or M465 or M466 or M467 or M468 or M469 or M470 or M471 or M472 or M473 or M474 or M475 or M476 or M477 or M478 or M479 or M480 or M481 or M482 or M483 or M484 or M485 or M486 or M487 or M488 or M489 or M490 or M491 or M492 or M493 or M494 or M495 or M496 or M497 or M498 or M499 or M500 or M501 or M502 or M503 or M504 or M505 or M506 or M507 or M508 or M509 or M510 or M511 or M512 or M513 or M514 or M515 or M516 or M517 or M518 or M519 or M520 or M521 or M522 or M523 or M524 or M525 or M526 or M527 or M528 or M529 or M530 or M531 or M532 or M533 or M534 or M535 or M536 or M537 or M538 or M539 or M540 or M541 or M542 or M543 or M544 or M545 or M546 or M547 or M548 or M549 or M550 or M551 or M552 or M553 or M554 or M555 or M556 or M557 or M558 or M559 or M560 or M561 or M562 or M563 or M564 or M565 or M566 or M567 or M568 or M569 or M570 or M571 or M572 or M573 or M574 or M575 or M576 or M577 or M578 or M579 or M580 or M581 or M582 or M583 or M584 or M585 or M586 or M587 or M588 or M589 or M590 or M591 or M592 or M593 or M594 or M595 or M596 or M597 or M598 or M599 or M600 or M601 or M602 or M603 or M604 or M605 or M606 or M607 or M608 or M609 or M610 or M611 or M612 or M613 or M614 or M615 or M616 or M617 or M618 or M619 or M620 or M621 or M622 or M623 or M624 or M625 or M626 or M627 or M628 or M629 or M630 or M631 or M632 or M633 or M634 or M635 or M636 or M637 or M638 or M639 or M640 or M641 or M642 or M643 or M644 or M645 or M646 or M647 or M648 or M649 or M650 or M651 or M652 or M653 or M654 or M655 or M656 or M657 or M658 or M659 or M660 or M661 or M662 or M663 or M664 or M665 or M666 or M667 or M668 or M669 or M670 or M671 or M672 or M673 or M674 or M675 or M676 or M677 or M678 or M679 or M680 or M681 or M682 or M683 or M684 or M685 or M686 or M687 or M688 or M689 or M690 or M691 or M692 or M693 or M694 or M695 or M696 or M697 or M698 or M699 or M700 or M701 or M702 or M703 or M704 or M705 or M706 or M707 or M708 or M709 or M710 or M711 or M712 or M713 or M714 or M715 or M716 or M717 or M718 or M719 or M720 or M721 or M722 or M723 or M724 or M725 or M726 or M727 or M728 or M729 or M730 or M731 or M732 or M733 or M734 or M735 or M736 or M737 or M738 or M739 or M740 or M741 or M742 or M743 or M744 or M745 or M746 or M747 or M748 or M749 or M750 or M751 or M752 or M753 or M754 or M755 or M756 or M757 or M758 or M759 or M760 or M761 or M762 or M763 or M764 or M765 or M766 or M767 or M768 or M769 or M770 or M771 or M772 or M773 or M774 or M775 or M776 or M777 or M778 or M779 or M780 or M781 or M782 or M783 or M784 or M785 or M786 or M787 or M788 or M789 or M790 or M791 or M792 or M793 or M794 or M795 or M796 or M797 or M798 or M799 or M800 or M801 or M802 or M803 or M804 or M805 or M806 or M807 or M808 or M809 or M810 or M811 or M812 or M813 or M814 or M815 or M816 or M817 or M818 or M819 or M820 or M821 or M822 or M823 or M824 or M825 or M826 or M827 or M828 or M829 or M830 or M831 or M832 or M833 or M834 or M835 or M836 or M837 or M838 or M839 or M840 or M841 or M842 or M843 or M844 or M845 or M846 or M847 or M848 or M849 or M850 or M851 or M852 or M853 or M854 or M855 or M856 or M857 or M858 or M859 or M860 or M861 or M862 or M863 or M864 or M865 or M866 or M867 or M868 or M869 or M870 or M871 or M872 or M873 or M874 or M875 or M876 or M877 or M878 or M879 or M880 or M881 or M882 or M883 or M884 or M885 or M886 or M887 or M888 or M889 or M890 or M891 or M892 or M893 or M894 or M895 or M896 or M897 or M898 or M899 or M900 or M901 or M902 or M903 or M904 or M905 or M906 or M907 or M908 or M909 or M910 or M911 or M912 or M913 or M914 or M915 or M916 or M917 or M918 or M919 or M920 or M921 or M922 or M923 or M924 or M925 or M926 or M927 or M928 or M929 or M930 or M931 or M932 or M933 or M934 or M935 or M936 or M937 or M938 or M939 or M940 or M941 or M942 or M943 or M944 or M945 or M946 or M947 or M948 or M949 or M950 or M951 or M952 or M953 or M954 or M955 or M956 or M957 or M958 or M959 or M960 or M961 or M962 or M963 or M964 or M965 or M966 or M967 or M968 or M969 or M970 or M971 or M972 or M973 or M974 or M975 or M976 or M977 or M978 or M979 or M980 or M981 or M982 or M983 or M984 or M985 or M986 or M987 or M988 or M989 or M990 or M991 or M992 or M993 or M994 or M995 or M996 or M997 or M998 or M999 or M1000 or M1001 or M1002 or M1003 or M1004 or M1005 or M1006 or M1007 or M1008 or M1009 or M1010 or M1011 or M1012 or M1013 or M1014 or M1015 or M1016 or M1017 or M1018 or M1019 or M1020 or M1021 or M1022 or M1023 or M1024 or M1025 or M1026 or M1027 or M1028 or M1029 or M1030 or M1031 or M1032 or M1033 or M1034 or M1035 or M1036 or M1037 or M1038 or M1039 or M1040 or M1041 or M1042 or M1043 or M1044 or M1045 or M1046 or M1047 or M1048 or M1049 or M1050 or M1051 or M1052 or M1053 or M1054 or M1055 or M1056 or M1057 or M1058 or M1059 or M1060 or M1061 or M1062 or M1063 or M1064 or M1065 or M1066 or M1067 or M1068 or M1069 or M1070 or M1071 or M1072 or M1073 or M1074 or M1075 or M1076 or M1077 or M1078 or M1079 or M1080 or M1081 or M1082 or M1083 or M1084 or M1085 or M1086 or M1087 or M1088 or M1089 or M1090 or M1091 or M1092 or M1093 or M1094 or M1095 or M1096 or M1097 or M1098 or M1099 or M1100 or M1101 or M1102 or M1103 or M1104 or M1105 or M1106 or M1107 or M1108 or M1109 or M1110 or M1111 or M1112 or M1113 or M1114 or M1115 or M1116 or M1117 or M1118 or M1119 or M1120 or M1121 or M1122 or M1123 or M1124 or M1125 or M1126 or M1127 or M1128 or M1129 or M1130 or M1131 or M1132 or M1133 or M1134 or M1135 or M1136 or M1137 or M1138 or M1139 or M1140 or M1141 or M1142 or M1143 or M1144 or M1145 or M1146 or M1147 or M1148 or M1149 or M1150 or M1151 or M1152 or M1153 or M1154 or M1155 or M1156 or M1157 or M1158 or M1159 or M1160 or M1161 or M1162 or M1163 or M1164 or M1165 or M1166 or M1167 or M1168 or M1169 or M1170 or M1171 or M1172 or M1173 or M1174 or M1175 or M1176 or M1177 or M1178 or M1179 or M1180 or M1181 or M1182 or M1183 or M1184 or M1185 or M1186 or M1187 or M1188 or M1189 or M1190 or M1191 or M1192 or M1193 or M1194 or M1195 or M1196 or M1197 or M1198 or M1199 or M1200 or M1201 or M1202 or M1203 or M1204 or M1205 or M1206 or M1207 or M1208 or M1209 or M1210 or M1211 or M1212 or M1213 or M1214 or M1215 or M1216 or M1217 or M1218 or M1219 or M1220 or M1221 or M1222 or M1223 or M1224 or M1225 or M1226 or M1227 or M1228 or M1229 or M1230 or M1231 or M1232 or M1233 or M1234 or M1235 or M1236 or M1237 or M1238 or M1239 or M1240 or M1241 or M1242 or M1243 or M1244 or M1245 or M1246 or M1247 or M1248 or M1249 or M1250 or M1251 or M1252 or M1253 or M1254 or M1255 or M1256 or M1257 or M1258 or M1259 or M1260 or M1261 or M1262 or M1263 or M1264 or M1265 or M1266 or M1267 or M1268 or M1269 or M1270 or M1271 or M1272 or M1273 or M1274 or M1275 or M1276 or M1277 or M1278 or M1279 or M1280 or M1281 or M1282 or M1283 or M1284 or M1285 or M1286 or M1287 or M1288 or M1289 or M1290 or M1291 or M1292 or M1293 or M1294 or M1295 or M1296 or M1297 or M1298 or M1299 or M1300 or M1301 or M1302 or M1303 or M1304 or M1305 or M1306 or M1307 or M1308 or M1309 or M1310 or M1311 or M1312 or M1313 or M1314 or M1315 or M1316 or M1317 or M1318 or M1319 or M1320 or M1321 or M1322 or M1323 or M1324 or M1325 or M1326 or M1327 or M1328 or M1329 or M1330 or M1331 or M1332 or M1333 or M1334 or M1335 or M1336 or M1337 or M1338 or M1339 or M1340 or M1341 or M1342 or M1343 or M1344 or M1345 or M1346 or M1347 or M1348 or M1349 or M1350 or M1351 or M1352 or M1353 or M1354 or M1355 or M1356 or M1357 or M1358 or M1359 or M1360 or M1361 or M1362 or M1363 or M1364 or M1365 or M1366 or M1367 or M1368 or M1369 or M1370 or M1371 or M1372 or M1373 or M1374 or M1375 or M1376 or M1377 or M1378 or M1379 or M1380 or M1381 or M1382 or M1383 or M1384 or M1385 or M1386 or M1387 or M1388 or M1389 or M1390 or M1391 or M1392 or M1393 or M1394 or M1395 or M1396 or M1397 or M1398 or M1399 or M1400 or M1401 or M1402 or M1403 or M1404 or M1405 or M1406 or M1407 or M1408 or M1409 or M1410 or M1411 or M1412 or M1413 or M1414 or M1415 or M1416 or M1417 or M1418 or M1419 or M1420 or M1421 or M1422 or M1423 or M1424 or M1425 or M1426 or M1427 or M1428 or M1429 or M1430 or M1431 or M1432 or M1433 or M1434 or M1435 or M1436 or M1437 or M1438 or M1439 or M1440 or M1441 or M1442 or M1443 or M1444 or M1445 or M1446 or M1447 or M1448 or M1449 or M1450 or M1451 or M1452 or M1453 or M1454 or M1455 or M1456 or M1457 or M1458 or M1459 or M1460 or M1461 or M1462 or M1463 or M1464 or M1465 or M1466 or M1467 or M1468 or M1469 or M1470 or M1471 or M1472 or M1473 or M1474 or M1475 or M1476 or M1477 or M1478 or M1479 or M1480 or M1481 or M1482 or M1483 or M1484 or M1485 or M1486 or M1487 or M1488 or M1489 or M1490 or M1491 or M1492 or M1493 or M1494 or M1495 or M1496 or M1497 or M1498 or M1499 or M1500 or M1501 or M1502 or M1503 or M1504 or M1505 or M1506 or M1507 or M1508 or M1509 or M1510 or M1511 or M1512 or M1513 or M1514 or M1515 or M1516 or M1517 or M1518 or M1519 or M1520 or M1521 or M1522 or M1523 or M1524 or M1525 or M1526 or M1527 or M1528 or M1529 or M1530 or M1531 or M1532 or M1533 or M1534 or M1535 or M1536 or M1537 or M1538 or M1539 or M1540 or M1541 or M1542 or M1543 or M1544 or M1545 or M1546 or M1547 or M1548 or M1549 or M1550 or M1551 or M1552 or M1553 or M1554 or M1555 or M1556 or M1557 or M1558 or M1559 or M1560 or M1561 or M1562 or M1563 or M1564 or M1565 or M1566 or M1567 or M1568 or M1569 or M1570 or M1571 or M1572 or M1573 or M1574 or M1575 or M1576 or M1577 or M1578 or M1579 or M1580 or M1581 or M1582 or M1583 or M1584 or M1585 or M1586 or M1587 or M1588 or M1589 or M1590 or M1591 or M1592 or M1593 or M1594 or M1595 or M1596 or M1597 or M1598 or M1599 or M1600 or M1601 or M1602 or M1603 or M1604 or M1605 or M1606 or M1607 or M1608 or M1609 or M1610 or M1611 or M1612 or M1613 or M1614 or M1615 or M1616 or M1617 or M1618 or M1619 or M1620 or M1621 or M1622 or M1623 or M1624 or M1625 or M1626 or M1627 or M1628 or M1629 or M1630 or M1631 or M1632 or M1633 or M1634 or M1635 or M1636 or M1637 or M1638 or M1639 or M1640 or M1641 or M1642 or M1643 or M1644 or M1645 or M1646 or M1647 or M1648 or M1649 or M1650 or M1651 or M1652 or M1653 or M1654 or M1655 or M1656 or M1657 or M1658 or M1659 or M1660 or M1661 or M
--------------------	--