

Photographs of EUT Setup and Antenna Location

The photographs of EUT and setup for SAR testing are shown as follows.


Antenna Location

1. Antenna Host Platform Location Information

Include a dimensioned photo(s) or dimensioned drawing(s) of Main and Aux antenna placements (measurements are not required for receive-only antenna).


Any antenna that transmits must show dimensions to bottom of laptop. Provide a description of the materials that are used for supporting or surrounding transmit antennas; for example, non-conductive plastics vs. conductive coated plastic or metallic materials.

Aux Antenna:

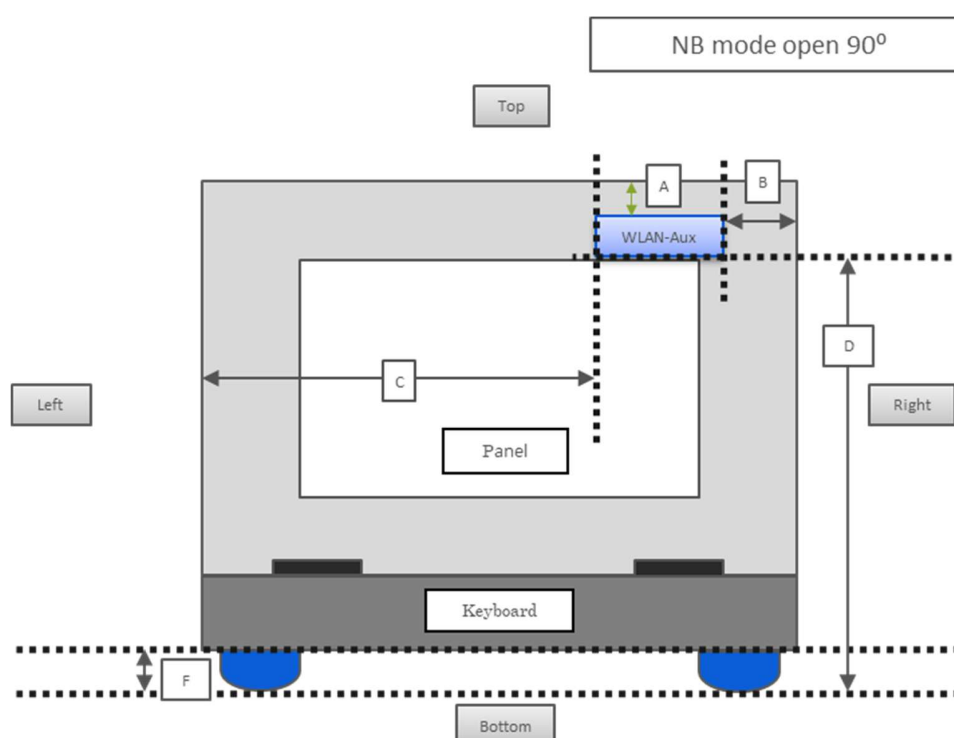

Minimum Separation Distance			
Item	Antenna	Position	Distance (mm)
A	WLAN-Aux	to Top	5
B		to Right	40
C		to Left	234.90
D		to Bottom	201
F	NB	Bumper thickness	3.5

Main Antenna:

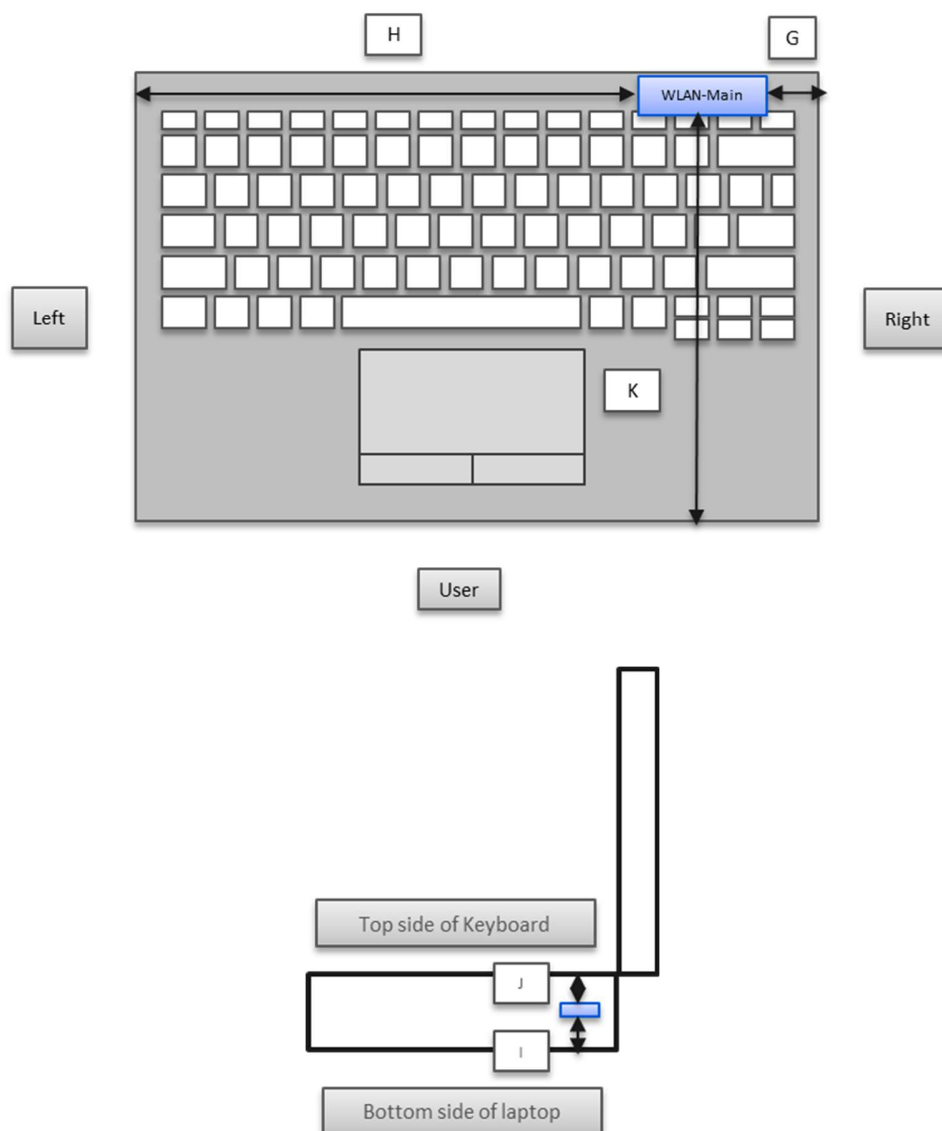


Minimum Separation Distance			
Item	Antenna	Position	Distance (mm)
G	WLAN-Main	to Right	79.17
H		to Left	190.76
I		to Bottom of laptop	8.5
J		to Top side of Keyboard	2.96
K		to User (front)	192.61

2. Antenna dimensional information for SAR evaluation


Include a dimensioned photo(s) or dimensioned drawing(s) showing the distance (mm) between the transmit antennas and the user. For notebook/laptop hosts show lapheld position (example below). For tablet hosts show all orientations including lapheld, primary & secondary portrait, primary & secondary landscape positions. Include a description of any proximity sensors or power throttling implementations that limit or exclude use of any host orientation.

Antennas on the panel section

Aux Antenna:

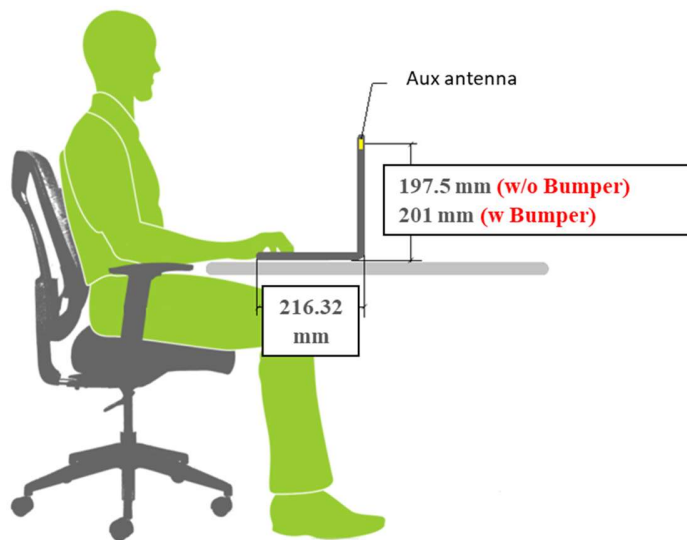

Main Antenna:

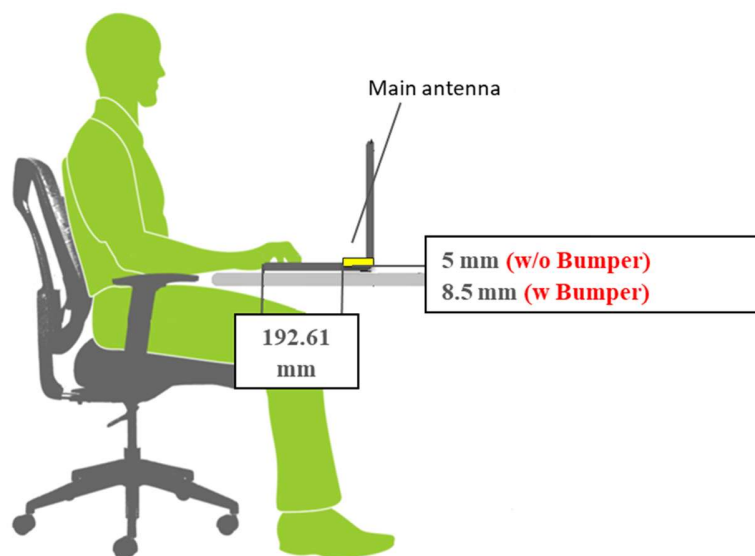

<Photographs of Bottom Body SAR Test Setup>



Bottom of Laptop Tested at 0 mm

<Photographs of Power Density Test Setup>



Bottom of Laptop Tested at 0 mm