

08/09/2017






2-IN-1 TABLET/NOTEBOOK USER GUIDE

PB1009X





  In the box

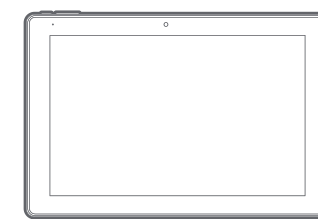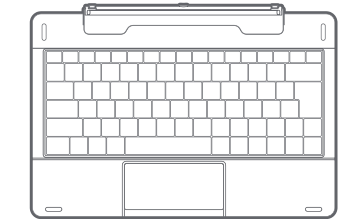10.1" tablet

Keyboard

  User guide

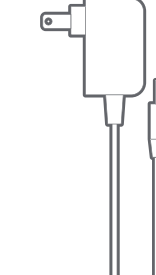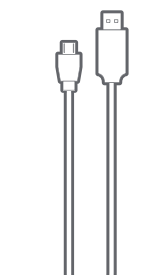Charger

Micro USB cable


Care & safety precautions

- During charging, keep your device and charger near room temperature for efficient battery charging.
- New batteries are not fully charged.
- The included charger is intended for indoor use only.
- Service should only be provided by an authorized service provider.
- Never attempt to disassemble, repair or modify the tablet yourself.
- Do not use the tablet in rain or other wet locations.
- Avoid spilling any liquid on the tablet.
- Do not use the tablet gets wet, until all cables and turn off the tablet.
- Do not attempt to dry the tablet with an external heat source.
- Unplug all cables and turn off the tablet before cleaning.
- Do not use household cleaners, solvents, alcohol or abrasives to clean the tablet.
- Do not attempt to disassemble the tablet.
- Routinely check the tablet for proper and safe conditions. If there is any damage, or broken parts, remove the tablet from use.
- If for any reason the screen display is fractured or cracked, immediately remove the product from use and contact Customer Support.
- It is rare but possible for screens to be triggered by light flashes or patterns such as those on computer or TV screens. To reduce exposure to this potential hazard, play watch in a well-lit room, at an appropriate distance from the screen and take 10- to 15-minute breaks every hour.
- Cords could be a strangulation hazard.
- Keep out of reach of children under 3 years of age.
- Children pulling on the cord could cause the computer monitor or other equipment to which the device is connected to fall with possible or property damage, serious injury or death. Adult supervision required during use.
- Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss.
- When using headphones or earbuds, it is recommended that the product is listened to at a lower volume for shorter periods of time.
- Set the volume while in a quiet environment; turn the volume down if you cannot hear the people speaking near you.
- Limit the listening time to 30 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected.
- If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 THE LIGHTNING BOLT WITH AN ARROW HEAD SYMBOL, WITHIN AN EXPLANATORY TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED DANGEROUS VOLTAGE WITHIN THE PRODUCTS/ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRICAL SHOCK TO PERSONS.	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 THE EXCLAMATION POINT WITHIN THE EXPLANATORY TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (WARNING) INSTRUCTIONS FOR THE LITERATURE ACCOMPANYING THE PRODUCT.
---	--	---

 Buttons, ports & hardware

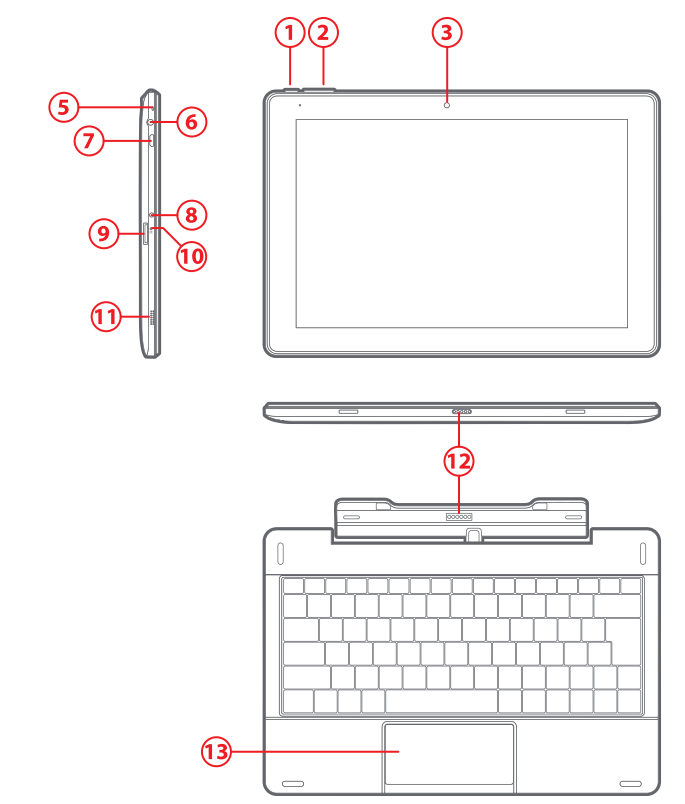

  - 1 Power button
- 2 Volume buttons
- 3 Front camera
- 4 Rear camera
- 5 Microphone
- 6 Headphone jack
- 7 Micro USB port
- 8 DC charger port
- 9 Micro SD card slot
- 10 Reset button
- 11 Speaker
- 12 Pogo pins
- 13 Touchpad

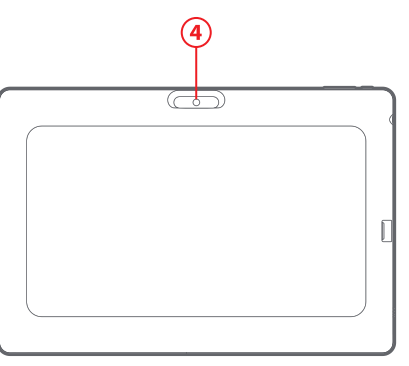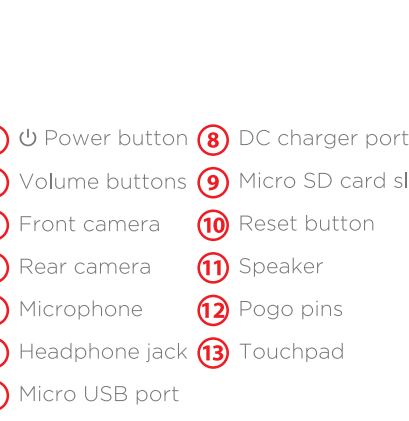Specifications:

- 10.1" IPS display (1280 x 800)
- Android 7.0 Nougat
- 64-bit, Intel quad-core processor
- 1GB RAM
- 32GB internal storage* (expandable with optional Micro SD™ card)
- 5,000 mAh Li-ion battery
- Front + rear cameras
- Wi-Fi 802.11 b/g/n
- Bluetooth 4.0

*Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

 
Expanding the storage

Inserting a Micro SD card

The tablet supports Micro SD cards up to 64GB (not included).


To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.

To remove the Micro SD card, gently press it inward to eject.

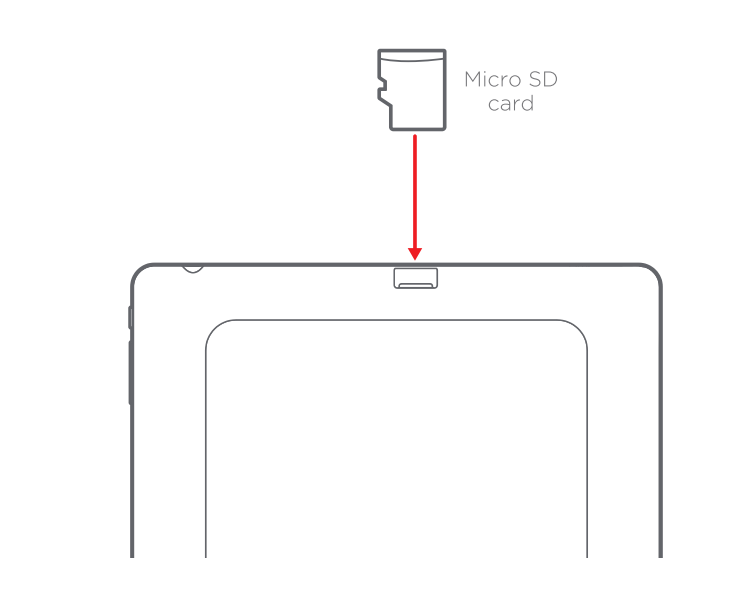

Charging

 Connect the tablet to a wall outlet using the included power adaptor as shown below.

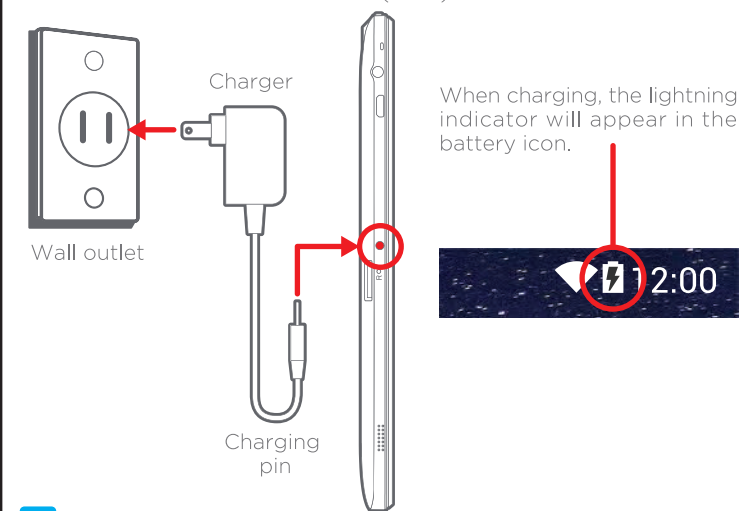

Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet (turning the display off) to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.
- It is recommended to keep the brightness level at 50% or under if the tablet is in use while charging.

Power ON / OFF & Reset

Turning on the tablet

Press & hold the  button until the startup screen appears.

Power off the tablet

 
Press & hold the  button until the "Power off" option appears.

Lock the tablet (standby)

Briefly press the  button. (Lock the tablet to conserve the battery).

Unlock the tablet

Briefly press the  button, and slide the "Lock icon" up.

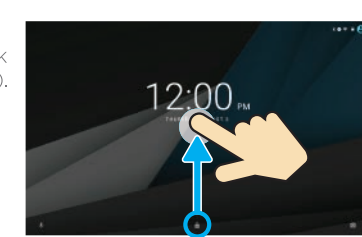


Resetting the tablet

If the tablet malfunctions or freezes, you can use the reset button to restart it.

To reset the tablet, take a metal pin (such as the end of a paper clip) and gently push the recessed reset button on the side of the tablet as shown below.

 The tablet will restart.

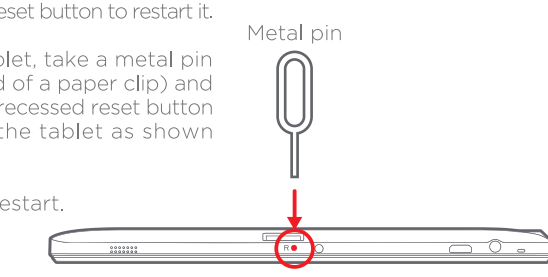

Turning on

 
- 1 Press and hold the  Power button to get started.



Startup screen

Setup wizard


- 2 Follow the initial setup wizard prompts.

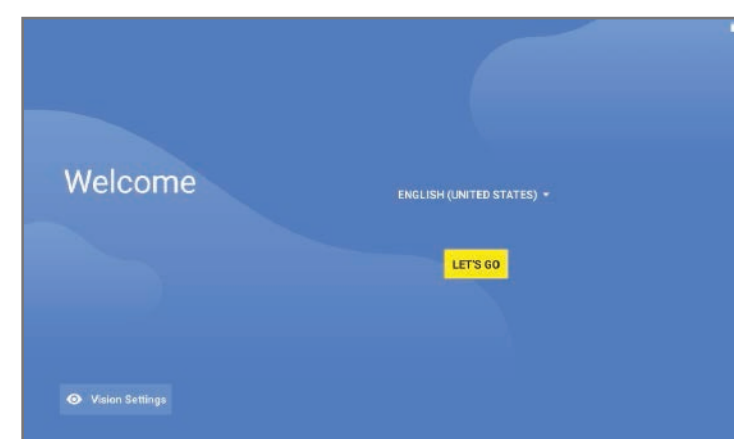

Welcome

Google account

 - 3 To use the Google Play store, sign into or create a Google account.

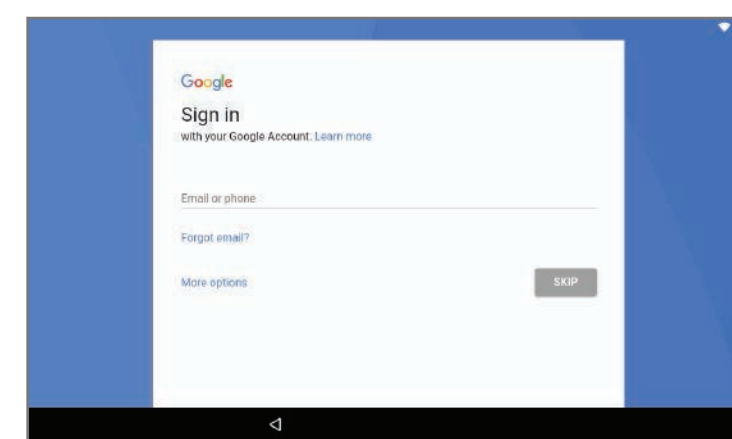

Google account

i If you use Gmail™, you already have a Google account —if not, you can create an account now.

Home Screen

Home Screen

Press and hold widgets to place them on the home screen as shown below.

Swipe up indicator on the home screen to access the Apps Screen.

Notifications and Quick Settings

Notifications panel

Swipe down from the top edge of the screen to display the Notifications panel where you can view and reply to your emails, check software updates, reminders and more.

Quick Settings panel

Swipe down twice from the top edge of the screen to expand and access the Quick Settings panel, where you can easily enable/disable Wi-Fi, Bluetooth, Airplane mode and other settings.

Connecting

Wi-Fi and Bluetooth®

To enable/disable Wi-Fi or Bluetooth®, simply tap the icons on the Quick Settings panel as shown below.

To access more settings options, select the icon.

Cast screen

Show your tablet's screen on devices with Miracast Wireless display capabilities:

1. Turn on the Miracast feature on your Miracast supported TV or Miracast dongle (not included).
2. Connect your tablet to the same Wi-Fi network as your Miracast enabled TV.
3. Go to Settings > Display > Cast and tap on "i".

Optimal video performance is achieved with videos that are 720p or under.

Keyboard Dock

To dock the tablet to the keyboard, align the tablet and the keyboard, then slide the tablet into the dock as shown below.

To undock the tablet from the keyboard, firmly hold the keyboard as shown below, then gently pull the tablet upwards.

The tablet will automatically recognize the keyboard when docked properly.

Enable wireless display

Legal information

FCC Part 15: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) Rules. This equipment provides reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

Information Regarding Exposure to Radio Frequency Energy
Your device is designed and manufactured not to exceed the emission limits for exposure to RF energy set by the Federal Communications Commission of the United States (FCC). Information on your device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/> after searching on the FCC ID for your device, which can be found on the back of the device.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and the software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Battery Disposal & Recycle
This device contains a lithium battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.
☎ 1-800-822-8837

Designed and distributed by Southern Telecom Inc, 5601 1st Avenue, Brooklyn, NY 11220
© 2017 All Rights Reserved. Made in China.
Packard Bell® is a registered trademark of J&H Lee Properties, LLC and is used under license.
Android, Android logo, Google Play, the Google Play logo and other marks are trademarks of Google Inc.
The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc.
All other trademarks and trade names are those of their respective owners.

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Avis d'industrie Canada (IC): Cet appareil est conforme aux normes d'industrie Canada exemptes de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celle pouvant causer un mauvais fonctionnement de l'appareil.

Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER
This Product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:
Product Type: Tablet, Territory: United States/Canada, Parts Warranty: 1 Year, Labor Warranty: 1 Year

To obtain warranty service:

- Call the Customer Support number located below, or go to our website portal to receive an RMA number.
- Provide proof of the date of purchase within the package (Date of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Customer Support:
1-877-768-8481 (Toll Free) www.southern telecom.com
Monday - Friday: 8AM - 10PM (EST) Click on "Product Support"

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Customer Service Dept. 36
c/o Southern Telecom
400 Kennedy Drive
Sayreville, NJ 08872

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY SET FORTH ABOVE, ARE EXTENDED FURTHER INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE EXCLUSIVE WARRANTY PERIOD STATED ABOVE, IN WRITTEN FORM, SUPERSEDES ANY ORAL WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, ORAL OR WRITTEN, WITH RESPECT TO THE PRODUCTS SHALL BE BINDING. ON DISTRIBUTION, REPAIR, REPLACEMENT, OR RETURN OF THE ORIGINAL PURCHASE PRICE - NO ADDITIONAL SALE INCREASER - ARE THE EXCLUSIVE PROPERTIES OF THE CONSUMER. IN RETURN FOR THE PURCHASE PRICE, THE CONSUMER SHALL BE OBLIGATED TO ACCEPT THE PRODUCT, INCLUDING ANY DEFECTS, AS SHOWN BY THE CONSUMER, WITHOUT ANY ADDITIONAL CHARGE. THE CONSUMER SHALL NOT BE OBLIGATED TO RETURN THE PRODUCT, EXCEPT AS SHOWN WHEN NO OTHER AGREEMENTS SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONCERNING THE PRODUCT RETURNED TO THE DISTRIBUTOR, THE DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY THE DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long a warranty may last. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.