

PTAB935: QSG

05/27/2014




9" Tablet

In the box

Buttons, ports & hardware



Quick Start Guide Model : PTAB935

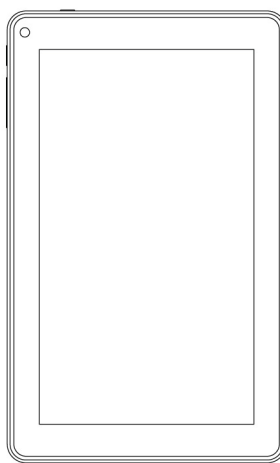


9" Tablet




Quick Start Guide




AC Adaptor

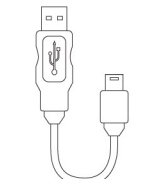

USB Cable

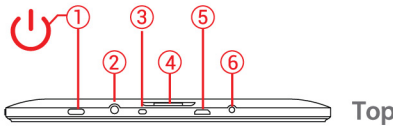


Top

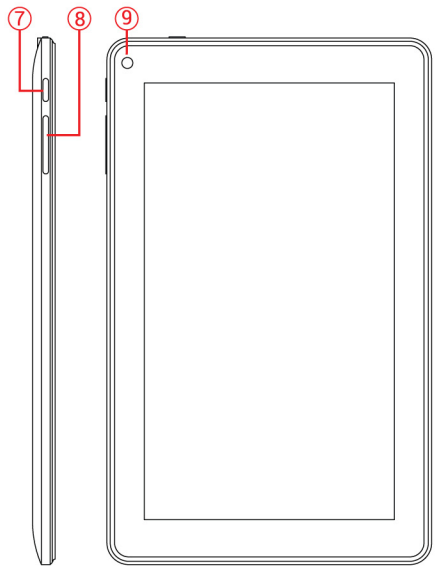

Side

Front

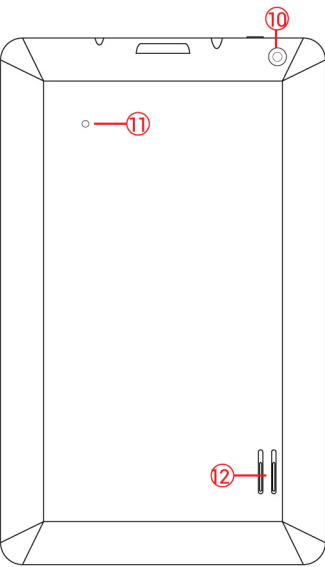

Back

- 1 Power
- 2 Headphone Jack
- 3 Microphone
- 4 Micro SD Card Slot
- 5 Micro USB port
- 6 DC Input
- 7 Back
- 8 Volume
- 9 Front Camera
- 10 Rear Camera
- 11 Reset
- 12 Speaker

Google Play™

Google Play enables you to store up to 20,000 songs for free and buy millions of new songs. It's home to 1,000,000 Android™ apps and games. It houses the world's largest selection of eBooks. It's where you can rent thousands of movies including new releases and HD titles. It's how you buy and experience digital entertainment on your Android device and any web browser on any computer.

To take advantage of these features please login or set up a Google™ account, this can be done in the setup wizard the first time you power on the tablet.





Play Store

Charging the tablet

Charging the battery:

Connect the tablet to a wall outlet using the included AC adaptor as shown below.

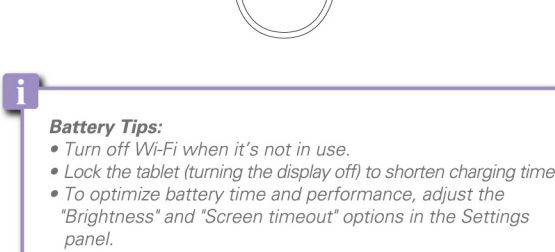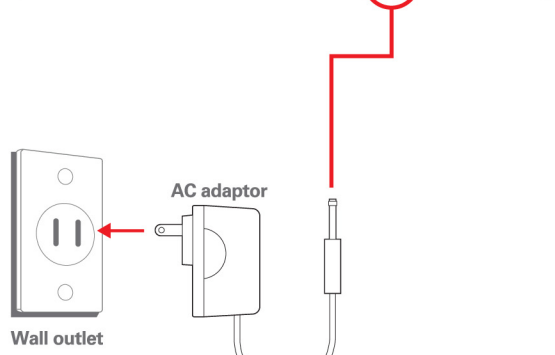

Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet (turning the display off) to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.


Power ON / OFF

Turning on the tablet

Press & hold the button until the startup screen appears.

Power off the tablet

Press & hold the button until the "Power off" options appear.

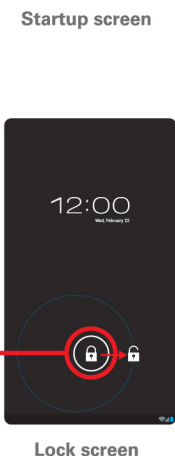


Lock screen

Connecting


Wi-Fi and Bluetooth®

To setup Wi-Fi or connect the tablet to a Bluetooth enabled device, slide down on the top right of the Home screen as shown below.

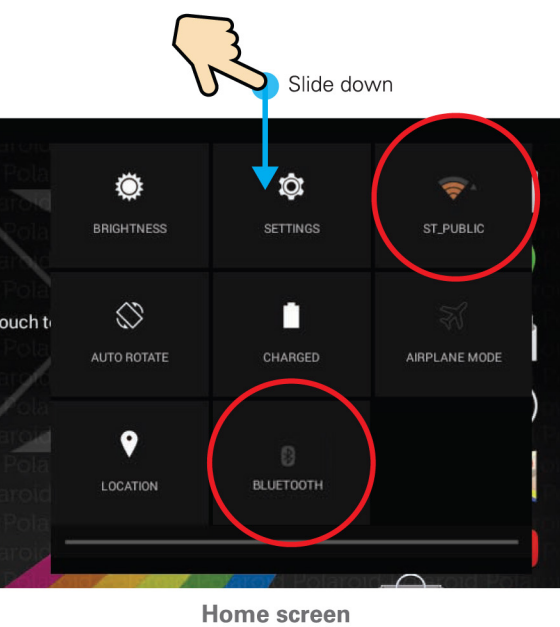

Home screen

Home screen

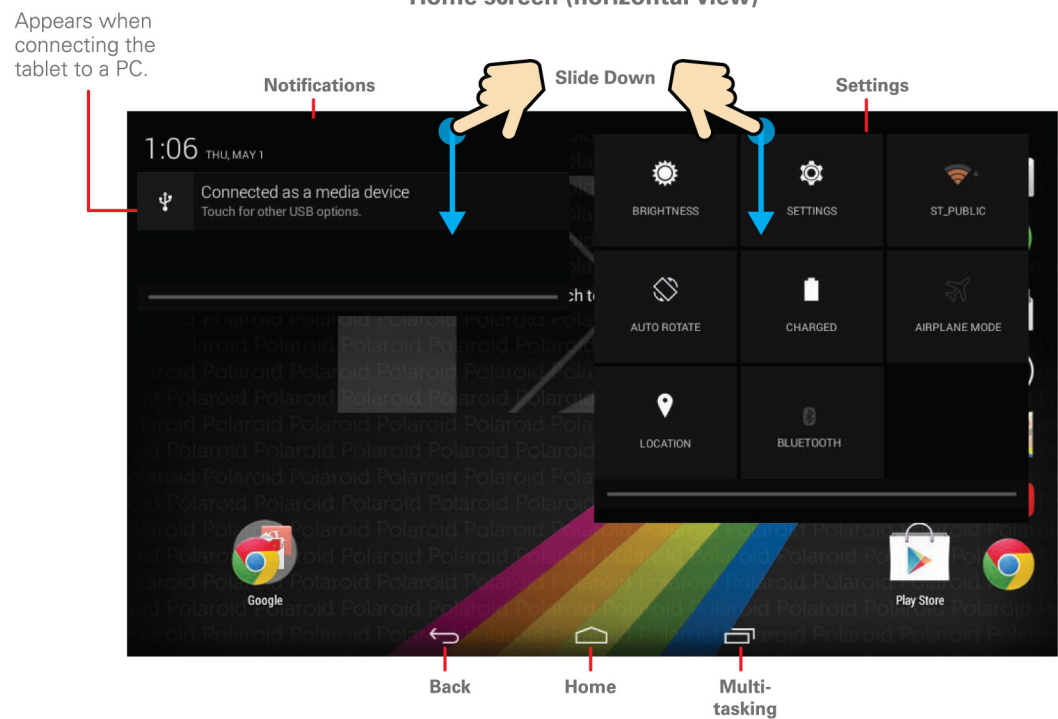

Home screen

Apps screen




Apps screen

Widgets

To add a widget, press and hold anywhere on the home screen. Select the Widgets option as shown below.



Press & hold Widgets to place them on the Home screen.

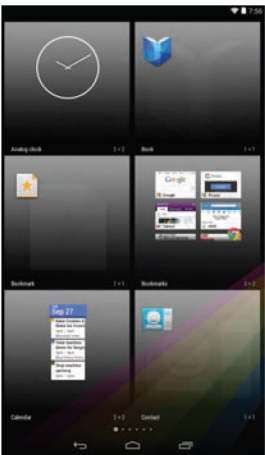


Micro SD card

Inserting a Micro SD card

The tablet supports Micro SD cards up to 32GB (not included).

To install a Micro SD card into the tablet, insert the card as shown below into the card slot until it clicks and locks into place. To remove the Micro SD card, gently press it inward to eject.

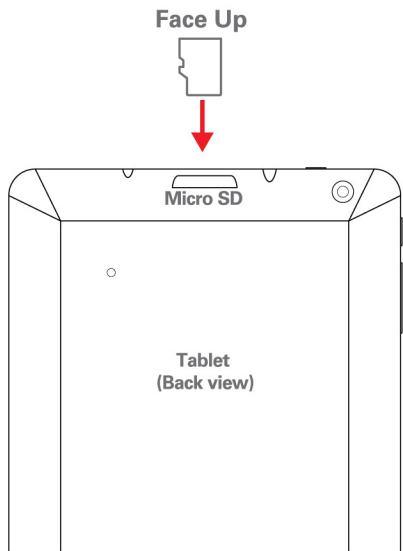

Tablet (Back view)

Specifications

- Operating System: Android™ 4.4 (KitKat®)
- Processor: Dual-Core
- Display: 9" (1024X600)
- Cameras: Front + Rear
- Speaker: Built-in
- Internal Memory: 8GB*
- External Memory: Micro SD (expandable)
- Connectivity: Wi-Fi (802.11 b/g/n) & Bluetooth®
- Battery: Rechargeable Li-ion Polymer

*Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

Legal information

FCC Part 15: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. *This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

*PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governance in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to <http://www.polaroid.com> and reference Social Responsibility <http://www.polaroid.com/social-responsibility> to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

www.polaroid.com

Android, Google, Google Play and other marks are trademarks of Google Inc. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. All other trademarks and trade names are those of their respective owners.

LIMITED WARRANTY TO ORIGINAL CONSUMER

This Product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

Product Type : Tablet PC Territory: United States / Canada
Parts Warranty : 1 Year Labor Warranty : 1 Year

Customer Support:
☎ 1-877-768-6481 (Toll Free)
Monday - Friday 9AM - 10PM (EST)
Click on "Product Support"

To receive Warranty service, the original consumer purchaser must contact Southern Telecom Inc. or an authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to Distributor, or an authorized service provider of the Distributor, in order to obtain the requested service. This Warranty covers manufacturing defects in materials and workmanship encountered in the normal, noncommercial use of the Product, and does not cover consumer instruction, delivery, installation, software issues, set-up, adjustments, cosmetic damage or damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the Product. In addition, this Warranty does not cover images "burnt" into the screen. The Warranty applies to the original consumer only and does not cover products sold AS IS or WITH ALL FAULTS, sold as Reconditioned, Refurbished or Re-manufactured, or consumables (e.g., fuses, batteries, bulbs etc.). The Warranty is invalid if the factory-applied serial number has been altered or removed from the Product. This Warranty is valid only in the country where the consumer purchased the product, and only applies to products purchased and serviced in that country.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE. Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Polaroid, Polaroid & Pixel, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.

© 2014 All Rights Reserved