


10.1" Tablet

 
In the box

Buttons, ports & hardware





Quick Start Guide

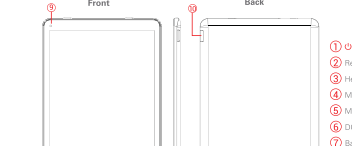


Top

Front

Back

- ① Power Button
- ② Reset
- ③ Headphone Jack
- ④ Micro USB port
- ⑤ Mini HDMI
- ⑥ DC Input
- ⑦ Back
- ⑧ Microphone
- ⑨ Front Camera
- ⑩ Micro SD Card Slot
- ⑪ Speaker

 Quick Start Guide
Model: P10



AC Adapter

USB Cable

Google Play™

Charging the tablet


Power ON / OFF

Google Play enables you to store up to 20,000 songs for free and buy millions of new songs. It's home to 1,000,000 Android™ apps and games. It houses the world's largest selection of eBooks. It's where you can rent thousands of movies including new releases and HD titles. It's how you buy and experience digital entertainment on your Android device and any web browser on any computer.

To take advantage of these features please sign or set up a Google™ account, this can be done in the setup wizard the first time you power on the tablet.



Charging the battery:
Connect the tablet to a wall outlet using the included AC adapter as shown below.

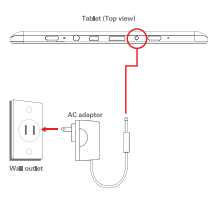

Tablet (Top view)

Wall outlet

 
AC adapter

Turning on the tablet
Press & hold the Q button until the startup screen appears.

Power off the tablet
Press & hold the Q button until the "Power off" options appear.

Lock the tablet (standby)
Briefly press the Q button. (Lock the tablet to conserve the battery).

Unlock the tablet
Briefly press the Q button, and slide the "Lock icon" to the right.

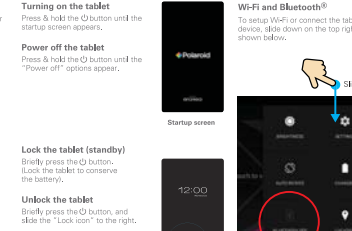

Startup screen

Lock screen

Home screen

Wi-Fi and Bluetooth®

To setup Wi-Fi or connect the tablet to a Bluetooth enabled device, slide down on the top right of the Home screen as shown below.



Home screen

Appears when connecting the tablet to a PC.

Home screen (horizontal view)

Press & hold to charge wallpaper

Widgets

Press the icon to return to the Home screen

Press & hold widgets to place them on the Home screen

Micro SD card

Inserting a Micro SD card

The tablet supports Micro SD cards up to 64GB not included. To install a Micro SD card into the tablet, insert the card as shown below into the card slot until it clicks and locks into place. To remove the Micro SD card, gently press it inward to eject.

Legal information

Do not use this equipment before being trained and tested to comply with the requirements for a **Basic End User** when using this equipment. Consult the **Basic End User** manual for more information.

To connect:

1. Connect the mini end of the HDMI cable to the HDMI port of the tablet.
2. Connect the other end of the HDMI cable to the HDMI port of the TV or display.
3. Select the correct input on your TV.
4. The tablet display is now shown on your TV or display.

HD video out

Tablet (Top view)

TV (Front view)

HDMI cable (not included)

Limited warranty

UNITED WARRANTY TO ORIGINAL CONSUMER

HP, Hewlett-Packard Company, and its subsidiaries and affiliates (collectively, "HP") warrant that the tablet and accessories are free from defects in materials and workmanship under normal use and service for the period of time specified in this warranty. This warranty is limited to the original consumer who purchased the tablet and accessories from HP or an authorized HP reseller. This warranty does not cover damage caused by accident, misuse, or unauthorized repair or alteration. This warranty is void if the serial number has been removed or altered. This warranty is not transferable. For more information, see the **Warranty and Service** section of the **HP Support** website.

WARRANTY LIMITATIONS

HP does not warrant the tablet or accessories for damage caused by accident, misuse, or unauthorized repair or alteration. This warranty is void if the serial number has been removed or altered. This warranty is not transferable. For more information, see the **Warranty and Service** section of the **HP Support** website.

WARRANTY EXCLUSIONS

HP does not warrant the tablet or accessories for damage caused by accident, misuse, or unauthorized repair or alteration. This warranty is void if the serial number has been removed or altered. This warranty is not transferable. For more information, see the **Warranty and Service** section of the **HP Support** website.