


14.3.3 Printer

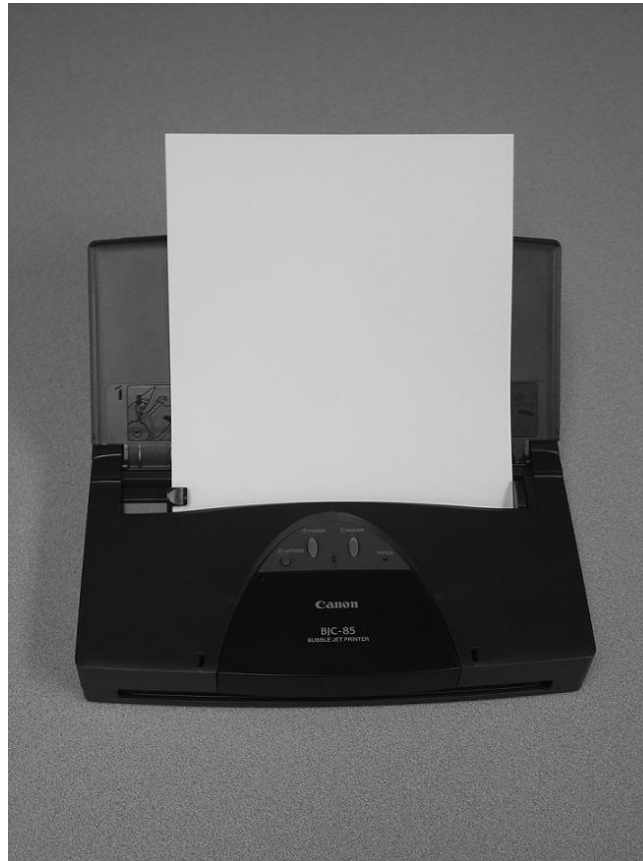


14.3.4 V2 Computer (Screen and Keyboard)



14.3.5 V2 MIL Ports



14.3.6 V2 Power and Data Cables

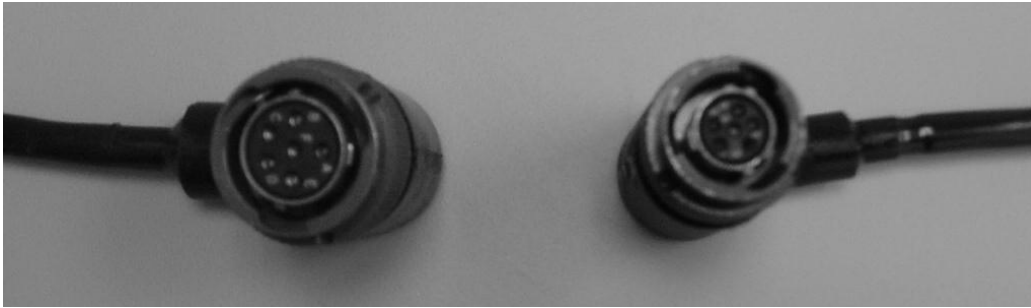

Left to Right -- Power Cable, Data Cable

15. Index

A

About this Manual	2-3
A-Kit	1-1
FMTV – Vehicle Interior	14-1
FMTV Transceiver Mount	14-4
HEMTT – Vehicle Interior	14-2
HEMTT Transceiver Mount	14-4
HET – Vehicle Interior	14-2
HET Transceiver Mount	14-5
HMMWV – Vehicle Interior	14-3
HMMWV Transceiver Mount	14-5
PLS – Vehicle Interior	14-3
PLS Transceiver Mount	14-6
Assignments Tab (TracerLink)	6-9
Autotrack (TracerLink)	6-11

B

Batteries	
CS Laptop Spare	3-2
B-Kit	2-3
Bumper Number	
Change Bumper Number	5-15
Release Bumper Number	7-16

C

CADRG (NIMA) Maps	
General Information	6-20
Loading CADRG Maps to the Computer's Hard Drive	6-24
NIMA Raster Kit Control	6-20
Viewing CADRG Maps Directly from the Hard Drive	6-26
Center on Vehicle (TracerLink)	6-19
Change Center (TracerLink)	6-6
Concept of Operations	2-1
Control Station	2-3
Create Group	7-1
CS Control Box	4-1
Delete Group	7-10
Demote Control Station	7-14
Equipment List	3-2
Installation	3-4
Picture	14-7
Power ON/OFF	4-1
Promote Mobile Unit	7-13
Release Bumper Number	7-16
CSSee Control Station	

D

Debug Log	9-1
Display Position Report Time (TracerLink)	6-17
Displaying Individual Vehicles (TracerLink)	6-15

F

FMTV	
A-Kit -- Transceiver Mount	14-4
A-Kit -- Vehicle Interior	14-1

Control Panel	14-1
---------------------	------

G

GPS (Setting the Reporting Rate)	5-14
Groups	
Create Group	7-1
Delete Group	7-10
Hiding an Entire Group (TracerLink)	6-14
Modify Group	7-6
Review Groups	5-15
Sending a Group Message	5-9
Sending messages while outside of	5-10

H

HEMTT	
A-Kit -- Transceiver Mount	14-4
A-Kit -- Vehicle Interior	14-2
HET	
A-Kit -- Transceiver Mount	14-5
A-Kit -- Vehicle Interior	14-2
Hiding Groups (TracerLink)	6-14
Hiding Individual Vehicles (TracerLink)	6-15
Hiding Position Report Time (TracerLink)	6-17
HMMWV	
A-Kit -- Transceiver Mount	14-5
A-Kit -- Vehicle Interior	14-3

I

Icon	
MTS Messenger	5-1
TracerLink Startup	6-2
Vehicle Server	6-2
Information Security	2-1
Installation	
Control Station	3-4
PLGR (Control Station)	3-5
Transit Case (Opening)	3-1

K

Kit Bar (TracerLink)	6-9
-----------------------------------	-----

L

Lat-Long Display (Changing in MTS Messenger)	5-12
LEDs (Light Emitting Diodes)	
Transceiver	9-3
Loading NIMA CADRG Maps to a Hard Drive	6-24

M

Map Viewer (TracerLink)	6-3
Maps	
Manipulating the Map Viewer	See TracerLink
NIMA CADRG	6-20
Various Formats	6-4
Measure Distances on a Map (TracerLink)	6-6
Message Routing Architecture	2-1
Messaging	

Printing Messages	5-14
Reading	5-4
Reading Received Messages	5-5
Reviewing Sent Messages	5-6
Sending	5-7
Starting	5-1
MT 2010	See Transceiver
MT-2011	See Transceiver
MTS Messenger	5-1
Error Message	8-1
Lat-Long Display	5-12
Main MTS Messenger Window	5-3
Print Message Log	5-14
Reading Messages	5-4
Reviewing a Sent Message	5-6
Sending Messages	5-7
Set GPS Rate	5-14
Starting	5-1
The Options Menu	5-12
MTS Overview	2-1
N	
NIMA CDRG Maps	6-20
Loading NIMA CDRG Maps to a Hard Drive	6-24
Viewing CDRG Maps from a Compact Disk (CD)	6-20
Viewing CDRG Maps from a Hard Drive	6-26
O	
Options	
Clear locally store information	5-16
Options Menu	5-12
P	
Pan a Map (TracerLink)	6-6
PLGR	
CS Installation	3-5
PLS	
A-Kit -- Transceiver Mount	14-6
A-Kit -- Vehicle Interior	14-3
Printer	4-2
Picture	14-8
Printing a Message Log	5-14
R	
Reading Messages	5-4
Reset Map (TracerLink)	6-7
Reviewing a Sent Message	5-6
Right Click Pop Up Menu	6-5
S	
Safety	1-1
Bumping Injuries	1-2
Driving Operation	1-2
Electric Shock Injuries	1-3
Procedures for Treating Victims of Electrical Shock:	1-4
Repetitive Stress Injuries	1-3
Save TracerLink Configuration	6-8
Selection Tab (TracerLink)	6-9
Sending a Group Message	5-9
Sending a Message	5-7
Server Vehicle Kit Control Window (TracerLink)	6-8

Set GPS Rate	5-14
Showing Groups (TracerLink)	6-14
Spare parts	11-1
Starting MTSMessage	5-1
Starting TracerLink	6-2
Symbols (TracerLink)	6-4
System Administrator Tasks	9-1
Check and Troubleshooting TracerLink	9-4
Check Cables	9-4
Check LEDs	9-4
Debug Log	9-1
Using MTS Messenger Help	9-1

T

Tools	12-1
Trace (TracerLink)	6-12
TracerLink Mapping	6-1
Assignments Tab	6-9
Autotrack	6-11
Center on Vehicle	6-19
Change Center	6-6
Change Units of Measure	6-7
Displaying & Hiding Group Position Labels	6-18
Displaying & Hiding Vehicle Position Labels	6-17
Displaying & Hiding Vehicles	6-15
Hiding Groups	6-14
Loading NIMA CDRG Maps to a Hard Drive	6-24
Map Viewer	6-3
Measure Distances	6-6
NIMA CDRG Maps	6-20
Pan a Map (Move)	6-6
Reset Initial View	6-7
Right Click Pop Up Menu	6-5
Save TracerLink Configuration	6-8
SelectionTab	6-9
Server Vehicle Kit Control Window	6-8
Showing Groups	6-14
Starting TracerLink	6-2
Symbols	6-4
Trace	6-12
Viewing CDRG Maps from a Compact Disk (CD)	6-20
Viewing CDRG Maps from a Hard Drive	6-26
Zooming	6-6

Transceiver

CS Installation	3-4
Picture	14-7
V2 Installation	3-8
Transit Case	3-1
Control Station Contents	3-2
Opening	3-1
V2 Contents	3-6
Troubleshooting	8-1

U

Units of Measure (TracerLink)	6-7
--	------------

V

V2 - Standard System

MIL Ports, Picture	14-9
Picture	14-9
Power and Data Cables, Picture	14-10
V2 – Standard System	
Control Box	4-4

Equipment List	3-6
General Information	2-3
Installation	3-8
Power ON/OFF	4-4
Viewing CADRG Maps from a Compact Disk (CD)	6-20
Viewing CADRG Maps from a Hard Drive.....	6-26

W	
Warranty.....	10-1
Z	
Zooming	6-6