
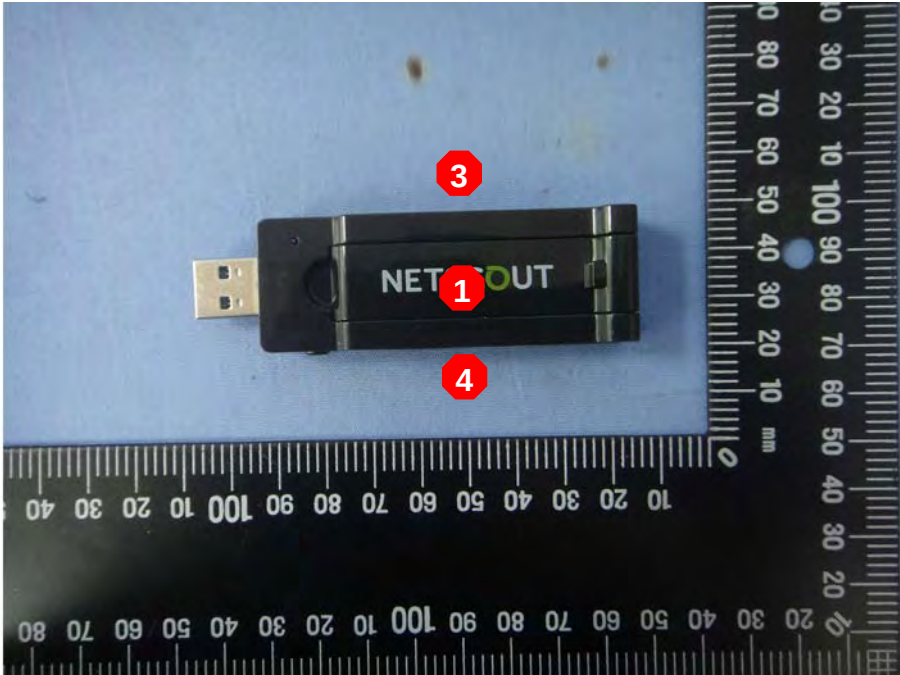
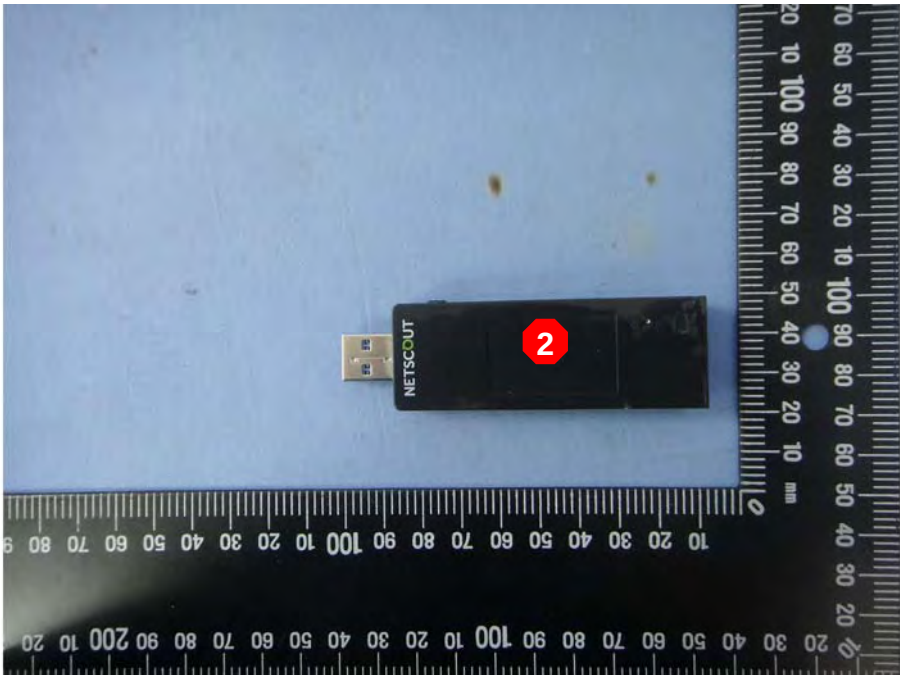



SAR Test Setup Photographs

EUT Side Definition		
Mode	Side	
1	Horizontal -Down	
2	Horizontal-Up	
3	Vertical Back	
4	Vertical Front	
Note: We choose the maximum results of each test positions to provide the cube locations.		


Phantom Position : Flat	EUT side : Horizontal-Up
Spacing to phantom : 5 mm	Accessory : N/A

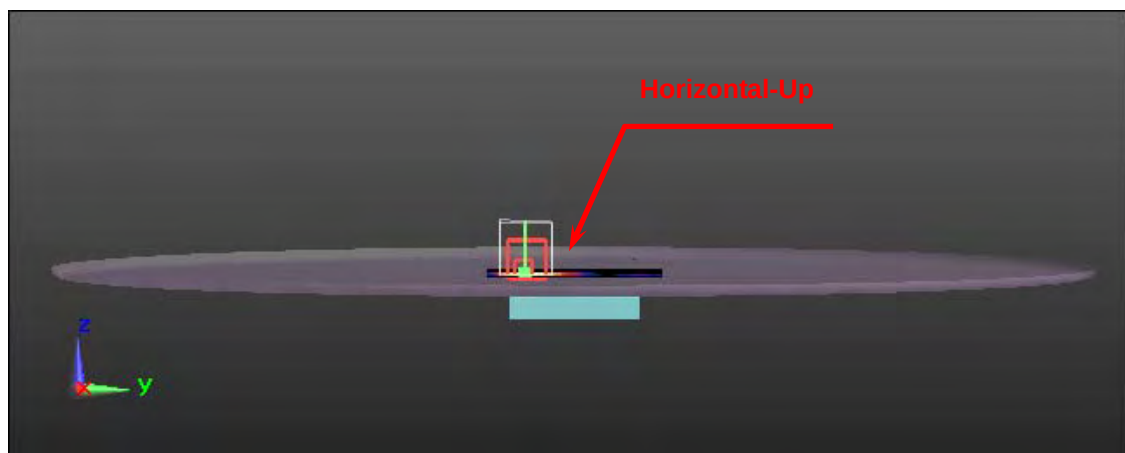


Phantom Position : Flat	EUT side : Horizontal-Up_90Angle
Spacing to phantom : 5 mm	Accessory : N/A

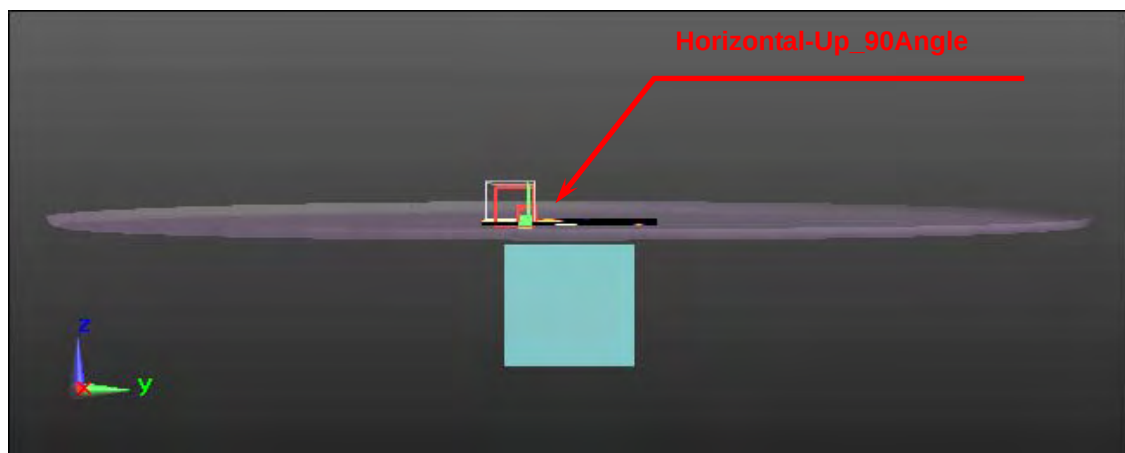



Phantom Position : Flat	EUT side : Horizontal-Up_180Angle
Spacing to phantom : 5 mm	Accessory : N/A

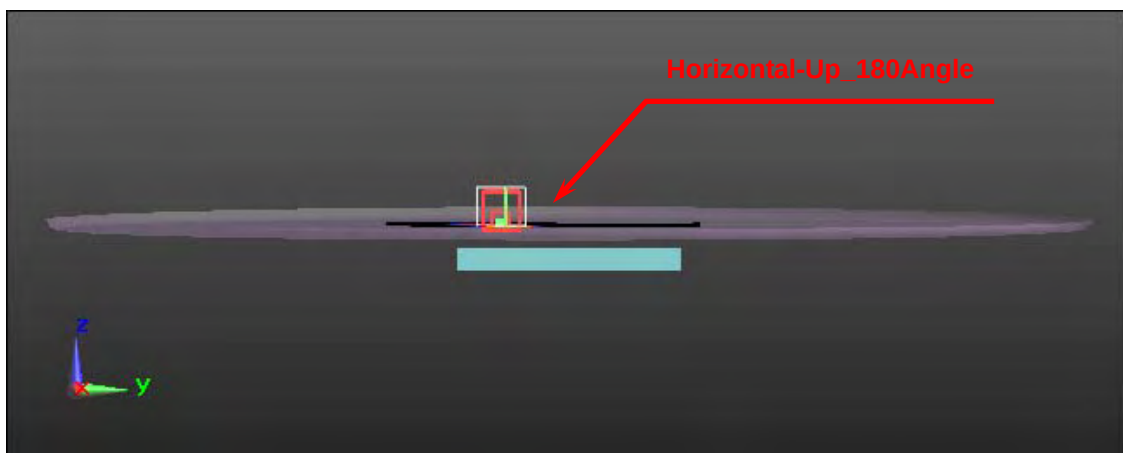


Phantom Position : Flat	EUT side : Horizontal -Down
Spacing to phantom : 5 mm	Accessory : N/A

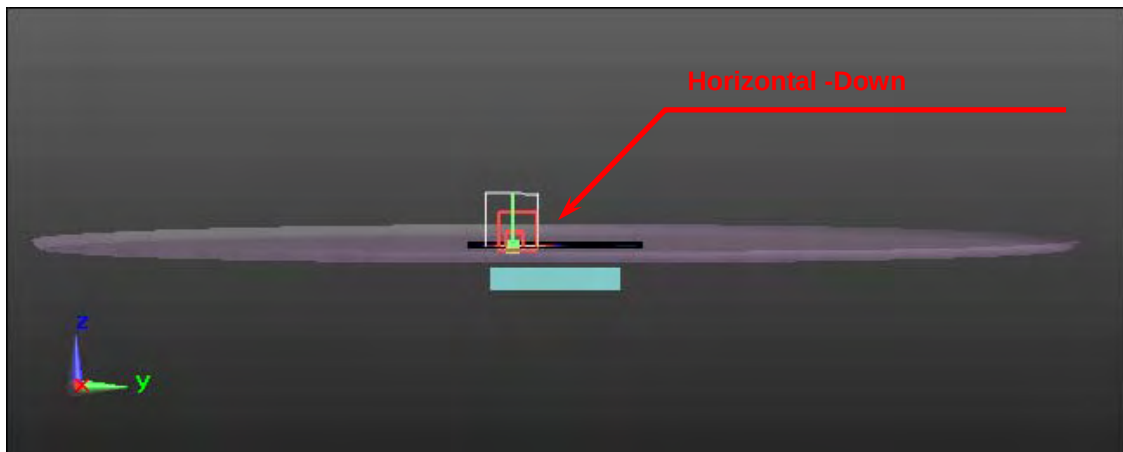


Phantom Position : Flat	EUT side : Horizontal -Down_90_Angle
Spacing to phantom : 5 mm	Accessory : N/A

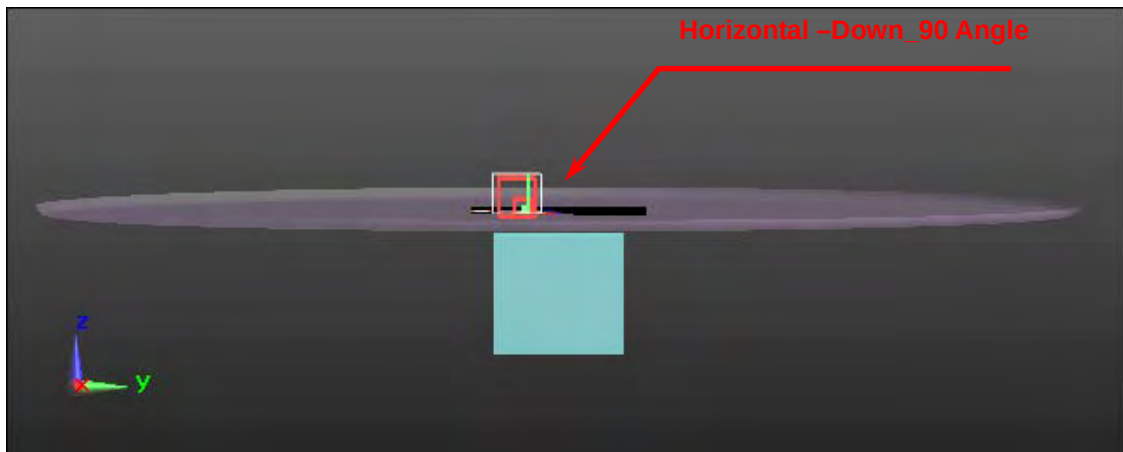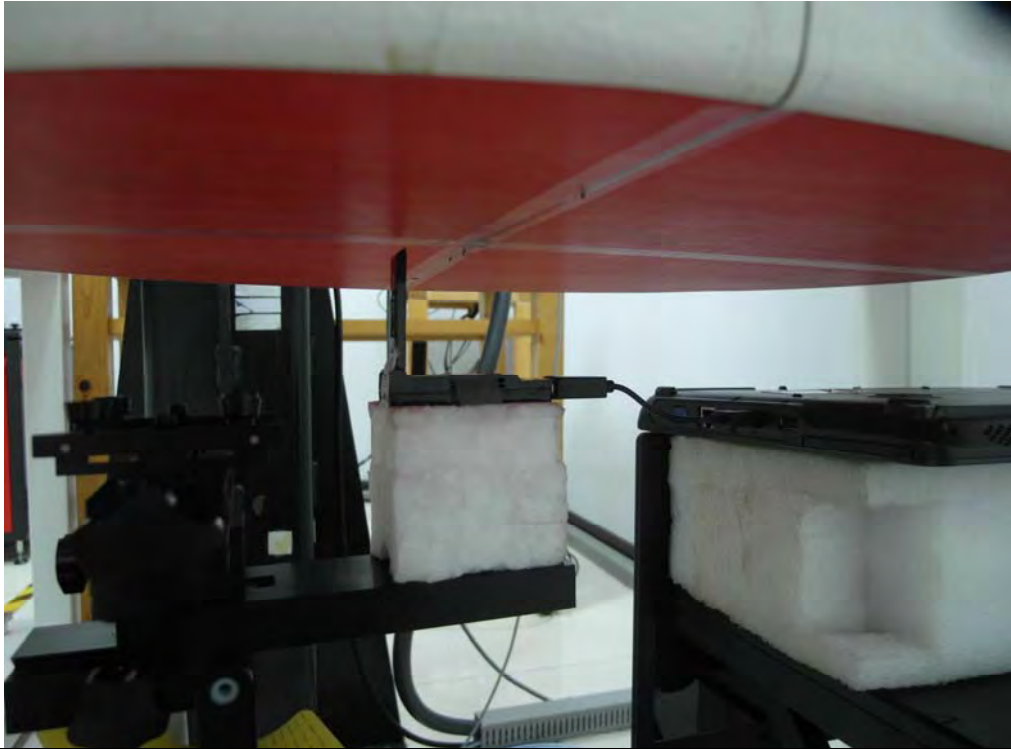



Phantom Position : Flat	EUT side : Horizontal -Down_180 Angle
Spacing to phantom : 5 mm	Accessory : N/A

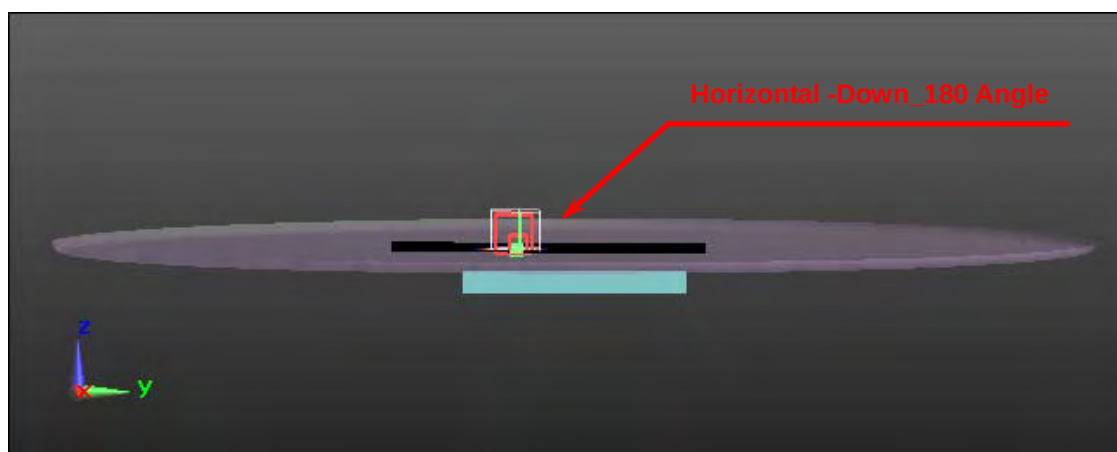


Phantom Position : Flat	EUT side : Vertical Front
Spacing to phantom : 5 mm	Accessory : N/A

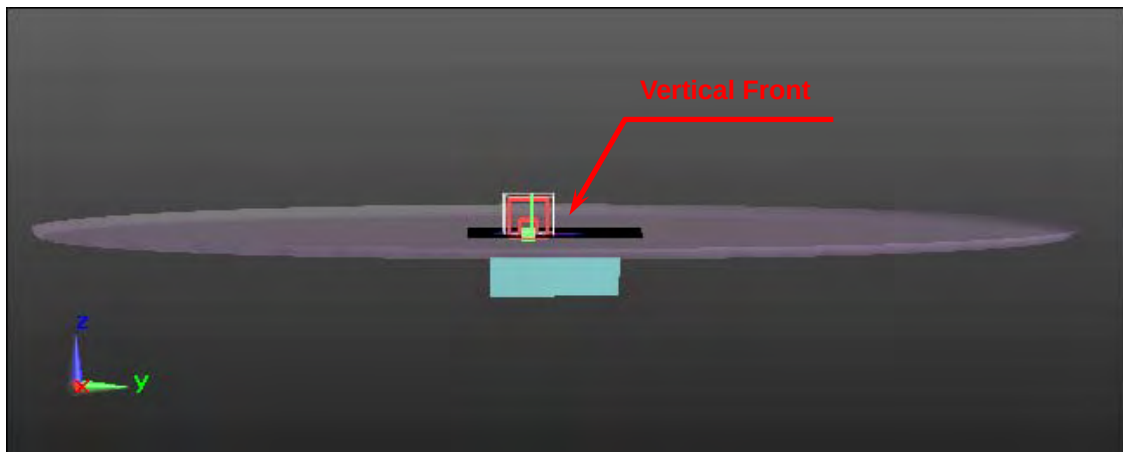


Phantom Position : Flat	EUT side : Vertical Front_90 Angle
Spacing to phantom : 5 mm	Accessory : N/A

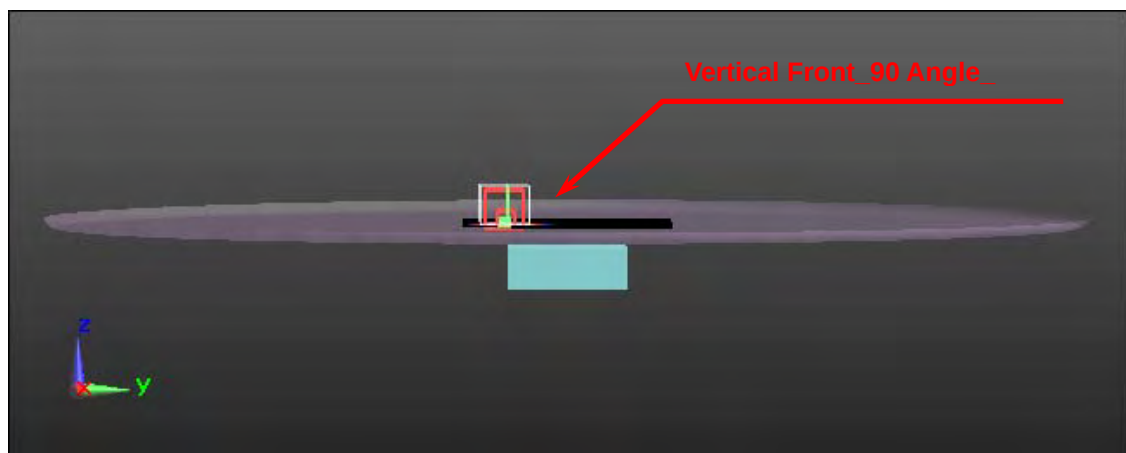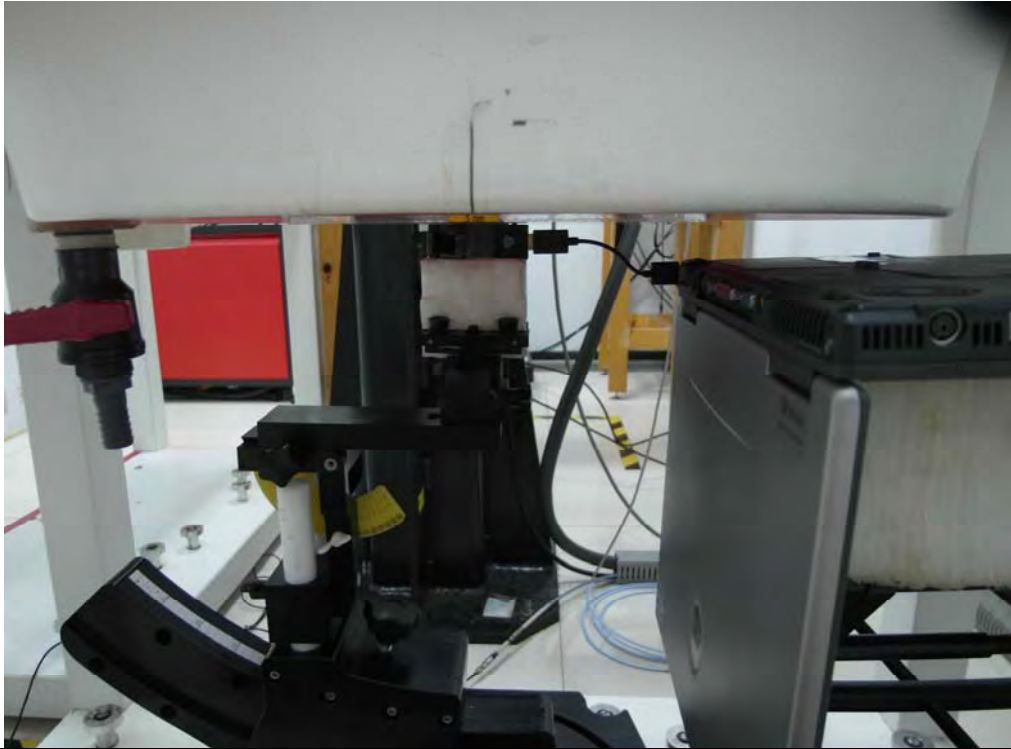


Phantom Position : Flat	EUT side : Vertical Front_180 Angle
Spacing to phantom : 5 mm	Accessory : N/A

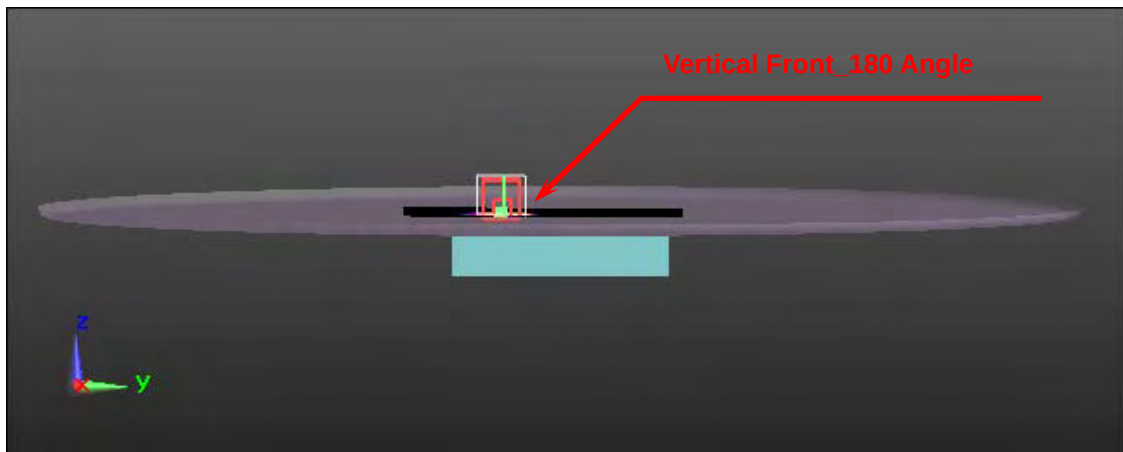

Phantom Position : Flat	EUT side : Vertical Back
Spacing to phantom : 5 mm	Accessory : N/A

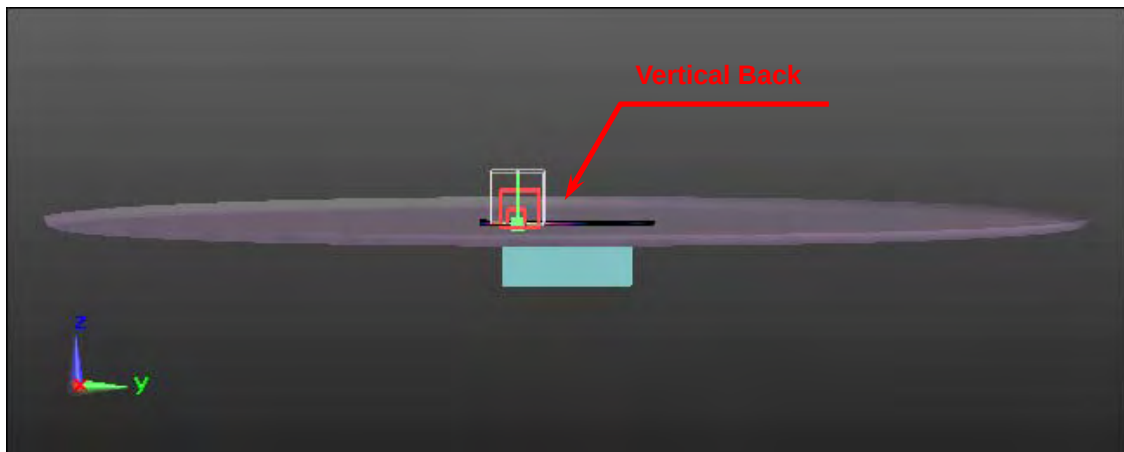

Phantom Position : Flat	EUT side : Vertical Back_90 Angle
Spacing to phantom : 5 mm	Accessory : N/A

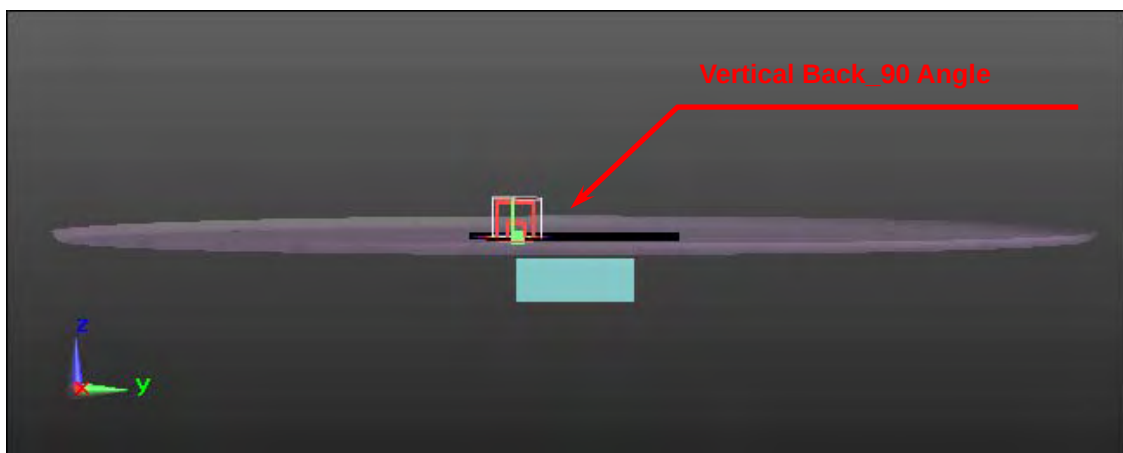

Phantom Position : Flat	EUT side : Vertical Back_180 Angle
Spacing to phantom : 5 mm	Accessory : N/A

