



INSTRUCTIONS TO CHANGE BATTERIES

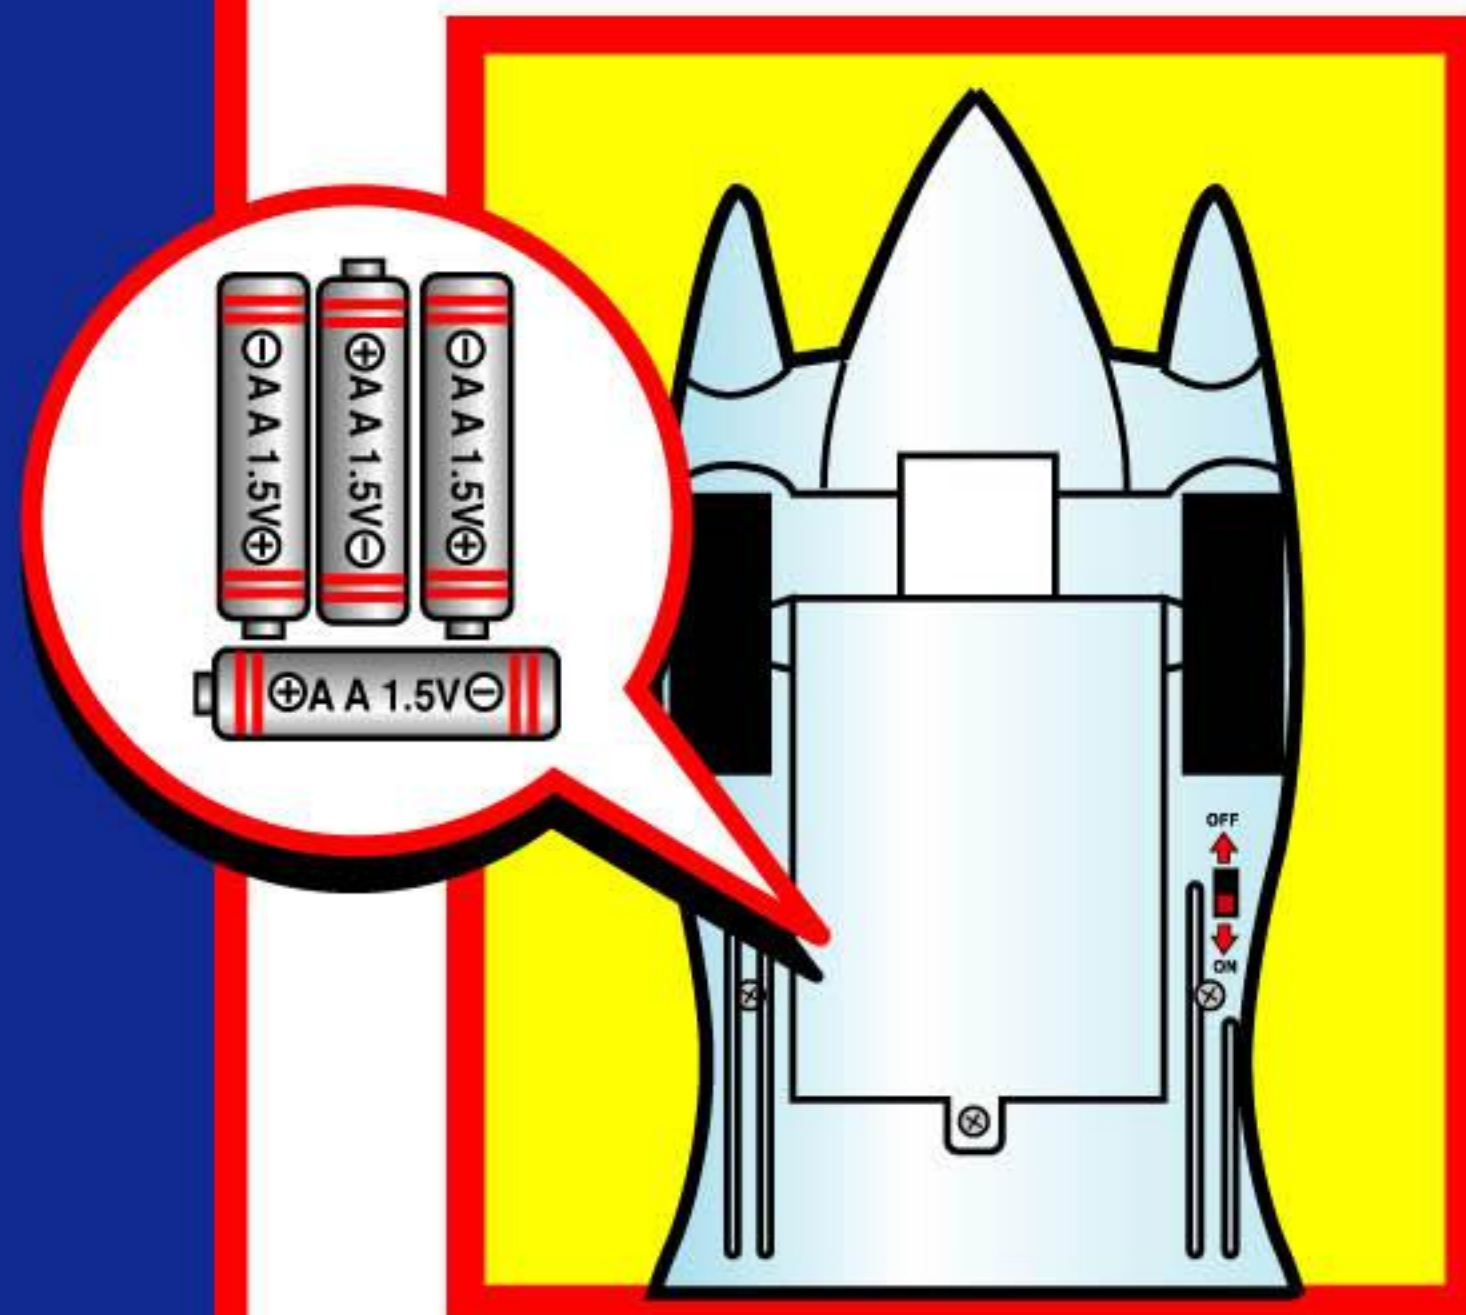

4 X AA BATTERIES REQUIRED

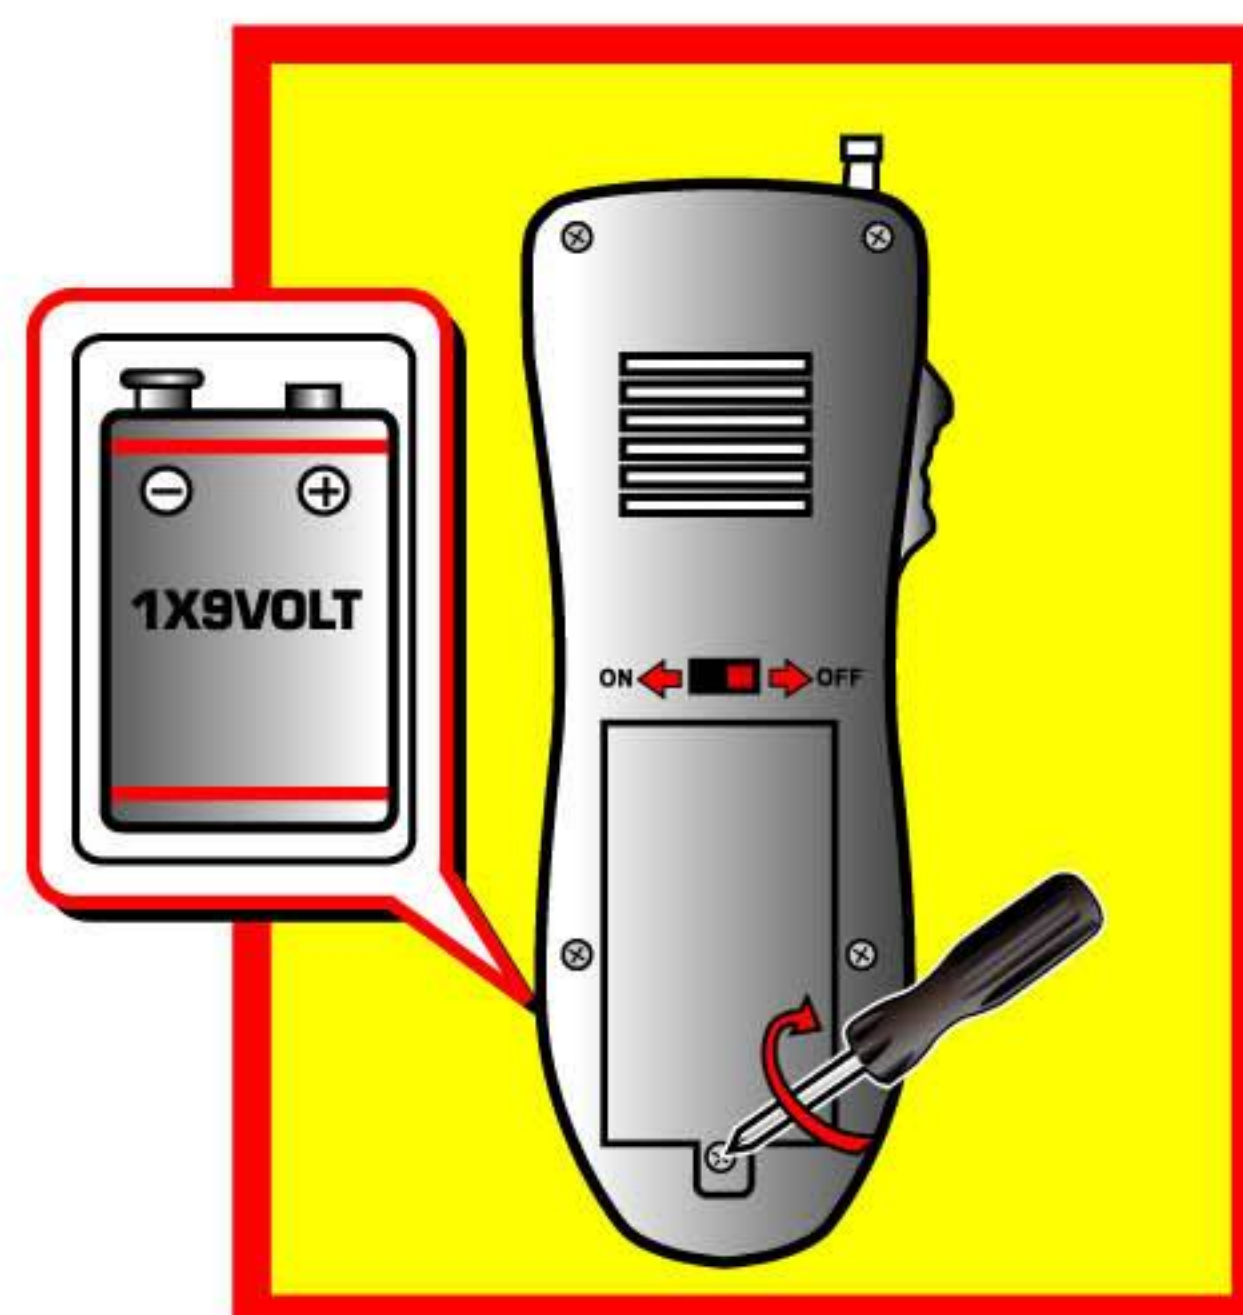

USE 1X9 VOLT SIZE BATTERY

CAUTION WHEN USING BATTERIES

1. REPLACE THE WHOLE SET OF BATTERIES AT ONE TIME, TAKING CARE NOT TO MIX OR USE OLD AND NEW BATTERIES OR BATTERIES OF DIFFERENT TYPES.
2. DO NOT USE NON-CHARGEABLE BATTERIES WITH RECHARGEABLE BATTERIES OR RECHARGEABLE BATTERIES OF DIFFERENT CAPACITIES.
3. TAKE CARE TO FIT YOUR BATTERIES CORRECTLY, OBSERVING THE + AND - MARKS ON THE BATTERY AND MATCHING THE COMPARTMENT MARKINGS.
4. REMOVE ALL BATTERIES FROM THE TRANSMITTER AND THE VEHICLE WHEN NOT IN USE FOR EXTENDED PERIOD OF TIME.
5. PACKAGING SCREWS MUST BE REMOVED BY ADULT.
(SCREWDRIVER NOT INCLUDED)

SPEED RACER and Mach 5 are trademarks of Speed Racer Enterprises, Inc. and are used under license
©2003 Speed Racer Enterprises, Inc. All Right Reserved.
www.speedracer.com

NOTE :THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

MADE IN CHINA

ITEM NO: 3301

