 
 


-

1. Maintain a clear and safe space during motion play.
2. Lightsaber can be used without the app. To shut off phrases, press RED button down and hold for 3 seconds.
3. If the lightsaber is not connecting to the app, press the LSA button.
4. If the app crashes and you are unable to disconnect from the app, press and hold LSA button for 5 seconds to manually disconnect.

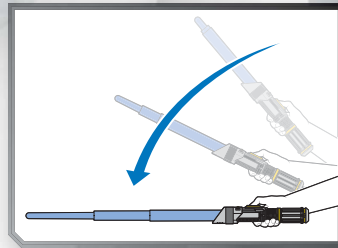

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:



Apple, the Apple logo, iPhone, and iPad are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Android, Google Play, and the Google Play logo are trademarks of Google LLC. Note: Hasbro is only responsible for Hasbro-generated content. Please refer to third party terms and conditions for further

► STARWARS.HASBRO.COM ► STARWARS.COM

US/CANADA TEL. 1-800-255-5516



CAUTION
Do not poke or jab at people or objects. Avoid swinging lightsaber near breakable objects including smart device.



MASTER TRAINING

 
IMPORTANT: BATTERY INFORMATION

CAUTION:
1. As with all small batteries, the batteries used with this product should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.

2. TO AVOID BATTERY LEAKAGE
- a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 - b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - c. Remove exhausted or dead batteries from the product.
 - d. Remove batteries if product is not to be played with for a long time.
 - e. Do not short-circuit the supply terminals.
 - f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.


3. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

TO INSERT BATTERIES

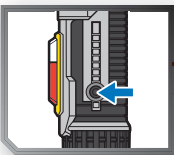


Press button to unlock 1

 Slide chamber open 2

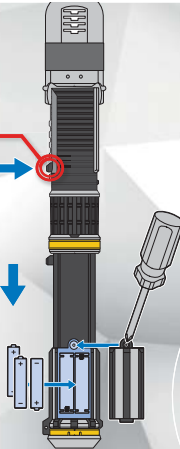


3X 1.5V AAA ALKALINE BATTERIES REQUIRED.
BATTERIES NOT INCLUDED.
Use a Phillips/cross head screwdriver (not included).

 
TO ATTACH

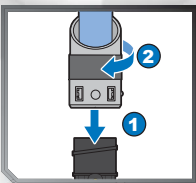

TO RELEASE

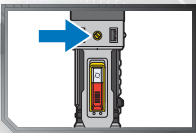 

TO BEGIN

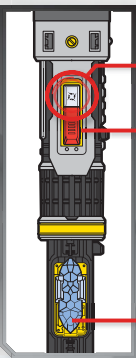 

Connects to Lightsaber Academy app. See app section for details.



Note: Buttons also control navigation and selection in Lightsaber Academy app. See app section for details.



PRESS CRYSTAL TO SELECT YOUR MASTER
Note: Close the crystal chamber before playing with the product