




1. Do not wet doll's hair.
2. Use only the included interactive BABY ALIVE brush to brush this doll's hair.
3. Other types of combs or brushes may damage your doll's hair.
4. Brush doll's hair gently.
5. Do not use styling products or hair styling appliances of any kind.

1. No mojes el cabello de la muñeca.
2. Usa solamente el cepillo interactivo BABY ALIVE incluido para peinar el cabello de la muñeca.
3. Otro tipo de peines o cepillos pueden dañar el cabello de la muñeca.
4. Peina el cabello de la muñeca suavemente.
5. No utilices otros productos o aparatos para el cabello.

AGES • EDAD
3+

1.

DADDY OR MOMMY MODE · MODO PAPI O MAMI

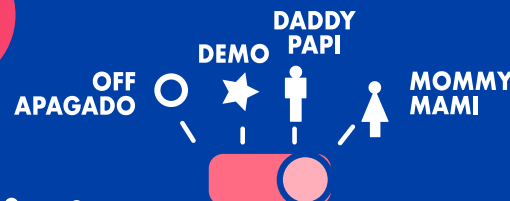

CHOOSE  OR  ON DOLL'S BACK AND PRESS DOLL'S TUMMY TO BEGIN PLAY.

Using the included interactive brush or scissors triggers phrases and hair.
To switch from English to Spanish, press and hold button on doll's tummy for 5 seconds. Repeat to switch back.

ELIGE  O  EN LA ESPALDA DE LA MUÑECA Y PRESIONA SU PANCITA PARA COMENZAR A JUGAR.

Usa el cepillo y las tijeras interactivos incluidos para activar la voz y el cabello de la muñeca.
Para cambiar del inglés al español, mantén presionado el botón en la pancita de la muñeca por 5 segundos. Repite para volver al inglés.

2.



TO MAKE BANGS APPEAR TO GROW

Brush doll's bangs with included interactive brush (up to 6 times) to lengthen them.
For best results, brush within the area highlighted above.

PARA QUE EL FLEQUILLO PAREZCA CRECER

Peina el flequillo de la muñeca con el cepillo interactivo incluido (hasta 6 veces) para alargarlo. Para mejores resultados, peina el área indicada arriba.

3.



TO MAKE BANGS SHORTER

Use the provided interactive scissors to pretend to trim doll's bangs. Keeping the scissors inside the area shown above will provide best results and bangs will begin to get shorter.

PARA ACORTAR EL FLEQUILLO

Usa las tijeras interactivas proporcionadas para jugar a que cortas el flequillo de la muñeca. Mantén las tijeras en el área arriba indicada para que el flequillo se acorte y conseguir mejores resultados.

4.



TO USE ACCESSORIES TO STYLE DOLL'S HAIR

Hair bow: Gather doll's hair and cinch bow around hair.

Hair clips can be used in doll's hair, or use the peg on back to decorate doll's headband.

Flowers: Flowers can be layered behind clips, or can decorate hair. To decorate hair, use the hook at the end of a clip, lay flower on head, and pull hair through with hook.

USA LOS ACCESORIOS PARA ARREGLAR EL CABELLO DE LA MUÑECA

Lazo para el cabello: junta el cabello de la muñeca y sujétalo con el lazo.

Broches para el cabello se pueden usar para decorar el cabello o la banda para el cabello de la muñeca.

Flores: se pueden colocar en capas en la parte posterior de los broches o se pueden usar para decorar el cabello. Para decorar el cabello, usa el gancho de un broche, coloca la flor en la parte superior y tira del cabello con el gancho.



Customer Code: 5008/E5241U080_402216_BA_SNIP_N_STYLE_BABY_BLD_HAIR_INST_P2_FAR.ai
2019-02-0415(2)/Kk/2019-03-29/Gracol 2006

運能設計制作(深圳)有限公司
www.artechgraphics.com.hk | info@artechgraphics.com.hk | Tel 755-3322 8070

191

293

PMS COLOUR FOR REFERENCE ONLY.
PLEASE REFER TO PANTONE GUIDE BOOK.

191 293



IMPORTANT

- **This doll does not eat or drink.**
- Clean doll's body by wiping *gently* with a soft, damp cloth. **Do not rub.**
- **Do not** submerge doll in water; doll is not intended for bath-time play.
- Spot clean doll's clothes with a cool, damp cloth, hang to dry
- Do not place any foreign objects in doll's mouth or any other opening.
- Use included interactive brush and scissors **only**.

TROUBLESHOOTING

- If doll becomes unresponsive or doll's sounds become erratic, the battery power may be low. Replace battery.
- If doll does not respond to interactive scissors or brush, refer to diagrams on front of instructions for correct placement, and try centering the scissors and brush as shown.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) l'appareil ne doit pas produire de brouillage;
- 2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Carrier frequency: 13.56 MHz. Field Strength -12.26 dBuA/m @ 10 meters.

Product and colors may vary. Retain this information for future reference.

© 2018 Hasbro, Pawtucket, RI 02861-1059 USA. All Rights Reserved.

TM & ® denote U.S. Trademarks. Le produit et les couleurs peuvent varier. Conservez cette information pour référence ultérieure. © 2018 Hasbro. Tous droits réservés.

HASBRO CANADA, LONGUEUIL, QC, CANADA J4G 1G2.


US/CANADA TEL. 1-800-255-5516. E5241 PN00041161

IMPORTANTE

- **Esta muñeca no come ni bebe.**
- Usa un paño suave y húmedo para limpiar cuidadosamente el cuerpo de la muñeca. **No la frotes.**
- **No** la sumerjas en agua; la muñeca no está diseñada para jugar en la bañera.
- Limpia las manchas en la ropa con un paño frío y húmedo. Cuelga para secar.
- No introduces objetos en la boca de la muñeca u otros orificios.
- Usa únicamente el peine y las tijeras interactivos incluidos.

CONSEJOS Y SOLUCIÓN DE PROBLEMAS

- Si la muñeca no responde o sus sonidos se vuelven erráticos, las baterías pueden estar gastadas. Cambia las baterías.
- Si la muñeca no responde al cepillo ni a las tijeras interactivos, consulta la información que se encuentra en la primera página del instructivo sobre su correcta colocación e intenta centrarlos tal como se indica.

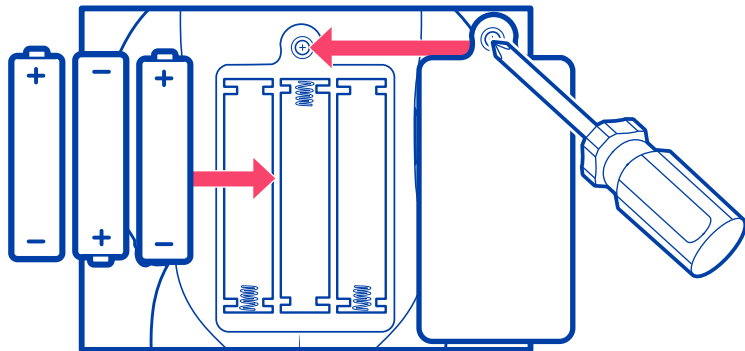

TO REPLACE BATTERIES:

3X 1.5V AA ALKALINE BATTERIES
Replace demo batteries with alkaline batteries.
Use a Phillips /cross head screwdriver
(not included).

CAMBIAR LAS BATERÍAS:

3 BATERÍAS ALCALINAS AA DE 1,5 V
Reemplaza las baterías de
demostración por baterías alcalinas.
Requiere un destornillador en cruz
(no incluido).

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. TO AVOID BATTERY LEAKAGE

- a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- c. Remove exhausted or dead batteries from the product.
- d. Remove batteries if product is not to be played with for a long time.
- e. Do not short-circuit the supply terminals.
- f. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging.
DO NOT RECHARGE OTHER TYPES OF BATTERIES.

2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

INFORMACIÓN IMPORTANTE SOBRE LAS BATERÍAS

⚠ PRECAUCIÓN:

1. PARA EVITAR QUE LAS BATERÍAS SE DERRAMEN

- a. Siga cuidadosamente las instrucciones. Utilice sólo las baterías recomendadas y colóquelas respetando la polaridad + y - inscrita en el producto.
- b. No mezcle baterías gastadas con baterías nuevas, ni baterías alcalinas con baterías estándar (carbón/zinc).
- c. Retire las baterías débiles o gastadas del producto.
- d. Retire las baterías del producto en caso de que éste quede inactivo por un largo período.
- e. No origine cortocircuitos en los bornes del compartimiento de las baterías.
- f. **BATERÍAS RECARGABLES:** No las combine con otros tipos de baterías. Retírelas siempre del producto antes de recargarlas bajo la supervisión de un adulto.
NO RECARGUE OTROS TIPOS DE BATERÍAS.

2. Si el producto provoca interferencias o es afectado por ellas, debe alejarlo de aparatos eléctricos y, si fuera necesario, reinicializarlo encendiéndolo y apagándolo, o bien sacando y reinsertando sus baterías.



Customer Code: 5008/E5241U080_402216_BA_SNIP_N_STYLE_BABY_BLD_HAIR_INST_P2_FAR.ai
2019-02-0415(2)/Kk/2019-03-29/Gracol 2006



