



 
RAZER RZ06-0554 GAMING CONTROLLER

RAZER RC30-0554 WIRELESS DONGLE

IMPORTANT PRODUCT INFORMATION GUIDE

WHAT'S INSIDE

- Razer RZ06-0554

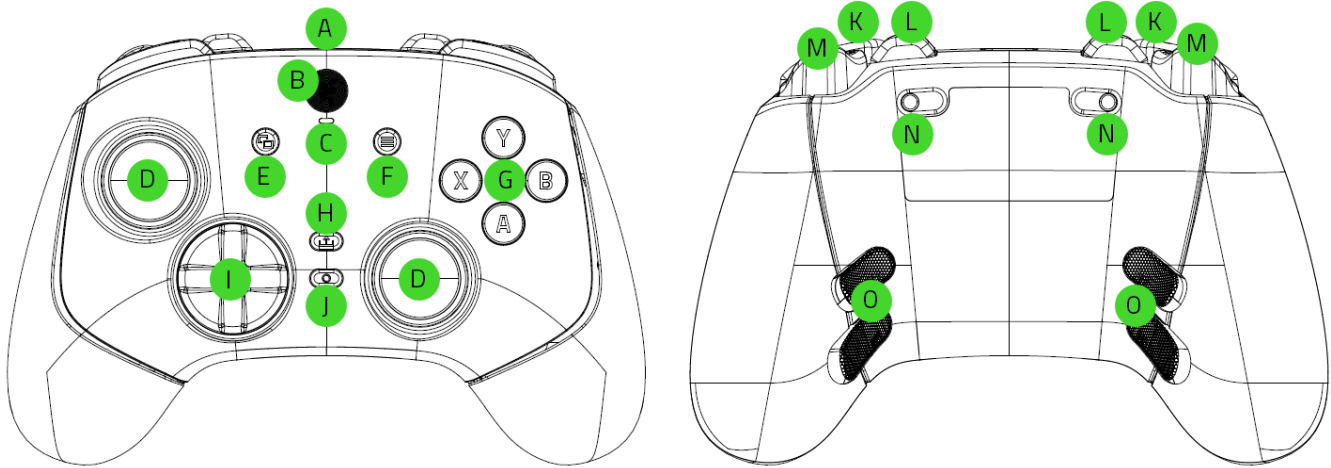


- A. Type C port
- B. Home button
- C. Status indicator
- D. Hall effect analog thumbsticks
- E. View button
- F. Menu button
- G. Razer Mecha-Tactile action buttons
- H. Share button
- I. Razer Mecha-Tactile 8-way floating D-pad

- J. Function button
- K. Bumpers (LB / RB)
- L. Multi-function claw grip bumpers (M1 / M2)
- M. Razer Pro HyperTriggers (LT / RT)
- N. Trigger stop switches
- O. Multi-function mouse click back paddles (M3 / M4 / M5 / M6)


- Razer HyperSpeed Wireless 2.4GHz USB Type A dongle



 
- USB Type A to USB Type C cable



 - 2 Replaceable thumbstick caps (tall concave/short convex)

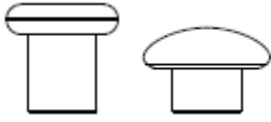

- Carrying Case

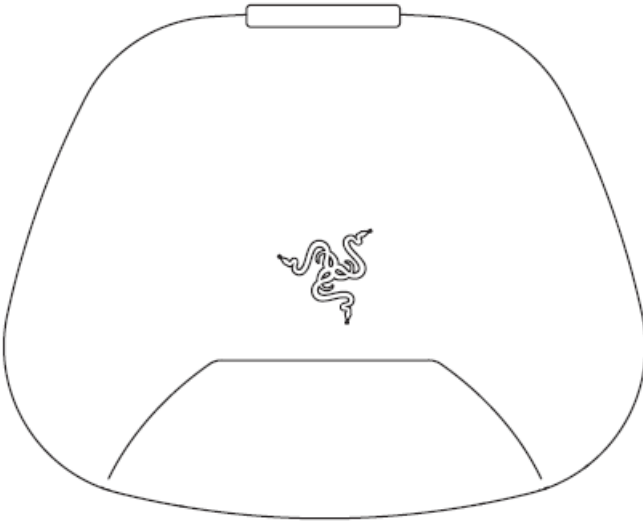 

- Important Product Information Guide

WHAT'S NEEDED

PRODUCT REQUIREMENTS

- PC system with a USB Type A port

RAZER SYNAPSE REQUIREMENTS

- (Windows® 11 64-bit or higher)
- Internet connection for app installation

LET'S GET YOU COVERED

 


Register your product and score exclusive
[razerid.razer.com/warranty](https://www.razerid.razer.com/warranty)

Got a question? Ask the Razer Support Team at support.razer.com


GETTING STARTED

CHARGING THE CONTROLLER

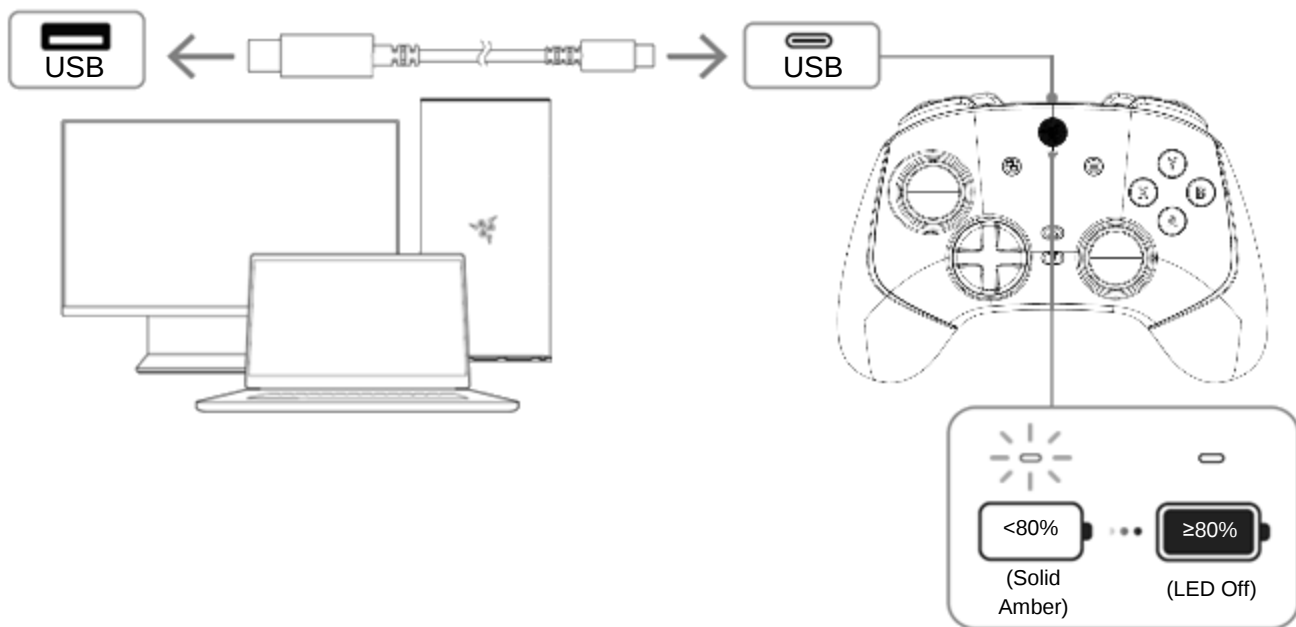

- i** The battery status indicator will appear only when the controller is off, and just once when the applicable power level is reached. Only use the included USB Type A to USB Type C cable to charge the Razer RZ06-0554. For best results, please fully charge the controller before using it for the first time. A depleted battery will be fully charged in approximately 3 hours.

 
CONNECTING THE CONTROLLER

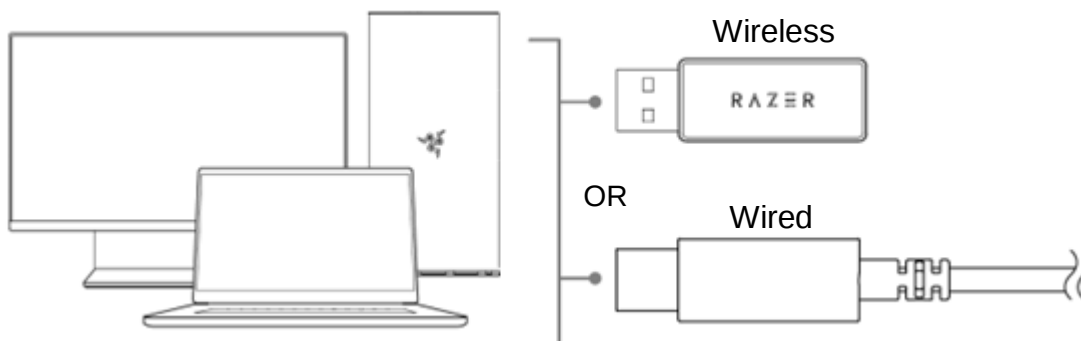


- i** The Razer RZ06-0554 prioritizes wired connection via cable but will automatically switch to the dongle if a wired connection is not detected. Install Razer Synapse when prompted or download the installer from [razer.com/synapse](https://www.razer.com/synapse).

USING THE CONTROLLER

 
POWER ON/OFF

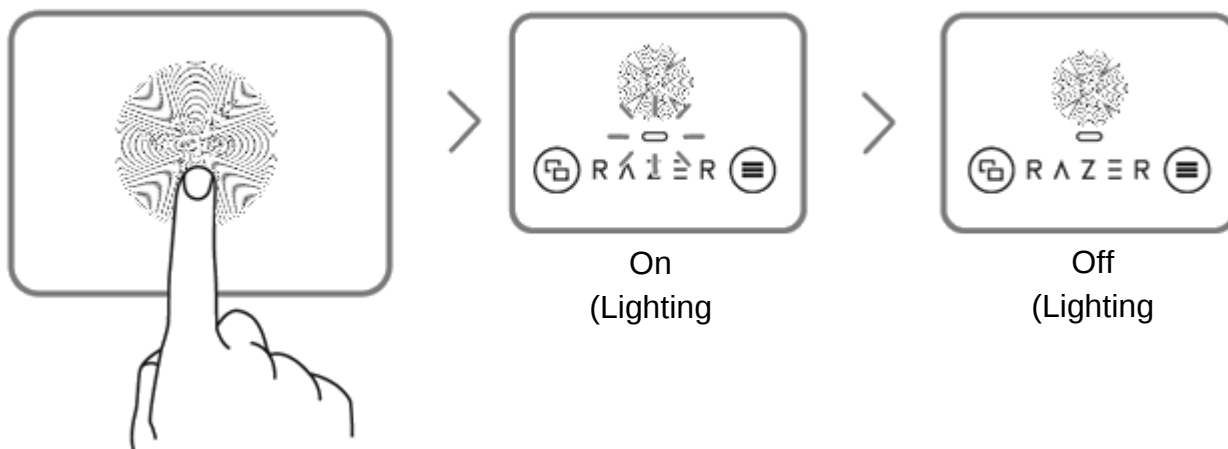


WIRELESS PAIRING NOTIFICATIONS

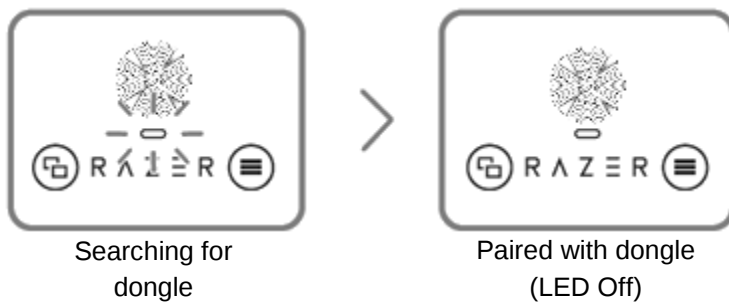 

UTILIZING THE TRIGGER STOP SWITCHES

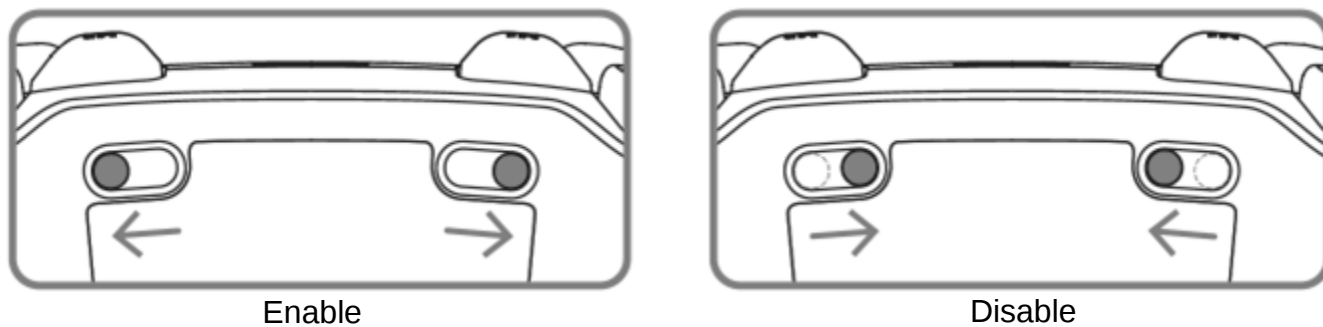 

 CHANGING THE REPLACEABLE THUMBSTICK CAPS

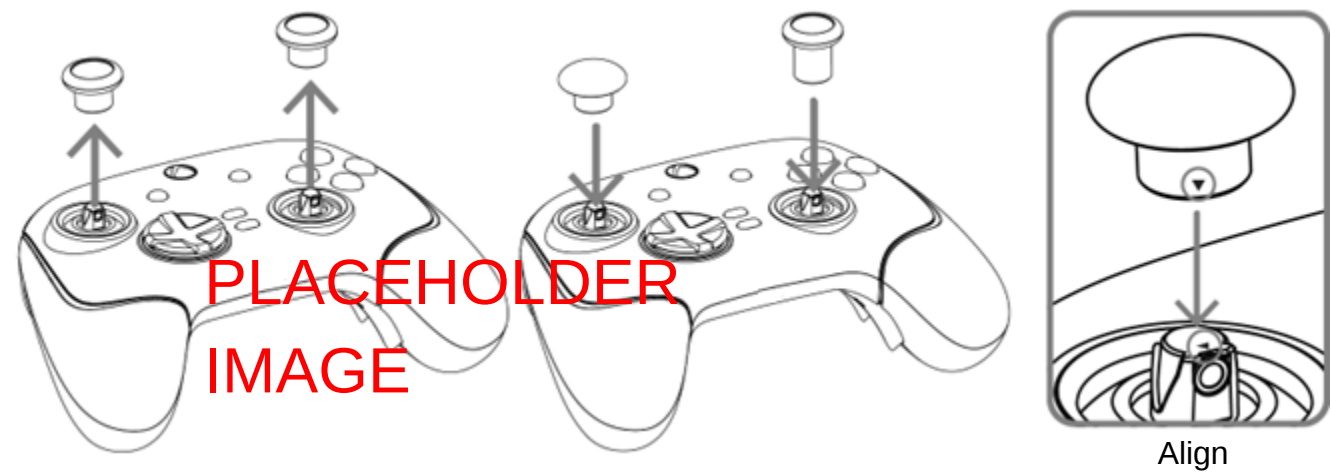

FUNCTION BUTTON COMMANDS


Input	Function
 +  Hold Press	Volume Up
 +  Hold Press	Volume Down
 +  Hold Press	Switch to Profile A
 +  Hold Press	Switch to Profile B
 +  Hold Press	Switch to Profile X
 +  Hold Press	Switch to Profile Y
 +  +  Hold Hold Press	Switch to Xinput Mode
 +  +  Hold Hold Pres	Switch to HID Mode
 Pres	Screenshot the active window
 Hold	Start/Stop screen recording

Download Razer Synapse to
unlock the full feature set of


REASSIGNING THE MULTI-FUNCTION (M1-M6) MAPPING

By default, the M1-M6 bumpers and paddles are unmapped. Use the steps below or Razer Synapse to remap them.

 1. Hold down the Function button and the Multi-Function bumper/paddle you want to remap.

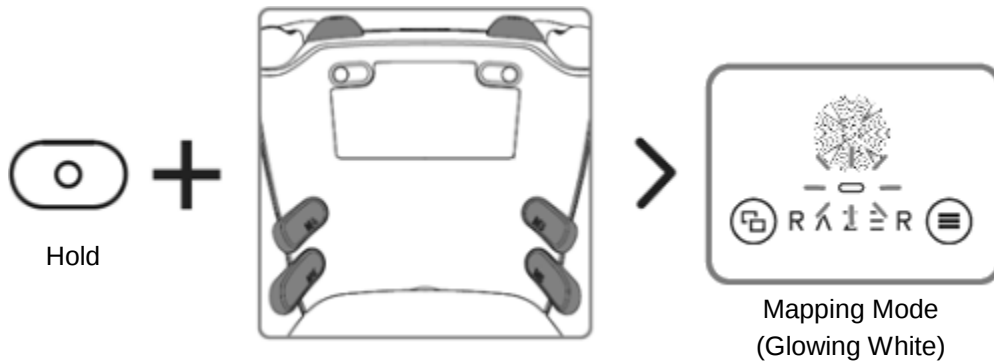

 2. Press the button you want to assign to it.

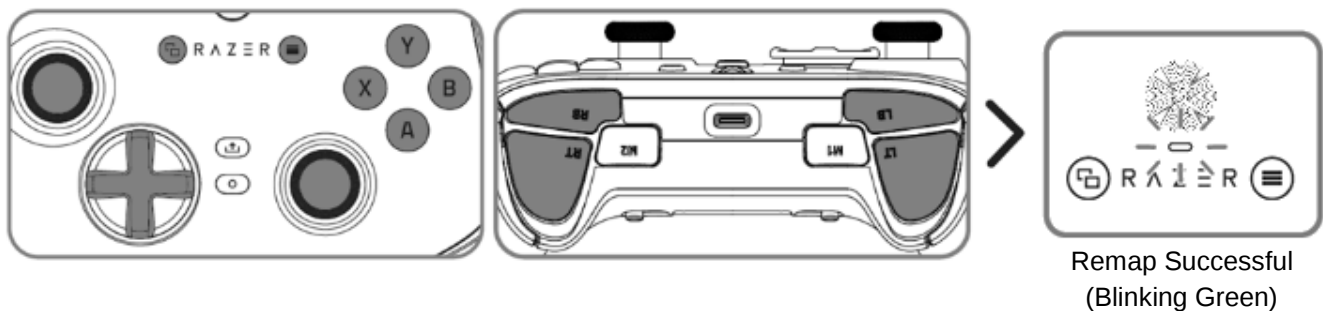

USING THE SENSITIVITY CLUTCH FUNCTION

Holding down the assigned button will lower the chosen analog stick's sensitivity by up to 50%.



i The sensitivity clutch function can be assigned and customized through Razer Synapse.

SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using the Razer RZ06-0554, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for support. Do not attempt to service or fix the device yourself at any time.

Do not take apart the device, and do not attempt to operate it under abnormal current loads. Doing so will void your warranty.

Keep the controller and all its parts and accessories out of the reach of small children to avoid accidents and/or injuries.

Keep the device and its components away from liquid, humidity or moisture. Operate the device and its components only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and switch off the device in order to let the temperature stabilize to an optimal level.

MAINTENANCE AND USE

The Razer RZ06-0554 requires minimum maintenance to keep it in optimum condition. Once a month, we recommend that you unplug the device and clean it using a soft cloth or cotton to prevent dirt buildup. Do not use soap or harsh cleaning agents.

LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2025 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, “For Gamers. By Gamers.” and “Razer Chroma” logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer RZ06-0554 (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This device has also been tested against this SAR limit.

This equipment must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and consider removing the no-collocation statement.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a distance less than 5 mm between the radiator and your body.

Cet émetteur ne doit pas être colocalisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur. Cet équipement doit être installé et utilisé avec une distance inférieure à 5 mm entre le radiateur et votre corps.

RF exposure (SAR): The SAR limit of Europe is 2.0 W/kg. The device can safely be used with a distance of 5 mm to the human body. The maximum SAR test value for this device is 0.143 W/kg.

Hereby, Razer Inc. declares that the radio equipment type gaming mouse RZ06-0554&RC30-0554 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: razer.com/legal/compliance
Battery replacement warning

Risk of explosion if the battery is replaced by an incorrect type.

This product contain build in battery that need to be removed by a specialist before the product disposal mandatory

Keep the battery away from excessive heat and direct sunlight. Do not place it on heating device such as microwave Owen stoves or radiators

Battery may explode if overheated. Recommended if possible

- 1) Risk of explosion if battery is replaced by an incorrect type.
- 2) Dispose of used batteries according to the instructions.



ENGLISH

The power delivered by the charger must be between min 4.5 Watts required by the radio equipment, and max 15 Watts in order to achieve the maximum charging speed.

ESPAÑOL

La potencia suministrada por el cargador debe ser de entre un mínimo de 4.5 vatios requeridos por el equipo radioeléctrico y un máximo de 15 vatios a fin de alcanzar la máxima velocidad de carga

DEUTSCH

Die Leistung des Ladegeräts muss von einer von der Funkanlage benötigten Mindestleistung von 4.5 Watt bis zu einer zum Erreichen der maximalen Ladegeschwindigkeit benötigten Höchstleistung von 15 Watt reichen.

FRENCH

La puissance fournie par le chargeur doit être entre, au minimum, 4.5 Watts requis par l'équipement radioélectrique et, au maximum, 15 Watts pour atteindre la vitesse de chargement maximale

POLSKI

Moc dostarczana przez ładowarkę musi wynosić między minimalnie 4.5 W wymaganych przez urządzenie radiowe a maksymalnie 15 W, aby osiągnąć maksymalną prędkość ładowania

PORTUGUÊS

A potência fornecida pelo carregador tem de se situar entre um mínimo de 4.5 Watts exigidos pelo equipamento de rádio e um máximo de 15 Watts para que a velocidade de carregamento máxima seja atingida

2.4G equipment

Gaming Controller

- Operating frequency range: 2406-2476MHz
- Maximum out power(E.I.R.P): 14. 71dBm (29. 58 mW)

Wireless Dongle

- Operating frequency range: 2406-2476MHz
- Maximum out power(E.I.R.P): 14.16 dBm (26.06 mW)