 


AMAZING
ROBOT

AMAZING ROBOT







GET THE AMAZING ROBOT YOU CAN OWN THE POWER AND THE FUTURE!

MANUAL



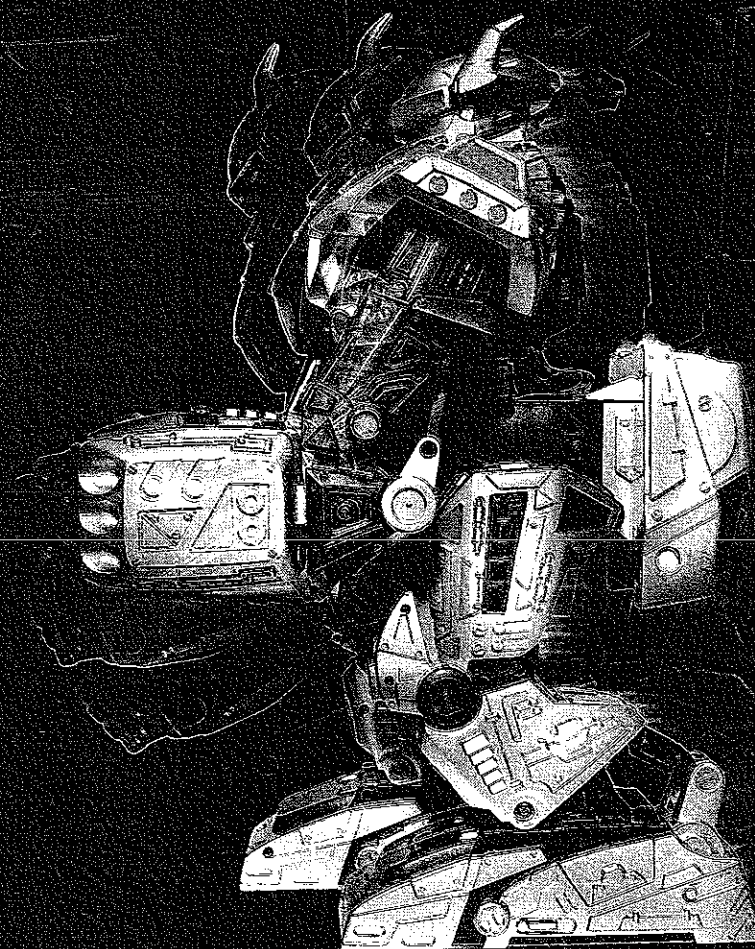


HK-528

PROBLEM	CAUSE	SOLUTION
A.NO CONTROL	1.Robot's power switch is set to OFF. 2.Controller is not ON 3.Robot's batteries are drained. 4.Check Battery compartment be located Corrtectly. 5.Controller's batteries are drained. 6.The robots with same frequency can not be used at same time. 7.Out of effective distance 8.Too many interference around the place. 9.The antennas on robot are connected.	1.Set switch to ON. 2.Set controller swith to ON. 3.Fully charge the battery. 4.Check Battery compartment be located Corrtectly. 5.Install NEW batteries. 6.Pls use different frequency. 7.Radio control distance about 3 M. (But you can get more closer if necessary.) 8.Pls change to other place. 9.Pls separate these two antennas.
B.Can not move.	1. Something attached below Robot's roller? 2.Have press the Right / Left buttons? 3.Is it moving on Carpet? 4.Robot load overweight or wrong operation will make Robot lie down. 5.Controller and Robot get too close.	1.Remove stumbling block. 2.Adjust "amend button" to go straight. 3.Change to smoothly place. 4.Reduce weight and operate correctly. 5.Keep a proper distance with controller.
C.Arm can not stop.	1.Check arm switch is On? 2.Make sure each arm is setting well.	1.Press button to Free function. 2.Pls setting arms correctly.
D.The light on robot is not on.	1.Controller is not ON 2.Too many interference around the place.	1.Set controller swith to ON. 2.Pls change other place.
E.Controller's light is not on.	1.Controller's batteries are drained.	1.Install NEW batteries.

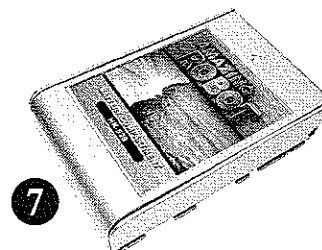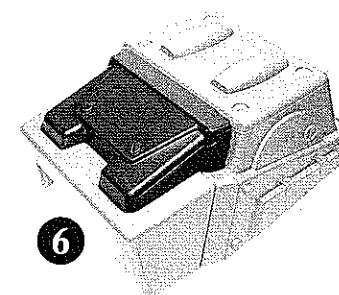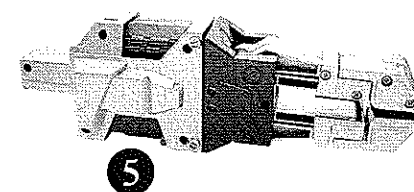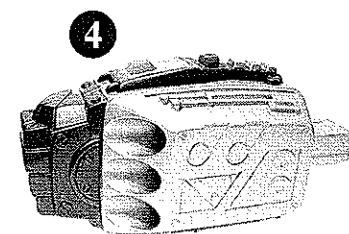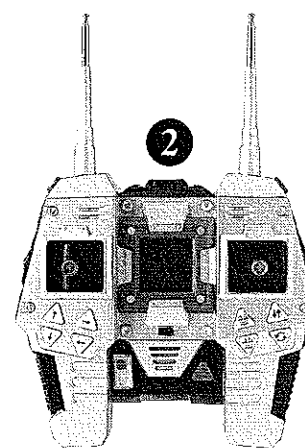     
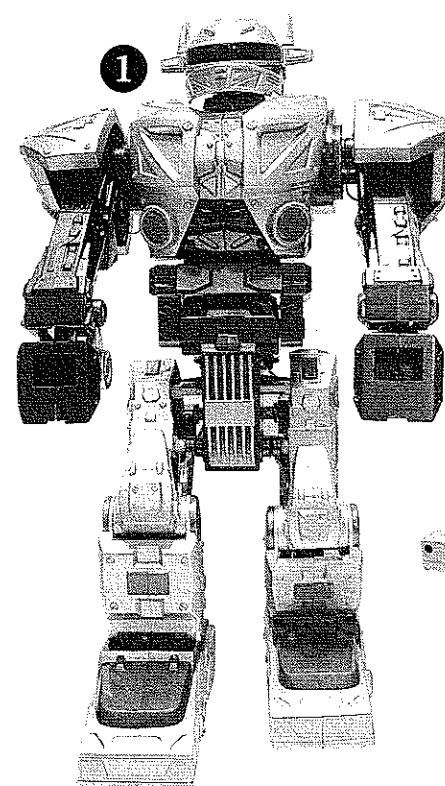 


   - 1 ROBOT
- 2 CONTROLLER
- 3 ONE 9V BATTERY
- 4 HAND WITH MISSILES
- 5 CLIPPER
- 6 ENERGY PACK
- 7 BATTERY COMPARTMENT
- 8 AA RECHARGEABLE BATTERY
- 9 MISSILES
- 10 RECHARGER
- 11 ADAPTOR

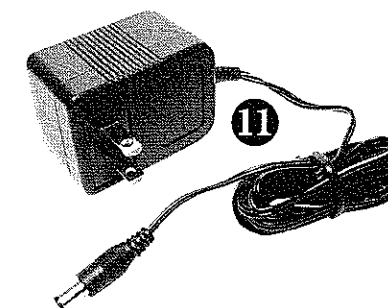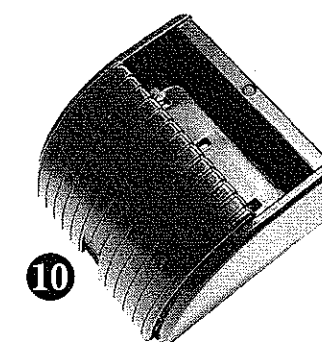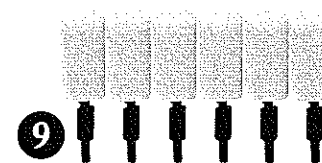


CHARGE THE BATTERY

  INSERT THE BATTERY
COMPARTMENT INTO
THE ENERGY PACK.

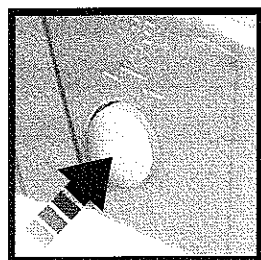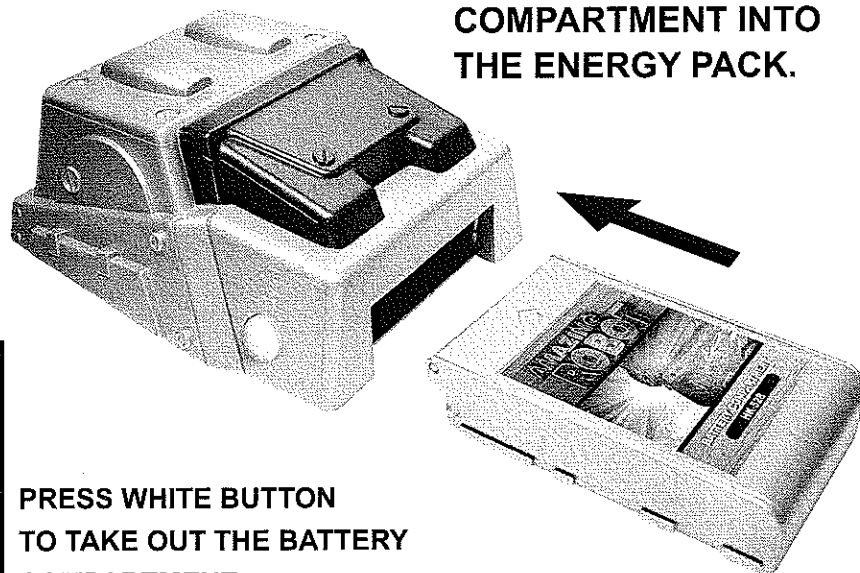


PRESS WHITE BUTTON
TO TAKE OUT THE BATTERY
COMPARTMENT.

 PUT BACK THE ENERGY PACK ON THE ROBOT
AS THE WAY SHOWN ON THE PICTURE.


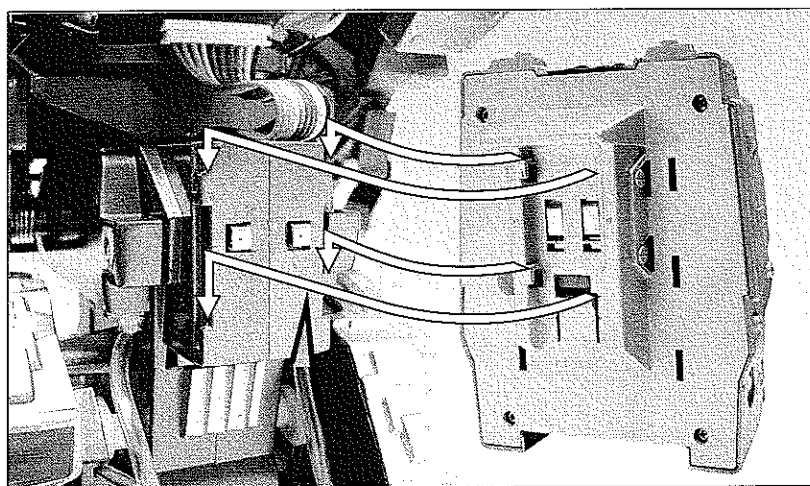


 PRESS RED BUTTON TO TAKE DOWN THE
ENERGY PACK FROM BACK OF THE ROBOT.

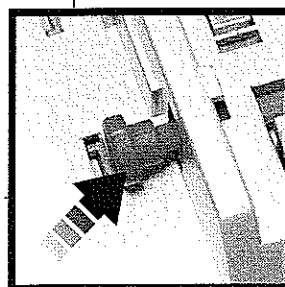


FUNCTION

  YOUR ROBOT CAN GO
FORWARD/BACKWARD AND
MAKE LEFT/RIGHT
TURN IN ALL

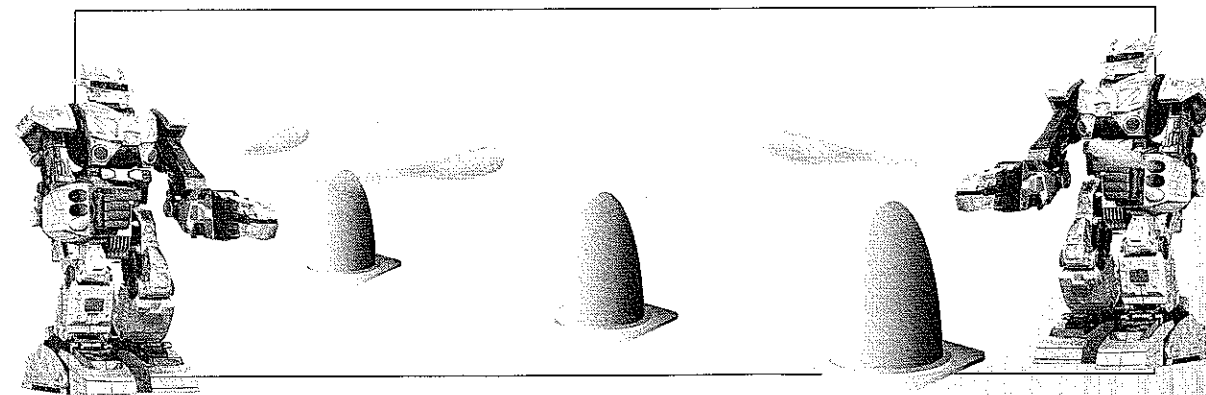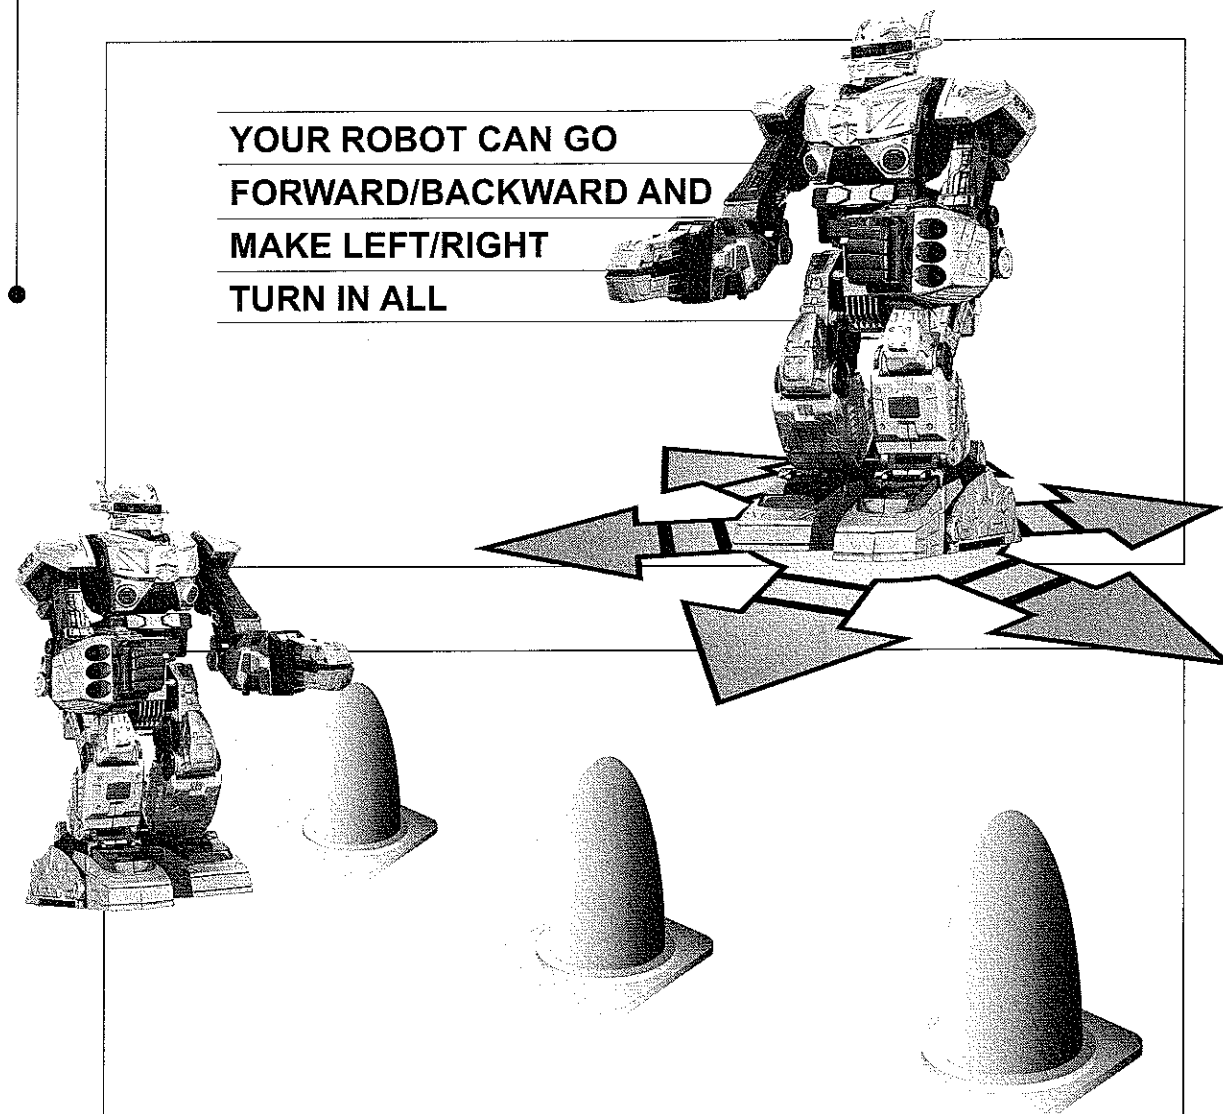


DIRECTIONS

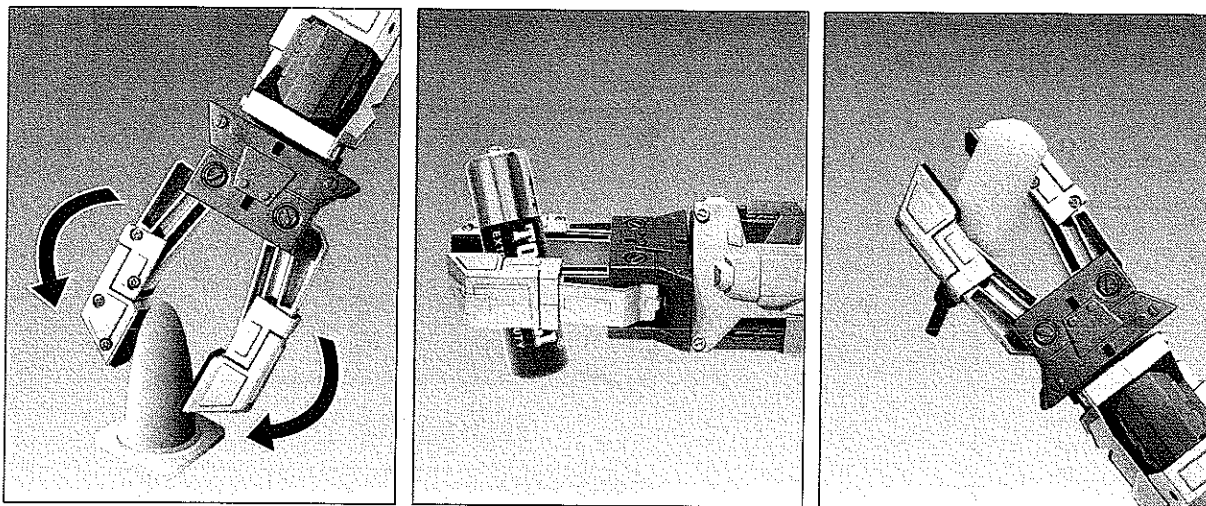 


THE HAND CLIPPER CAN PICK UP OBJECT.

 HEIGHT OF ARM COULD
BE ADJUSTABLE.

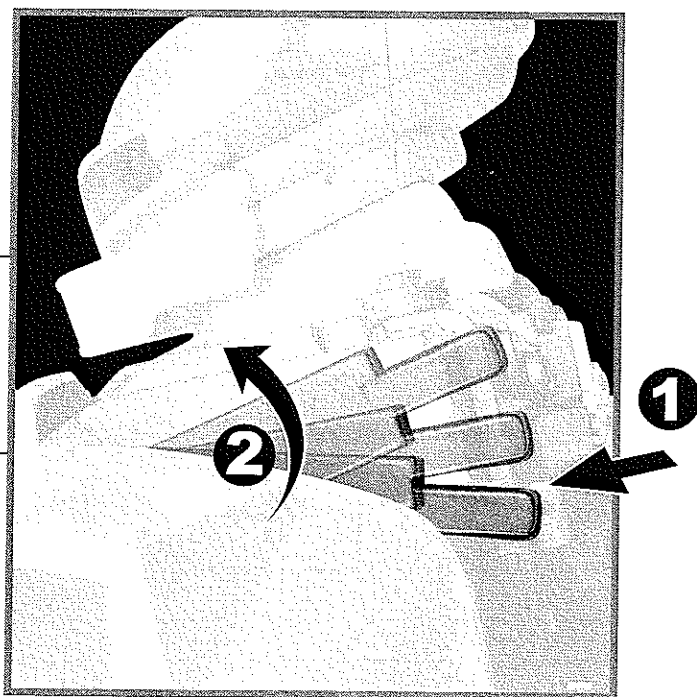


CHANGE YOUR ROBOT'S ARM

 **LEFT
HAND**

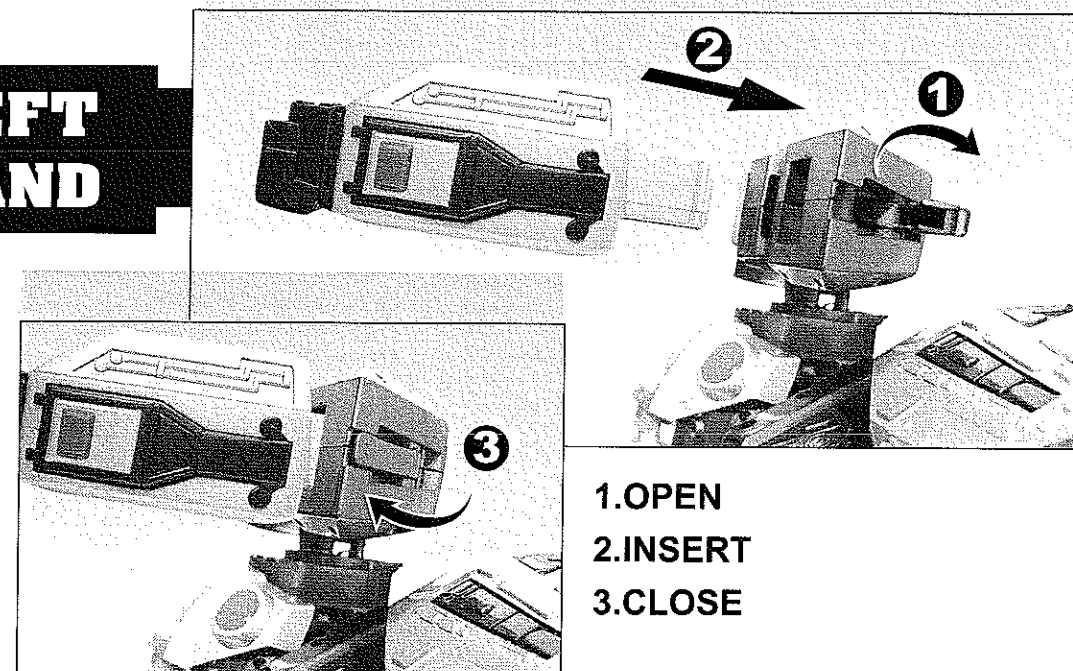

**RIGHT
HAND**

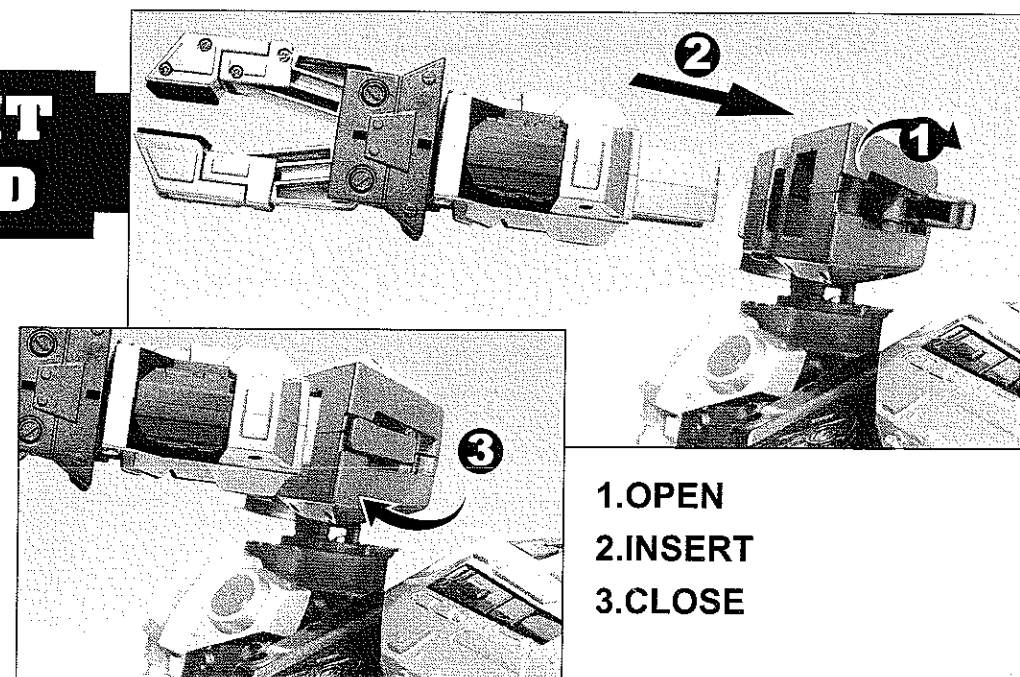 


IMPORTANT

※RIGHT & LEFT HAND ARE UNCHANGEABLE.


CONTROL BODY

 FIRE


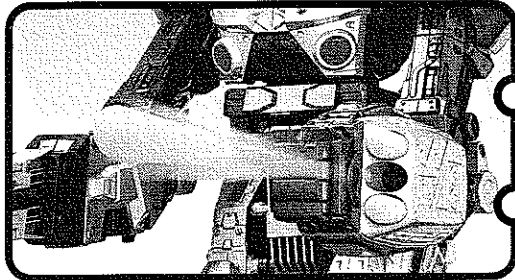


PUSH ONE BUTTON FIRST
THEN PUSH THE OTHER BUTTON
TO FIRE THE MISSILE

 UP/DOWN

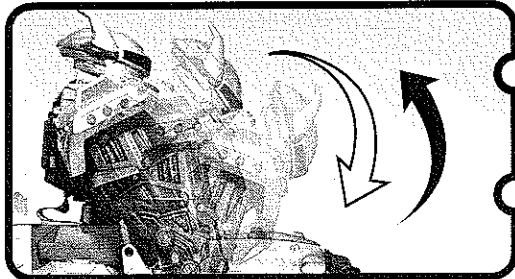

RIGHT TURN

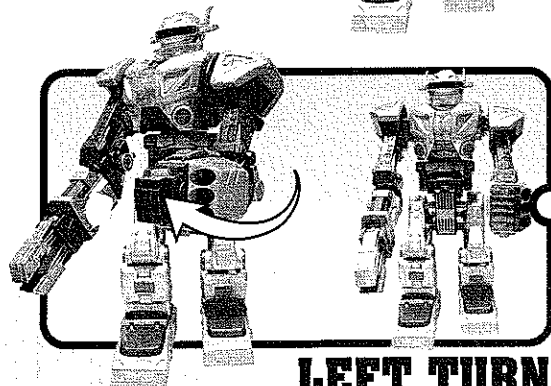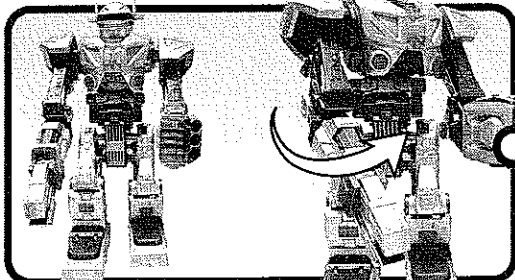  

LEFT TURN

 
CONTROL STICK
TO MAKE ROBOT
LEFT/RIGHT TURN

POWER LIGHT


ON/OFF SWITCH

CONTROL HAND


UP/DOWN

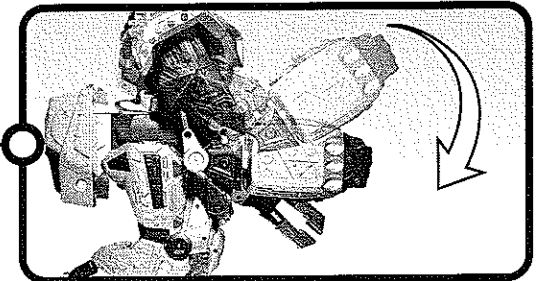

ROTATE CLIPPER

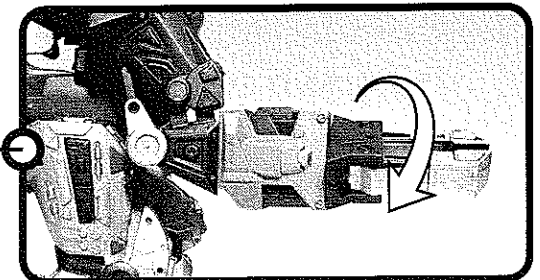 

LOOSEN CLIPPER

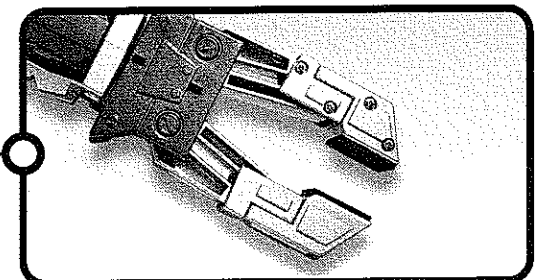 

TIGHTEN CLIPPER

