 




 
⚠ WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

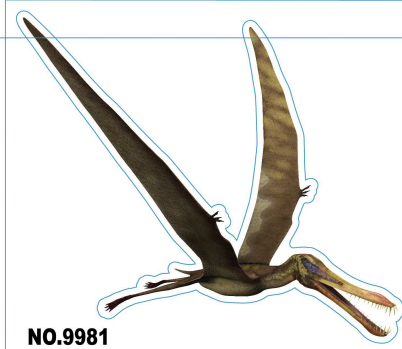

NO.9981



**FRIEND, LET'S EXPLORE
THE DINOSAUR WORLD
TOGETHER.**

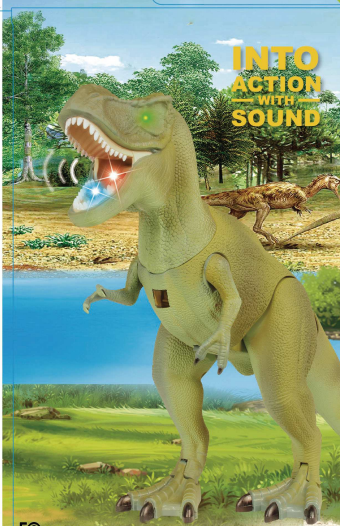[illegible]

1. When the **Start** button controls the movement, press the **Start** button any time, then the dinosaur will move forward, shake head and say hello (if footstep is on) and stop. Press the **Start** button again, the dinosaur will move forward, shake head and say hello (if footstep is on) and stop. Press the **Start** button again, the dinosaur will keep moving forward with shaking head about 30 minutes then automatically stop. After the stop, if you do nothing, it will make a cry every 10 seconds with shaking head. Then stop, mainly the entering power save mode. Press the demonstration button to activate it.
2. Press the **Right** button, the dinosaur will shake head and produce sound. After the sound stop, press the button once again, it will make different dinosaur sounds.
3. Press the **Left** button or **Bottom** Press this button, then the dinosaur will shake head and make sounds.
4. After turning on the electric dinosaur each time, you should press the demonstration button to activate the remote control function.



RADIO CONTROL



WALKING

 
 


1.5V AA

 


FRIENDS TO EXPERIENCE THE FUN OF DINOSAURS

 
The New World of Dinosaurs

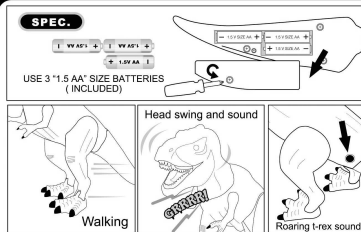

18



Tail Assembly:
Attach the tail until it "clicks."



SPECIFICATIONS COLOURS AND CONTENTS MAY VARY FROM ILLUSTRATIONS.

- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
- ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
- BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY TO SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
- DO NOT USE RECHARGEABLE BATTERIES.
- DO NOT MIX OLD AND NEW BATTERIES.
- DO NOT MIX ALKALINE STANDARD (CARBON ZINC), OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES.

On/Off Switch:
Toggle Switch on belly c



CONTENTS MAY VARY FROM

DO NOT TO BE RECHARGED.
EQUIVALENT TYPE AS
WITH THE CORRECT POLARITY.
REMOVED FROM THE TOY
BE SHORT-CIRCUITED.
RIES.
S.
CARBON ZINC), OR
BATTERIES.

 NOT SUITABLE FOR CHILDREN UNDER 3 YEARS DUE TO SMALL PARTS

مناسب للأطفال فوق سن الـ ٣ سنوات
غير مناسب للأطفال دون سن الـ ٣ سنوات
COUNTRY OF ORIGIN: CHINA
مستعمل وفقاً للمواصفات والمعايير العالمية
Tested according to international standards

PRECAUCIONES
PELIGRO DE AHOGARSE. Contiene partes pequeñas. No recomendable para niños menores de 3 años.

ATENÇÃO:
Não recomendável para menores de 60 anos, por conter partes pequenas que podem ser engolidas.

ВНИМАНИЕ!
Товар содержит мелкие детали.
Для детей старше 3-х лет.



MADE IN CHINA

L