 
 



Tap the in the Apps menu to listen to your favorite music with the music player.



Tap the on the main screen or in the Apps menu to view photos and videos stored in your unit or TF flash card.



 
Tap the on the main screen or in the Apps menu to take photos or record using the camera. The photos and videos will be stored into the Gallery automatically.



Before creating the Wi-Fi connection, please ensure that your WLAN network has been configured correctly.

You can use your Google account to download various Apps from the Android Market. Set up your own account first to access the Android Market.

 In the Settings menu, you can configure the unit, set app options, add accounts, and set other preferences.

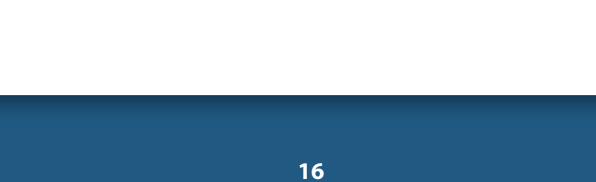

Check this list for a possible troubleshooting solution.



This image shows a blank sheet of white paper with horizontal blue lines, resembling notebook paper. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



Please read all instructions carefully before use and keep for future reference.

The design and features are subject to change without notice.

IMPORTANT SAFETY INSTRUCTIONS

PRODUCT OVERVIEW

PRODUCT OVERVIEW

CHARGING THE BATTERY

EXPLORING THE MAIN SCREEN

ANDROID APPS AND WIDGETS

NOTIFICATIONS PANEL


BASIC OPERATION

CONNECTIONS


CONNECTIONS

- Do not use this apparatus near water.
 - Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - Only use attachments/accessories specified by the manufacturer.
 - Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vase, shall not be placed on the apparatus.
 - The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
 - Do not place any naked flame sources, such as lighted candles, on the apparatus.
 - The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions.
- Please charge your unit when it is:
- The battery icon indicates the power is lower.
 - The unit shuts off suddenly, even if restart again.
 - Tapping any button has no response.
- Please use the supplied AC power adaptor to charge the unit; otherwise, using other adaptors may damage your unit.
- When the player is formatting, uploading or downloading, do not disconnect the connection. It may cause program error if you do this.
 - We are not responsible for the memory loss caused by product damage, repairmen or other reasons. Please operate strictly following these instructions.
 - Clean only with dry cloth. Do not use aerosol cleaners, benzene, anti-static liquids or any other solvent for cleaning
 - Refer all servicing to qualified service personnel.
 - Turn off the unit or use airplane mode when use is prohibited, such as traveling in the aircraft.
 - The supplied USB cable is used for data transmission only.
 - Non-waterproof.

Illustrations contained within this user manual are for representation only and subject to change.

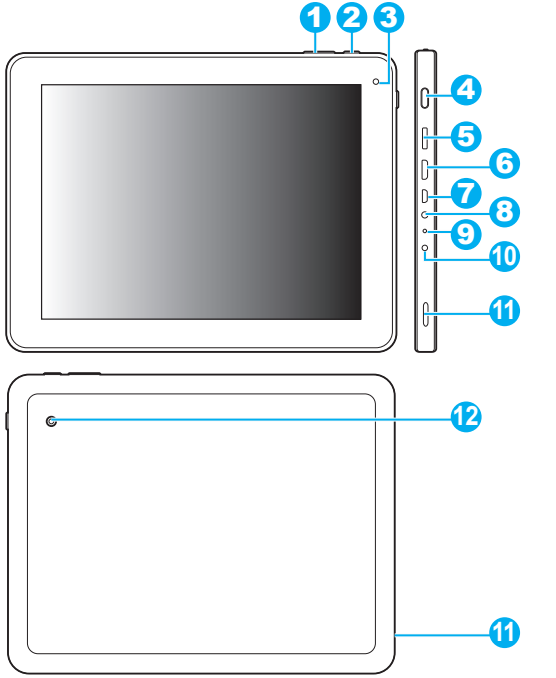 



- 1 Volume+/- buttons**
Press to increase or decrease the volume level.
- 2 (Return) button**
Press to go back to the main screen.
- 3 Front camera**
Uses to take a photo or record a video.
- 4 (Power) button**
 - Press and hold to turn on/off the unit.
 - Press to wake up the screen.
 - Press to lock the screen.
- 5 TF card slot**
Insert a flash card to extend the memory.
- 6 Micro HDMI port (Optional)**
Outputs signals to external HDMI devices via HDMI cable.
- 7 Micro USB port**
Connect through USB cable to your PC for transferring data.
- 8 (DC IN) jack**
Connect to AC adaptor for charging.
- 9 (Microphone)**
Uses for video conference, talking, and sound recording.
- 10 (Earphone) jack**
Outputs audio to earphone, speakers and amplifier.
- 11 Speakers**
Outputs high-fidelity sound quality sound effect.
- 12 Rear camera**
Uses to take a photo or record a video.

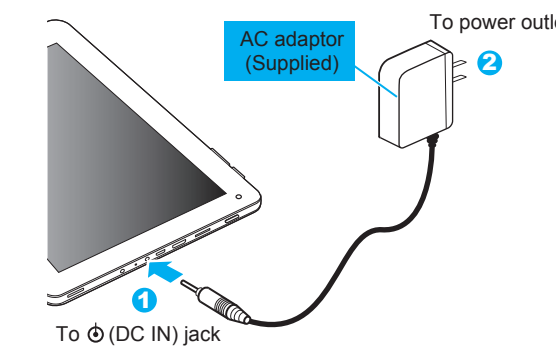 

CAUTION!
Please charge the battery fully when use the unit at the first time.

Notes:

  - Please charge only using the supplied AC power adaptor.
- Charge your unit at least for 10 hours at the initial two charges. After then you can charge just for 7 hours.

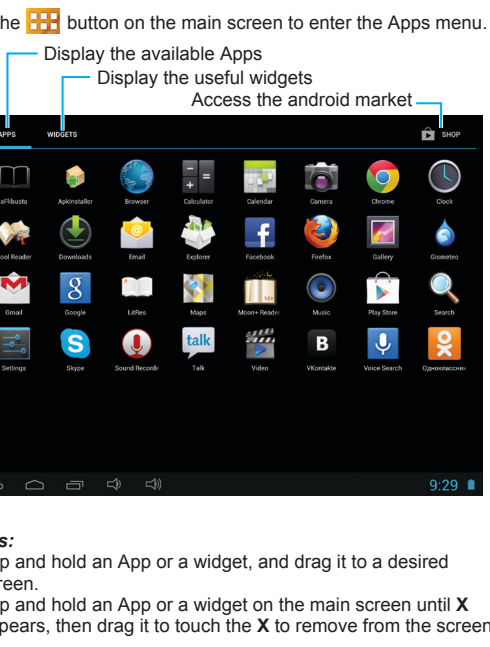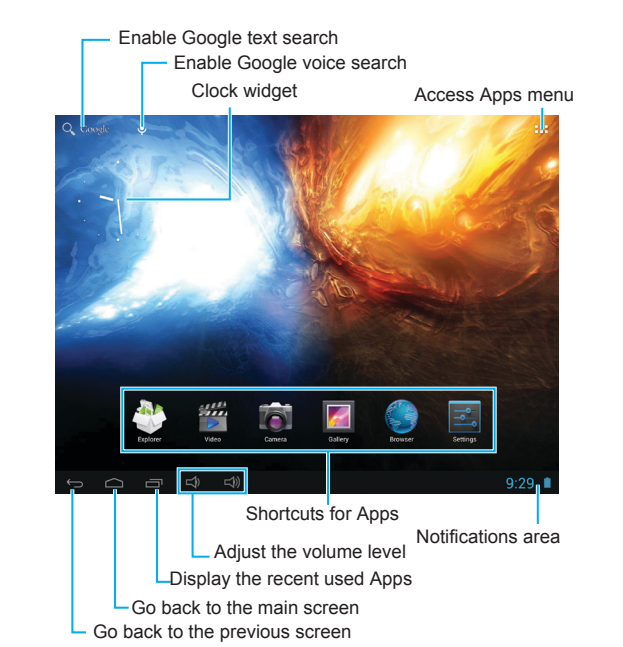

Notes:

- Tap and hold an App or a widget, and drag it to a desired screen.
- Tap and hold an App or a widget on the main screen until X appears, then drag it to touch the X to remove from the screen.



Note:

- After operating, tap any other area on the screen to turn off the Notifications panel.

OPERATING ACTIONS

 
 
Tap:
Tap an item or App once to select the item or launch the App.

Long-tap:
Tap and hold the current operating interface or area until the relevant items appear, then release.

Slide:
Slide up/down/left/right to switch between different screens conveniently.

Drag:
Tap and hold an icon on the desktop and drag to other position.

Pinch & Spread:
Use two fingers to tap the screen, and adjust the distance between them to zoom in/out the current photo or web contents.

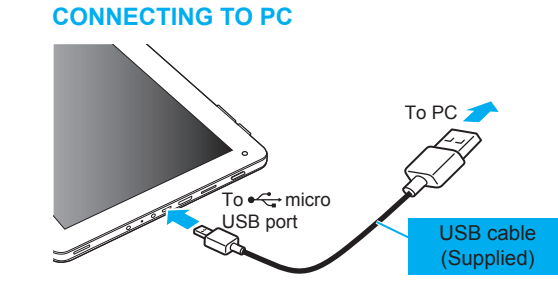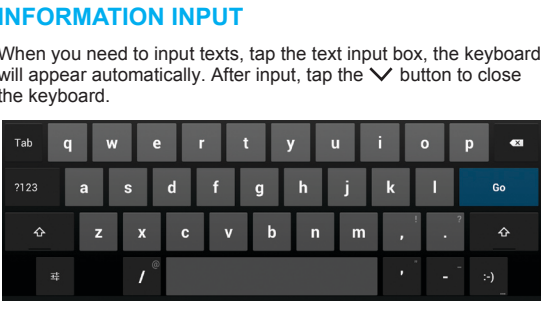

WARNING!

 
- When connecting to PC, please follow the computer prompts strictly to avoid any data loss.
- Do not disconnect the USB connection during data transferring; otherwise it will cause data damage or loss.

1 Connect the one end of the USB cable (supplied) to the unit, and the other end of the USB cable (supplied) to your PC.

2 Tap Turn on USB storage to transfer files.

CONNECTING TO HDMI DEVICES (Optional)

A HDMI cable can output both video and audio and enables you to enjoy digital-quality video and audio with minimal loss of quality.

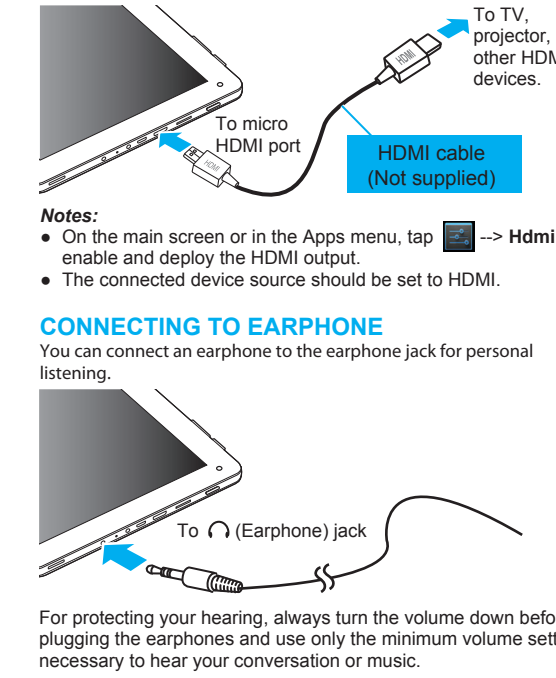

For protecting your hearing, always turn the volume down before plugging the earphones and use only the minimum volume setting necessary to hear your conversation or music.