 




USER MANUAL

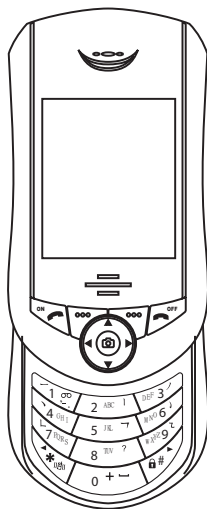

SC 528

English



Welcome!

Thank you for choosing SC 528. It comes with an amazing array of features that offer convenience, versatility and enjoyment of modern communication technology.

This manual is published by AWG without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information or improvements to programs and/ or equipment, may be made by AWG at any time and without notice. Such changes will be incorporated into new editions of this manual.

All rights reserved.
© 2005 AWG

Notice

Some services mentioned here are network dependent and may be unsupported by user's network operator and service provider. Contact your network operator and service provider to check if a service is supported.



IMPORTANT SAFETY INFORMATION

You should observe the following safety guidelines. Failure to do so will void your warranty and may contravene local laws and regulations.

Drive Safely

- Do not use your phone while driving. Use a hands-free device to operate your phone.
- Always place the phone in its proper holder; do not place the phone on the passenger seat, near an airbag.

RF Interference

- Always obey local laws and regulations pertaining to mobile phone usage.
- Some electronic equipment may not be shielded from RF signals.
- Read user's manual of any accessory or device and its operation and safety instructions before using it with your phone.

Charger and Accessories

- Use only approved charger.
- Do not use the charger outdoors or in wet areas.
- Unplug the charger from power source before cleaning. Use a slightly damp cloth for cleaning, and allow charger to dry fully before using.
- Only use accessories approved by AWG. Using unapproved accessories may result in phone damage, degraded performance, fire, electric shock or injury, and will void the warranty.
- Check with authorised dealer for list of approved accessories.

Pacemakers

Based on the research and recommendations of Wireless Technology Research, AWG recommends a separation be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. Persons with pacemakers:

- Should keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.



Hearing Aids

- Some mobile phones may interfere with some hearing aids.

Medical Equipment

- Turn off your phone in hospital and other health care facilities.
- Operation of mobile phones may interfere with the inadequately protected medical devices.

Vehicles

- RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. fuel injection systems, anti-lock braking systems, speed control systems, air bag systems).
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- Switch off your phone before boarding an aircraft. The use of mobile phone in an aircraft may interfere with the operation of the aircraft and may be illegal.

Prohibited Areas

- Turn off your phone in any prohibited area where notices so require.

Potentially Explosive Atmospheres

- Switch off your phone and do not remove its battery when entering any area with a potentially explosive atmosphere.
- Areas with potentially explosive atmosphere include gas or petrol stations, below deck on boats, fuel or chemical transfer and storage facilities or where blasting operations are in progress and any other area where you would normally be advised to turn off your vehicle engine.

Obey all signs and instructions. Failure to do so may cause an explosion or fire resulting in property damage, bodily injury or even death.



Phone Package and Accessories

Included in this package:

1. Transceiver
2. Travel Adapter
3. Battery
4. User manual

Optional accessories:

- Extra standard battery
- Extra high capacity battery
- Desktop charger
- Hands-free Headset
- Data cable

Care and Maintenance

Observe following care and maintenance instructions to improve the performance and lifespan of your phone. Failure to do so will void the warranty.

- Keep phone out of children's reach.
- Keep phone dry.
- Do not use or store in wet, dusty or dirty areas.
- Do not attempt to take the phone apart.
- Do not drop, throw or shake phone.
- Do not use soaps, chemicals, cleaning solvents, or strong detergent for cleaning. Use a moist cloth to wipe.
- Avoid exposing phone to severe shocks, extreme (hot or cold) temperatures or moisture.
- Keep phone away from open flames e.g. lit candles or cigarettes.

Servicing/repair

- If the phone, battery, or any accessory is not working properly, send to your nearest authorised dealer for repair.
- Do not attempt to disassemble or repair your phone, you may damage the phone or injure yourself and will void the warranty. Only qualified personnel should perform repairs.
- Make back up copies of all data and delete security sensitive data before sending your phone in for repair.

Disposal

- Your phone, battery and other components may require precautions for safe disposal. Please comply with all local laws and regulations when disposing of your phone and battery.



Battery Information

To charge phone battery:

- Connect charger to phone at charger connection.
- Battery indicator flashes when battery is being charged.
- Charge battery for at least 60 minutes.
- Charge battery until battery indicator shows that battery is fully charged.
- Press sides of charger to remove charger from charger connection.

SAR (Specific Absorption Rate)

Your mobile phone is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and established permitted levels of RF energy for the general population. The Specific Absorption Rate, or SAR limit stated in the international guidelines and the highest SAR values for this phone model are stated below:

Standards	EN50360-2001 (10g Average)	ANSI C95.1-1999 (1g Average)
Limit of SAR (W/kg)	2.0	1.6
Peak SAR values measured	0.190	0.281

This product meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5cm away from the body.



TABLE OF CONTENTS

	PAGE
IMPORTANT SAFETY INFORMATION	2
Phone Package and Accessories	4
Care and Maintenance	4
Battery Information	5
SAR (Specific Absorption Rate)	6
TABLE OF CONTENTS	6
1. Product Specifications	8
2. Emergency Calls	8
3. Keys Description	9
4. Quick Key Combinations	10
5. Icon Description	10
6. Phone Book	12
7. Messaging	13
7.1 Read Incoming Messages	13
7.2 SMS Message Options	15
7.3 EMS Message Options	15
7.4 Read Outgoing Messages	17
7.5 Edit Message in Outbox	18
7.6 Write and Send Message	19
7.7 Additional Messaging Options	21
8. Voicemail	21
8.1 Call Voicemail box	21
8.2 Setup Voicemail box number	21
9. MMS Messaging	22
9.1 Quick Reference on MMS Settings	22
9.2 Write MMS Message	35
9.3 Read Incoming MMS Messages	35
9.4 Draft MMS Messages	36
9.5 Edit Outgoing MMS Message	37
9.6 Manage MMS Profiles	37
9.7 Edit MMS Profile	38
9.8 Select WAP Profile	38
10. Cell Broadcast (CB) Messages	38
10.1 Read CB Messages	38
10.2 Activate / Deactivate Broadcast	38
10.3 Customize SMS-CB Tone	39
11. Call Records	39
11.1 Missed Calls	39
11.2 Last Incoming Call	40
11.3 Last Outgoing Call	41



11.4	Call Timers	41
11.5	Charge rate	42
12.	Call Settings	43
12.1	Mode Setting	43
12.2	Ring Tone	44
12.3	Ringer Volume	44
12.4	Key Tone	44
12.5	Alert Mode	45
12.6	Startup/ Bye Tone	45
12.7	Beep Timer	45
12.8	DTMF	46
12.9	Auto Redial	46
13.	Calendar	46
14.	Multimedia	49
14.1	Camera	49
14.2	Photo Gallery	50
14.3	Voice Recorder	50
14.4	Defragmenter	51
14.5	Media Center	51
15.	Games	52
16.	WAP Services	53
16.1	Quick Reference on WAP Settings	61
16.2	WAP Services Menu	69
16.3	About the WAP Browser	69
16.4	WAP Browsing Menu	69
17.	Phone Settings	70
17.1	Language	70
17.2	Display	70
17.3	Clock & Alarm	71
17.4	Extra Settings	73
17.5	Information	74
17.6	Restore Settings	74
18.	Tools	75
18.1	Calculator	75
18.2	Currency converter	76
18.3	Memos	77
18.4	To do list	77
19.	Security	78
20.	Network Services	81
21.	SIM Application Tool Kit	84
22.	TROUBLESHOOTING	85
23.	FREQUENTLY ASKED QUESTIONS (FAQ)	87



1. Product Specifications

Model SC 528

GSM Quad Band	: 850/900/1800/1900MHz
Weight	: Around 80g (with battery)
Dimensions	: 85X46.7X23.8 mm
Volume	: Around 75cc
Standard battery	: Lithium ion 650mAh
Talk time	: * maximum 120 minutes
Standby time	: * maximum 120 hours
*Network dependent	

Multimedia objects supported:

Audio formats	: melody, Midi, MFM
Graphic formats	: wbmp, bmp, png, gif, animated gif, jpeg

2. Emergency Calls

IMPORTANT!

- To make or receive any calls the phone must be switched on and in a service area with adequate signal strength.
- This wireless phone cannot guarantee connection in all conditions. Do not rely solely on your wireless phone for emergency communications.
- Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use.
- Check with your network operator.

To make an emergency call

- Switch phone on. Some networks require a valid SIM card be properly inserted.
- Key in the emergency number for your present location (e.g. 999 or 112).
- If certain features are in use (Key guard, Locking, Call Restricting etc.), turn those features off before making an emergency call.
- When making an emergency call, follow all instructions of the emergency operator and do not hang up until requested to do so.



3. Keys Description

SIDE Keys

Increase/ decrease earpiece volume. Turn off ringer during active call. Navigate Menu items.



 
UP SIDE



DOWN SIDE

SEND Key

Initiates call. Hold call/ activate call waiting during active call. Displays Last Call List and Dials Last Call.

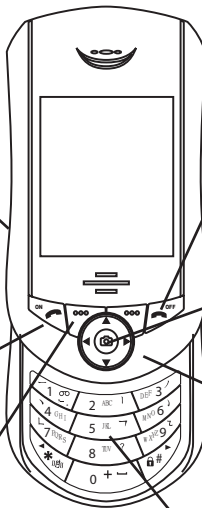

END/ ON-OFF Key

Press to end call or Press and hold to switch phone on/ off.

CAMERA Key

Press to activate camera.

ARROW Keys

Navigate menus, lists and texts.

▲ UP ARROW

▼ DOWN ARROW

◀ LEFT ARROW

▶ RIGHT ARROW

LEFT ... RIGHT ... Keys

Press to select options that appear in the display immediately above these keys.

0 – 9, * and #

Enters digits, 0-9 and letters.



4. Quick Key Combinations

To ...

Enter the + sign
Call voicemail box
Launch quick-dial call
Activate/ deactivate vibrate mode
Lock/ Unlock phone
Display Last Call List
Dial Last Call
Switch on/ off phone
Shortcut to Game Menu
Shortcut to Main Menu
Shortcut to Write SMS
Shortcut to Ring Tone
Shortcut to Phonebook
Shortcut to WAP Services
Increase earpiece volume
Decrease earpiece volume
Shortcut to Alert mode settings
Show Idle Timer

To ...

Hold call
Activate call waiting
End call
Shortcut to Call Menu
Mute/ Unmute microphone
Turn off Ringer
Refuse call
End call

To ...

Return to Idle mode
Go to previous row
Go to next row
Go to previous item
Go to next item

When in idle mode:

Press and hold 0
Press and hold 1
Press and hold 2 - 9
Press and hold *
Press and hold #
Press SEND
Press and hold SEND
Press and hold END/ ON-OFF
Press ▲
Press ▼
Press #
Press #
Press Right ...
Press Left ...
Press 
Press 
Press and hold Side Keys
Press and hold Side Keys in Standby mode

During Active call:

Press SEND
Press SEND
Press END/ ON-OFF
Press Left ...
Press Right ...
Press Side Keys
Press and hold Side Keys
Press and hold Side Keys

When in Menus:

Press END/ ON-OFF
Press ▲ or 
Press ▼ or 
Press ◀ or Press and hold 
Press ▶ or Press and hold 



5. Icon Description

The table below shows icons, which may appear in idle mode or in the menus.

Icon	Description
	Signal Strength indicator
	Battery Indicator
	Call Divert Indicator
	Phone book
	WAP
	Keypad Lock Indicator
	Short Message Indicator
	SMS Received Indicator
	SMS Full Indicator
	SMS/EMS Indicator
	MMS Received Indicator
	MMS Full Indicator
	Alarm Indicator
	Bell Indicator
	Silent Mode Indicator
	Melody Mode Alert Indication (Line 1)
	Pocket Mode Alert Indicator (Line 1)
	Vibrate Alert Mode Indicator (Line 1)
	Active Call
GPRS	GPRS Service Available Indicator
	Microphone on
	Microphone Muted



6. Phone Book

1. Press Right ... key to access Phone Book.
2. Press Menu to list Phone book options.
3. Press OK to select options.
4. Press BACK to cancel and return to menu.

Phone book Menu Options

Option	Description
Show Details	Check the details of the phone entry e.g. user name, home number, mobile phone number, office number, fax number, WAP address, chosen Ring Tone, Caller Picture and Group the phone entry belongs to, email address and remarks.
Search	Search phone entry by name or by the location (SIM Card or Phone memory).
Add entry	Add a new phone entry into the phone book. Phone entry can be personalised by choosing the Ring Tone and Caller Picture and Group.
Edit entry	Edit the details in the phone entry
Delete entry	Delete the phone entry.
Groups	Set the phone entries into different groups according to preference. Can send Group SMS
Select Memory	Select location of new phone entry to be saved, either SIM Card or Phone memory
Copy/Move	Copy/move phone entry from SIM card to Phone memory, or vice versa
Fast Dial	Fast Dial allows selected phone entries to be set to keypad numbers 2 - 9. Press and hold selected keypad numbers to dial corresponding phone entries.
Restrict Call	Restrict incoming call from a particular group or all groups with following options: None refused - Deactivate the restrict call function Not in Group - Restrict Call, which number is not in the Group. Not in Phone - Restrict Call, which number is not in SIM card and Phone memory. If activated, the Restrict Call icon will appear on screen.



7. Messaging

Go to Messages Menu for SMS, Voicemail box parameters, MMS, and Cell Broadcast Messages functions. Phone supports Concatenated SMS, EMS, MMS and Push messages.

Inbox Message Icons


Icon	Denotes
	Read Messages.
	Unread Messages.
	Enhanced SMS Message.

SMS Inbox options

Option	Description
Read	Read current message
Delete	Delete current message
Delete all	Delete all messages
Properties	Display properties of current message


7.1 Read Incoming Messages

 1. Go to SMS → Inbox to view list of all incoming messages.

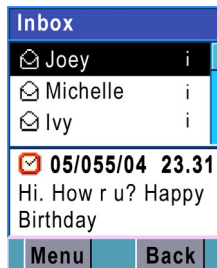




 2. Select message from list.
3. Press **Menu** to list general options.
4. Press **OK** to select option
5. Press **BACK** to cancel and return to menu.

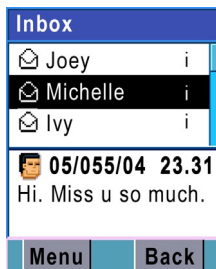


Read SMS Message.

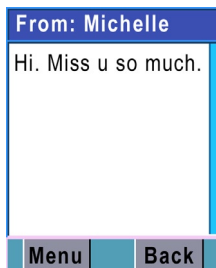 

Read EMS Message.

LEFT/ RIGHT Arrow keys to navigate through objects.
When cursor is on an object:

 - The object is played (animation, sound, or melody)
- Press **Menu** for option to Detach and Set As to store object.

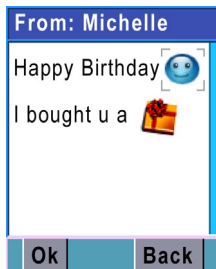



7.2 SMS Message Options

1. Open SMS Message.
2. Press **Menu** to list message options.
3. Press **OK** to select option.
4. Press **BACK** to cancel and return to menu.

Inbox SMS Message options

Option	Description
Delete	Delete the message.
Forward	Forward message as is or modified.
Reply	Reply to message.
Extract numbers	Call sender or dial number in message.
Properties	Display properties of current message.

7.3 EMS Message Options


1. Open EMS Message.
2. Press **Menu** to list message options.
3. Press **OK** to select option.
4. Press **BACK** to cancel and return to menu.

Inbox EMS Message Options


Option	Description
Delete	Delete the message but not detached EMS object.
Forward	Forward message as is or modified.
Reply	Reply to message.
Extract numbers	Extract number from message text.
Extract URL	Extract URL from EMS message, edit in editor and launch browser.
Properties	Display properties of current message.
Detach	Save object in EMS.
Detach all	Save all objects in EMS.



 
Confirmation to delete message.

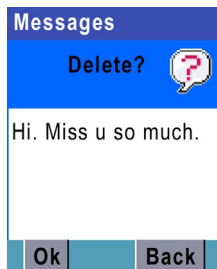

Extract number from message text.

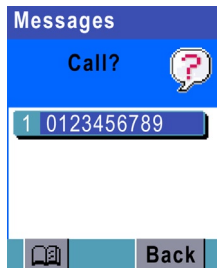 

Extract URL from text message.

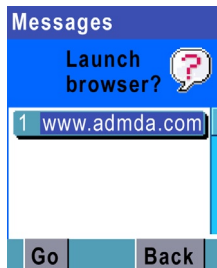 




Change URL in editor if required. Press **Go** to launch browser.



 EMS messages not automatically saved (detached). Store the EMS object using **Menu** → Detach; or **Menu** → Set As.

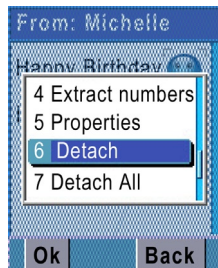

7.4 Read Outgoing Messages

1. Go to SMS → Outbox to view list of all outgoing messages.
2. Select message from list.
3. Press **Menu** to list general options.
4. Press **OK** to select option.
5. Press **BACK** to cancel and return to menu.

SMS Outbox Icons


Icon	Denotes
	Message not sent
	Message sent
	Sent receipt asked
	Sent receipt received



SMS Outbox Options

Option	Description
Read	Read current message
Delete	Delete current message
Delete all	Delete all messages
Properties	Display properties of current message

 Read outbox message.

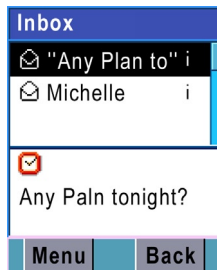

7.5 Edit Message in Outbox

1. Select message from list.
2. Press OK to edit message.
3. Press OK to list option.
4. Press BACK to cancel and return to menu.



SMS Outbox Edit Options

Option	Description
Store	Store message
Send	Send message.




7.6 Write and Send Message

  1. Go to SMS → Write

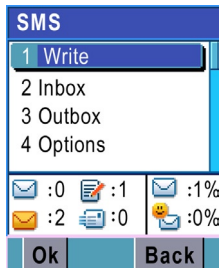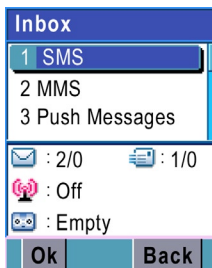

 2. Enter text using keypad or Press **Menu** → Insert, to add EMS object.

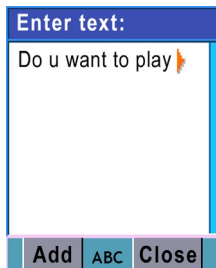


3. Press **Add** to add text or **Clr** to delete character.





 4. Press **Menu** to display options.
5. Press **OK** to select option.
6. Press **BACK** to cancel and return to menu.

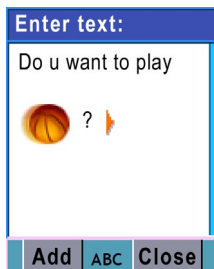

7. Enter destination number using keypad or Press Arrow key → **OK** to select number from Phonebook.
8. Enter telephone number or Press Arrow key → **OK** → Select number from phone book.



SMS Write Options

Option	Description
Store	Store message in SIM before sending.
Send	Send message only.



7.7 Additional Messaging Options

1. Go to SMS → Options to view list of options.
2. Press **OK** to select option.
3. Press **BACK** to cancel and return to menu.

Additional Messaging Options

Option	Description
New message tone	Select to play melody/sound from Media Center when receive new message. Select 'None' to deactivate feature.
SC Number	Enter Service Center number.
Validity period	Setup period during which message remains relevant. Use Arrow keys to select period.
Message type	Use Arrow key to select standard.
Activate/ Deactivate Receipt	Network dependent feature. Activate to notify when message is delivered.
SMS Access	Select whether to send message via GSM or GPRS network.

8. Voicemail

8.1 Call Voicemail box

Go to Voicemail box to automatically dial voicemail box number.

8.2 Setup Voicemail box number

1. Go to Voicemail box.
2. Enter voicemail box number using keypad.
3. Press **OK** to store number.
4. Press **BACK** to return to menu.



9. MMS Messaging

9.1 Quick Reference on MMS Settings

Before you start:



1. Contact your Network Service Operator(s) for the following information.
2. Go to WAP Services to enter the information.

Information	Example:	Where to Input?
1. APN	Smartone, wap, peoples	WAP services→General settings→Connect settings→GPRS data account→Menu→Setup→ Access point name
2. URL	http://wap.smartone.com.hk	WAP services→Profile settings→Homepage→ URL
3. IP Address	210.101.111.888	WAP services→Profile settings→Gateway options→Gateway address→ Edit gateway
4. MMS Server URL	http://mms.smartone.com.hk/server	Messages→MMS→Settings→Connection→ Server URL
5. User name (If any)	Smartone	WAP services→General settings→Connect settings→GPRS data account→Menu→Setup→ User name




Set up Data Account for MMS GPRS account

  1. Go to WAP Services → Connect Settings → GPRS Data Account → Press **OK**.

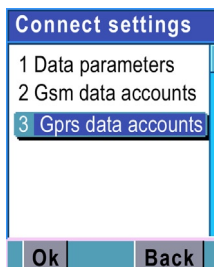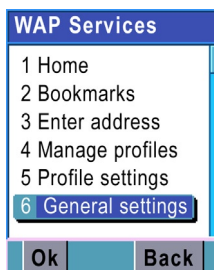

 2. Press **Menu** → Create New → Press **OK**.

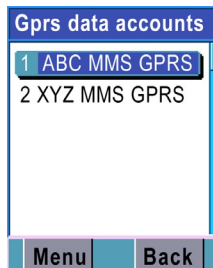



3. Enter Data Account Name (e.g Smartone MMSGPRS) → Press **OK**.
4. Select newly created Data Account using UP/ DOWN arrow key.

Edit data account

Enter name:

Smartone MMS GPRS

Ok **ABC** **Back**

Gprs data accounts

1 ABC MMS GPRS
2 XYZ MMS GPRS
3 **Smartone MMS G**

Menu **Back**

5. Press **Menu** → Setup → Access Point name → Press **OK**.

Smartone MMS GPRS

1 **Setup**
2 Rename
3 Create new
4 Delete

Ok **Back**

Setup

1 **Access point name**
2 User name
3 Password
4 Local address

Ok **Back**

6. Enter Access Point Name, User Name, Password, Local Address, Dynamic Address → Press **OK**.
7. Press END button to revert to idle screen.

Edit data account

Access point name:

Smartone

Ok **ABC** **Back**

Edit data account

Access point

 
Parameter Stored

Ok **ABC** **Back**



Set up MMS Profile



1. Go to WAP Services → Manage Profiles → Press **OK**.

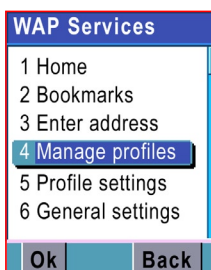

2. Press **Menu** → Add Profile → Press **OK**.




  3. Enter the Profile Name (e.g Smartone MMS)→ Manage Profiles

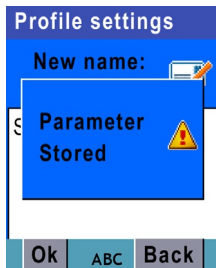
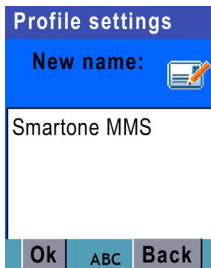




 
4. Select the newly created MMS profile using UP/ DOWN arrow key.

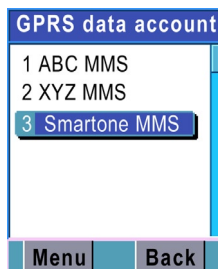

  5. Press **Menu** → Select profile → Profile Settings → Homepage → URL → Press **OK**.

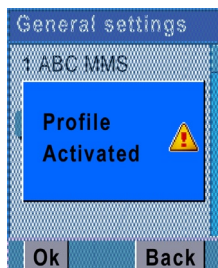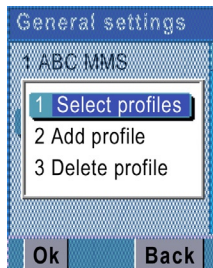

 6. Enter Username, Password (If any) → Press **OK**.

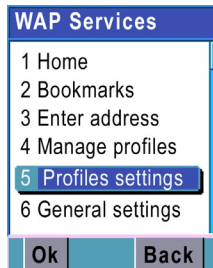



Homepage

1 Name
2 URL
3 User name
4 Password

Ok Back

Edit homepage

Homepage:

http://mms.smartone.com.hk/server

Ok ABC Back

7. Press **BACK** → Add a Gateway → Press **OK**.

Profile settings

1 Profile name
2 Homepage
3 Add a gateway

Ok Back

8. Enter Gateway Name (e.g PxSmartone), select Gateway Options → Press **OK**.

Edit gateway

New name:

PxSmartone MMS

Ok ABC Back

Edit gateway

 
 
New name:

New gateway is activated


Ok ABC Back




9. Select the newly created gateway → Press **OK**.

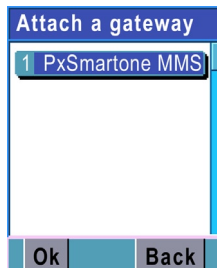
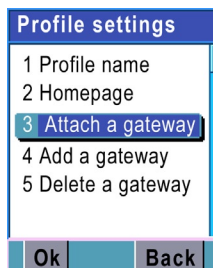


  10. Select Connect mode → CO → Gateway Address → Press **OK**.

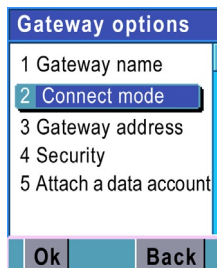

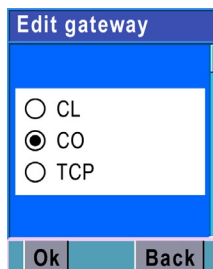

  11. Enter the IP Address → Attach a Data Account

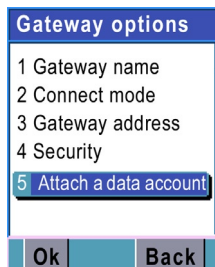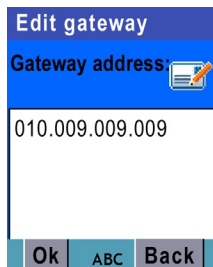

12. Select the new data account using UP/ DOWN arrow key.

13. Press END button to revert to idle screen.

MMS profile set up is completed.

