 




Set up MMS Account

1. Go to Messages → Settings → Press **OK**.

 
 
 
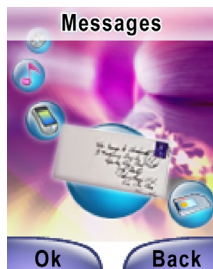 


2. Press **Menu** → Add → New Profile → **Menu** → Rename → Press **OK**.






3. Enter Name (e.g MMS TIM), select the newly created MMS account → **Menu** → Activate → Press **OK**.

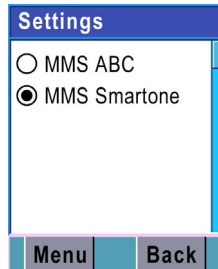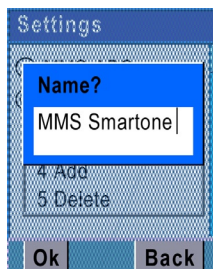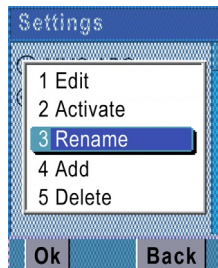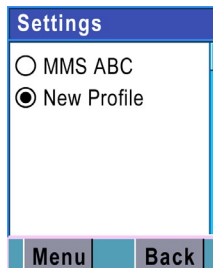




 4. Press **Menu** → Edit
→ Connection →
Server URL → Enter the MMS server
URL address →
Press **OK**.

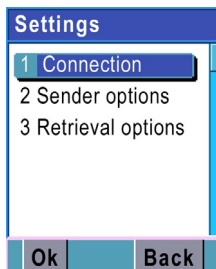

 5. Select MMS profiles
→ Select the new
MMS profile →
Press **OK**.

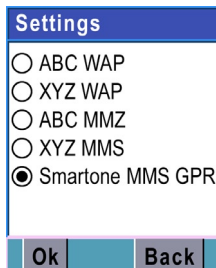



6. Press **Back** twice
→ Sender options
→ Sender info →
Address →
Press **OK**.

Settings

- 1 Connection
- 2 **Sender options**
- 3 Retrieval options

Ok Back

Sender options

- 1 **Sender info**
- 2 Delivery report
- 3 Read report
- 4 Hide address
- 5 Validity period

Ok Back

Sender options

- 1 Name
- 2 **Address**

Ok Back

From address

Address

97865432

 
Address type:

☒ Number ☐ Email



Ok Back



7. Press END button to revert to idle screen.

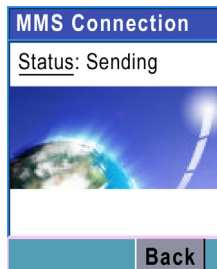

MMS setup is completed.

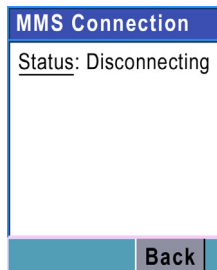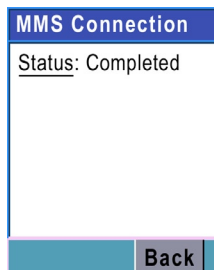  

You should now be able to send and receive MMS.
Please contact your network service provider for further details of MMS profile settings.



9.2 Write MMS Message

1. Go to MMS → Write to create new MMS message with MMS Editor.
2. Press **Menu** to list MMS Editor functions.

MMS Editor Functions

Function	Description
Insert	Add objects to MMS slide.
Delete	Select to Delete element from slide or Delete MMS slide.
Preview	Preview message.
Set Timing	Modify timing of slides and elements with graphical duration-editor. Press Menu for additional duration-editor functions.
Recipients	Add message recipients. Supports multiple address lists. Adds subjects and attachment.
Send Now	Send MMS.
Store	Save MMS in Draft Folder.

9.3 Read Incoming MMS Messages

1. Go to MMS → Inbox.
Incoming MMS Messages are stored in Folders. Each folder lists 4 messages per screen together with icon and subject text. Properties of the selected message are shown in preview.
2. Open Message Folder → select message from list.
3. Press **Menu** to list option.
4. Press **OK** to select option.
5. Press **BACK** to cancel and return to menu.

MMS Messages Folder

Folder	Icon	Description
Notification		Indicates new message in server pending download. Gives user choice to download unless auto-download is activated.
Unread		Newly downloaded messages.
Read		Viewed messages.



Notification Folder Options

Option	Description
Download	Download message from server.
Delete	Delete current message.
Delete all	Delete all messages in Folder.
Details	View message details.

Read / Unread Folder Options

Option	Description
View	View message.
Reply	Create new message to sender.
Forward	Send message to other recipient.
Browse object	Browse message to detach media objects.
Delete	Delete message.
Information	View message details.

9.4 Draft MMS Messages

1. Go to Draft; Press **BACK** from MMS Editor; or Press **Menu** → Select Store from editor's recipient/ subject screen
2. Draft messages are organized the same way as in MMS Inbox.
3. Open message folder → select message from list.
4. Press **Menu** to list option.
5. Press **OK** to select option.
6. Press **BACK** to cancel and return to menu.

MMS Menu Draft Folder Options

Option	Description
View	View message.
Open	Open to edit message.
Browse object	Browse message to detach media objects.
Delete	Delete message.
Move	Move message to other Folders.
Information	View message details.



9.5 Edit Outgoing MMS Message

Messages to be sent are temporary stored in Outbox. When sent, messages are stored in Sent.

1. Go to MMS → Outbox / Sent.
Outbox messages are organized same way as in MMS Inbox.
2. Open message folder → select message from list.
3. Press **Menu** to list options.
4. Press **OK** to select option.
5. Press **BACK** to cancel and return to menu.

MMS Menu Outbox Folder Options

Option	Description
Resend	Resend message.
View	View message.
Open	Open to edit message.
Browse object	Browse message to detach media objects.
Delete	Delete message.
Delete all	Delete all messages in Folder.
Information	View message details.

9.6 Manage MMS Profiles

1. Go to MMS → Settings.
2. Select MMS Profile from list.
Default MMS Profile is the first listed.
3. Press **Menu** to list options.
4. Press **OK** to select option or to save changes.
5. Press **BACK** to return to menu.

MMS Menu Settings Options

Option	Description
Activate	Activate MMS Profile
Add	Add MMS Profile
Rename	Rename MMS Profile
Delete	Delete MMS Profile



9.7 Edit MMS Profile

1. Select MMS Profile from list.
2. Press **Menu** → Edit→ Press **OK** to list options.

MMS Menu Settings Edit Options

Option	Description
Connection Settings	Change MMS Connection. Select option from list.
Sending Options	Change Sending options.
Retrieval Options	Option to receive delivery notification.

9.8 Select WAP Profile

1. Selects WAP Connection to be used for all MMS Profiles.
2. Press **OK** to select profile.
3. Press **BACK** to return to menu.

10. Cell Broadcast (CB) Messages

Text messages sent by networks to GSM terminals located within same cell. These messages provide general local information, such as weather and traffic reports. Select to receive up to 5 types of information.

10.1 Read CB Messages

1. Go to Broadcast → Read to display list of messages.
2. Use Arrow keys to move with message.
3. key at end of message goes to next message.
4. key at beginning of message goes to previous message.
5. Press **BACK** to return to menu.

10.2 Activate / Deactivate Broadcast

1. Go to Broadcast → Status
2. Press **OK** toggles current status.
3. Press **BACK** to cancel and return to menu.



10.3 Customize SMS-CB Tone

Customize phone to play melody/ sound when receive new CB message.

1. Go to Broadcast → SMS-CB Tone
2. Press **OK** to list option.
3. Press **OK** to select option.
4. Press **BACK** to cancel and return to menu.

Messages Menu Broadcast SMS-CB Tone Options

Option	Description
Melody	Select from list to activate SMS-CB Tone.
Sound	Select from list to activate SMS-CB Tone.
None	Deactivate SMS-CB Tone.

 
11. Call Records

1. Go to Call Records menu to view missed calls and call information.
2. Press Down Arrow → Go to Call Records → Press **OK**

11.1 Missed Calls

1. Go to Missed Calls → Press **OK** to displays detailed list of last 10 missed calls. Select call from list.
2. Press **Menu** for list of options.
3. Press **OK** to select option.
4. Press **BACK** to cancel and return to menu.

Retrieve Missed Calls from  icon in Idle screen or from Call Records Menu.

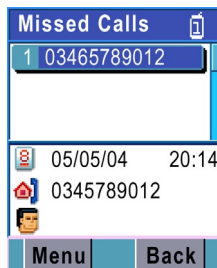




Missed calls Menu options

Option	Description
Store	Store number in phonebook
Call?	Call number
Delete	Erase current missed call record
Delete all	Erase all missed call records

 Missed calls menu option.

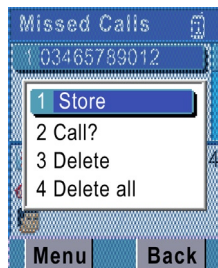

11.2 Last Incoming Call

1. Go to Last Incoming Call → Press **OK** to displays list of last 10 incoming calls.
2. Select call from list.
3. Press **Menu** for list of options.
4. Press **OK** to select option.
5. Press **BACK** to cancel and return to menu.

Last Incoming Call Menu Options


Option	Description
Store	Store number in phonebook
Call?	Call number
Delete	Erase current missed call record
Delete all	Erase all missed call records



11.3 Last Outgoing Call

1. Press **SEND** key in idle mode for shortcut to menu, or Go to Last Outgoing Call → Press **OK** to displays list of last 10 outgoing calls.
2. Select call from list.
3. Press **Menu** for list of options.
4. Press **OK** to select option.
5. Press **BACK** to cancel and return to menu.

 Outgoing call details.

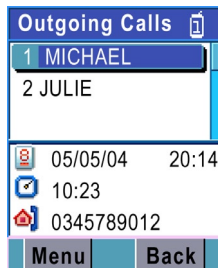

Last Outgoing Call Menu Options

Option	Description
Store	Store number in phonebook
Call?	Call number
Delete	Erase current missed call record
Delete all	Erase all missed call records

11.4 Call Timers

1. Go to Call Timers → Press **OK**
2. Select from list.
3. Press **OK** to select option.
4. Press **BACK** to cancel and return to menu.



Call timers menu option

Option	Description
Last call time	Displays number, time, date and duration of last incoming/ outgoing call
Total incoming time	Displays number and total duration of incoming call since last reset
Total outgoing time	Displays number and total duration of outgoing call since last reset
Reset timer	Resets counter for last incoming/ outgoing call. Option is Phone Code protected. Default value "0000"
Display call timer	On/ Off option to display call timer. Use Side keys to highlight option. Press Save to save modification or Back to return to menu.

11.5 Charge rate

1. Go to Charge rate → Press **OK**
2. Select from list.
3. Displays last call charging information and option for setting Advice of charge parameters.

N.B. Availability of option dependent on SIM Card capability and service provider. Press **OK** to select option or **BACK** to cancel and return to menu.



Charge rate menu option

Option	Description
Last call	Displays cost of last call.
All calls	Displays total cost of all calls since last credit set or last reset.
Set credit	Enter maximum number of units to be consumed. Press OK to validate or BACK to return to menu. Option is PIN protected.
Cost & Currency	Enter unit price using * for decimal. Press OK to validate or CLR to delete. Next, enter currency name (3 characters). Option is PIN protected.
Display credit	Setup display for remaining credit. Use Side keys to highlight display type. Press OK to save modification or BACK to return to menu.
Reset	Reset total cost of calls. Option is PIN protected.

12. Call Settings

Contains features to personalize calls.

Press Down Arrow → Go to Call Settings → Press **OK**

12.1 Mode Setting

The phone supports 5 mode settings.

Mode	Setting
Normal	No modification to user settings
Meeting	Vibrate alert mode, no ring level, key sound tone, or auto-answer
In Car	Ring Only alert mode, max ring level, auto-answer on
Pocket	Ring and Vibrate alert mode, max ring level, no auto-answer
Silent	No ring level, message tone, key sound tone or auto-answer



12.2 Ring Tone

1. Go to Ring Tone → Press **OK**
2. Select from list.
3. Highlighted selection is played.
4. Press **OK** to save changes.
5. Press **BACK** to cancel and return to menu.

Ring Tone Menu Option

Selection	Description
Predef Melodies	Preset melodies.
My Melodies	User-customized melodies.
Predef Sound	Preset sound.
My Sound	User-customized sound.

12.3 Ringer Volume

1. Go to Ringer Volume → Press **OK**
2. Use either Side or Arrow keys to select volume level.
3. Press **OK** to save changes.
4. Press **BACK** to cancel and return to menu.

12.4 Key Tone

1. Go to Key Tone → Press **OK**
2. Select from list.
3. Press **OK** to select options.
4. Press **BACK** to cancel and return to menu.

Key Tone Menu Options

Option	Description
Key Sound Level	Select from low; medium; high.
Key Sound Type	Select from None; Tone; Click



12.5 Alert Mode

1. Go to Alert Mode → Press **OK** to list Alert Mode options.
2. Press **OK** to select options.
3. Press **BACK** to cancel and return to menu.

12.6 Startup/ Bye Tone

1. Go to Startup / Bye Tone → Press **OK** to list options.
2. Press **OK** to select option.
3. Press **BACK** to cancel and return to menu.

Startup/ Bye Tone Menu Options

Option	Description
Melody	Select melody to activate Greeting Tone.
Sound	Select sound to activate Greeting Tone.
None	Deactivates Greeting Tone

12.7 Beep Timer

Generates beep sound during call to indicate call duration.

1. Go to Beep Timer → Press **OK** to list options.
2. Enter duration value.
3. Press **OK** to save changes or **CLR** to delete entry.
4. Press **BACK** to return to menu.

Beep Timer Menu Options

Option	Description
None	Deactivate beep timer.
One beep	Beeps once after 1 – 255 seconds.
Period beep	Beeps once every minute after a one-beep delay.



12.8 DTMF

1. Go to DTMF → Press **OK**
2. Select option On/ Off.
3. Press **OK** to save changes.
4. Press **BACK** to cancel and return to menu.

12.9 Auto Redial

Option to redial engaged number automatically.

1. Go to Auto Redial → Press **OK**
2. Select option On/ Off.
3. Press **OK** to save changes
4. Press **BACK** to cancel and return to menu.

13. Calendar

The Calendar Menu manages up to 100 events of various categories, e.g. Rendezvous, Call, Restaurant, Advertising, Birthday and Miscellaneous, where:

- Enter Category, Description, Date, Time, Alarm and Recurrence for any event in the Calendar.
- Alarm for any event can be set to sound, immediately, 5 minutes before, 15 minutes before, 30 minutes before, or 1 day before.
- Alarm for 2 events can be set for the same time,
- When a recurrent event is modified or deleted, all its occurrences are modified or deleted accordingly.

View Calendar

1. Go to Calendar Menu → Press **OK**.
2. Days of the current month displayed.
3. Use Arrow keys to move to required date.
4. Press **Menu** to list options.
5. Press **OK** to select option.
6. Press **BACK** to cancel and return to menu.

2005 Dec							
CN	T2	T3	T4	T5	T6	T7	
26	27	28	29	30	31	1	
2	3	4	5	6	7	8	
9	10	11	12	13	14	15	
16	17	18	19	20	21	22	
23	24	25	26	27	28	29	
30	31	1	2	3	4	5	
Menu				Back			



Date Indicators:

Indicator	Description
Bold	At least one event entered on date.
+	Recurring event on date.
	Today's date.
	Selected date.
	Sundays

Calendar Menu Options

Option	Description
View day	Lists events for the day.
Go to day	Go to day of date entered.
Add new event	Add event.
See next event	View next event.
Delete past events	Delete past event (except for recurrent events)
Delete all events	Delete all events.
Display next month	Display next month calendar.
Display previous month	Display previous month calendar.
Event Ring Type	Ring type by different occasions.
Check capacity	Conduct checking on memory available.

View events

View events already entered into the calendar:

1. Go to View day. If events are entered on that date, start time; category and description for each event (except for Birthdays) are displayed. Birthday event has no start time and is displayed at the beginning of the list. A Call event allows call to be made to the phone number recorded by pressing the Send key.
2. Select event from list.
3. Press **Menu** to list event options.
4. Press **OK** to select options.
5. Press **BACK** to cancel and return to menu.



Day event menu options

Option	Description
View	View details of selected event.
Edit	Edit details of selected event.
Add	Add a new event.
Delete selected event	Delete selected event.
Delete past events	Delete past events (except for recurrent events)
Delete all events	Delete all events on selected day (except for recurrent events)
Display next day	Display event for next day.
Display previous day	Display event for previous day.
Check capacity	Check capacity.

Event view explained

Line 1 shows date, time and week number
 Line 2 shows date in lunar calendar (except when the phone is in English mode).
 Line 3-6 shows events by category and description.
 Line 7 shows alarm and recurrence.

Edit Event

1. Go to view day → edit.
2. Select event to be edited.
3. Select event fields to be edited.
4. Press **Save** to save changes.
5. Press **BACK** to cancel and return to menu.

27/05/02 10:00AM W22

 Meeting with coordination & planning; smartphone specs

 -5 min.  Weekly

Menu **Back**

Edit event

 
 Meeting with coordination & planning
 27/05/02
 10:00AM
 5 min. before
 weekly

Menu **Back**

14. Multimedia

Press Down Arrow → Go to Multimedia → Press **OK**



14.1 Camera

Setup camera functions.

1. Go to Camera → Press **OK** to list options.
2. Press **OK** to select camera option.
3. Press **Menu** to display scanning mode options.
4. Press **OK** to select scanning mode options.
5. Press **BACK** to cancel and return to menu.

Camera Menu Option

Option	Description
Multi shot	Take multiple photos and save in phone.
Single shot	Take photo with option to save photo or cancel.

Scanning Mode Menu Options

Mode	Description
Shooting mode	Select wallpaper, zoom, Thumbnail, or Landscape shot.
Image quality	Select compression quality.
Zoom mode	Select from 4 zoom levels.
Rotate	Rotate image either 00 or 1800.
Night mode	Enables shots under dim conditions.
Flash mode	Use in-built flash. Further option for flash to be On Always, During Shooting, OFF.



14.2 Photo Gallery

View photo gallery, complete with date and size information.

1. Go to Photo Gallery.
2. Scroll to select picture.
3. Press **Menu** to display shortcut to Media Center options.
4. Select option from list.
5. Press **OK** to confirm selection.
6. Press **Back** to cancel and return to menu.

14.3 Voice Recorder

1. Go to Voice Recorder → Press **OK** to list options.
2. Select option from list.
3. Press **OK** to confirm selection.
4. Press **BACK** to cancel and return to menu.

Voice Recorder Menu Options

Option	Description
Record	Press OK to begin recording. Speak to phone when pop up window appears. Press Stop to end voice recording. Voice memo is stored in My Voice directory.
Voice memo center	Select option to Play, Send, Rename or Delete a voice memo.
Settings	Select quality of voice recording: Low, Normal, High.



14.4 Defragmenter

Reorganizes phone internal memory to optimize access delays.

Option analyzes percentage of memory to be rearranged.

Press **OK** to start defragmentation or **BACK** to cancel and return to menu.

14.5 Media Center

Categorizes to all stored objects into Pictures; Melody; Animation; Sound; and Wallpaper.

1. Go to Media Center → Press **OK** to list categories.
2. Select category from list.
3. Press **OK** to display list of objects and its properties.
4. Select option for each object.



Media Center Object Menu Options

Option	Description
Set as	Assign image to possible event.
Send	Send object via EMS or MMS.
Rename	Rename an object.
Delete	Delete an object.
Delete all	Delete all objects within current media category.
View	View memory status.

N.B Delete and Delete all options are not available for pre-defined objects.



Suggested use for Media Center objects

Object	Suggestion
Picture	Greeting picture Bye picture Picture/ Phonebook entry association Screen saver Background
Sound	Greeting sound Bye sound Call notification Sound/ Phonebook entry association as alerting memory Alarm clock sound Organizer alert sound SMS alert sound
Melodies	Power on/off melody Call notification Melody/ Phonebook entry association Alarm clock sound Organizer alert sound SMS alert sound
Animation	Greeting picture Bye picture
Wallpaper	Pre-defined images displayed on idle screen

15. Games

Build-in games:

Labyrinthus
Stacker
Archery
Polygon Pursuit

1. Use Arrow keys to select game.
2. Press **OK** to confirm highlighted selection
3. Press **←** to cancel and return to menu.



 
 


16. WAP Services

16.1 Quick Reference on WAP Settings


Set up Data Account for WAP GPRS account

1. Go to WAP Services
→ Connect Settings
→ GPRS Data
Account →
Press **OK**.

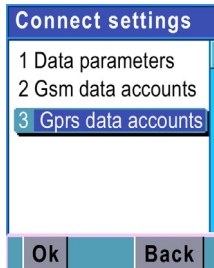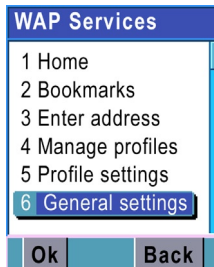




 2. Press **Menu** →
Create New →
Press **OK**.

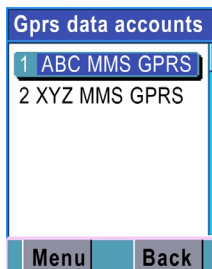

 3. Enter Data Account Name (e.g Smart
GPRS) → Press **OK**.

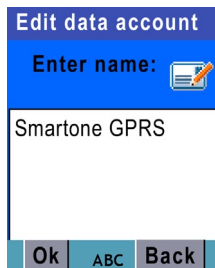


4. Select new Data Account using UP/
DOWN arrow key.







 5. Press **Menu** →
Setup → Access
Point name →
Press **OK**.

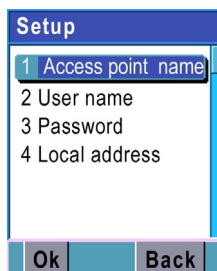

  6. Enter Access Point
Name, User Name,
Password, Local
Address, Dynamic
Address →
Press **OK**.

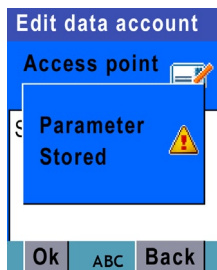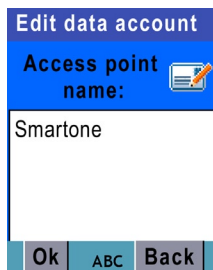


7. Press END button
to revert to idle
screen.

Set up WAP Profile

 1. Go to WAP Services → Manage Profiles
→ Press **OK**.





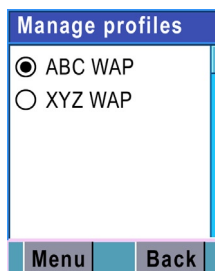

2. Press **Menu** → Add Profile → Press **OK**.




  3. Enter the Profile Name (e.g Smartone MMS) → Manage Profiles



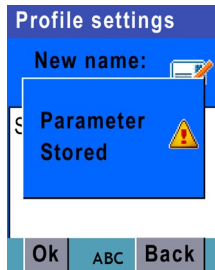
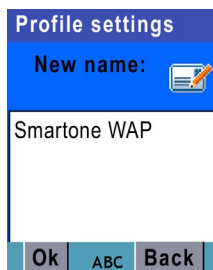




 4. Select new MMS profile using UP/ DOWN arrow key.

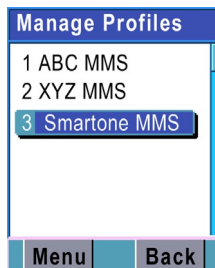

    5. Press **Menu** →
Select profile →
Profile Settings→
Homepage →URL
→ Press **OK**.

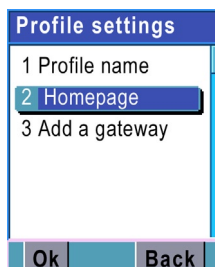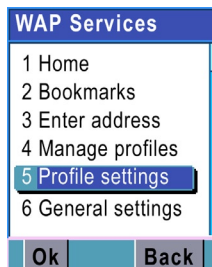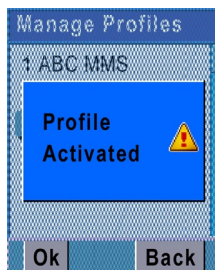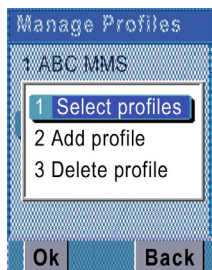



6. Enter Username, Password (If any)
→ Press **OK**.

Homepage

1 Name
2 URL
3 User name
4 Password

Ok Back

Edit homepage

Homepage:

http://wap.smartone.com.hk

Ok ABC Back

7. Press **BACK** → Add a Gateway →
Press **OK**.

Profile settings

1 Profile name
2 Homepage
3 Add a gateway

Ok Back

8. Enter Gateway Name (e.g PxSmartone) →
Select Gateway Options →
Press **OK**.

Edit gateway

New name:

PxSmartone

Ok ABC Back

Edit gateway

 
 
 
New name:

New gateway is activated

Ok ABC Back



9. Select new gateway
→ Press **OK**.

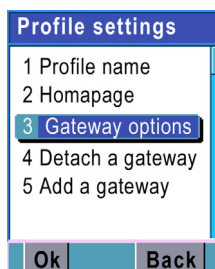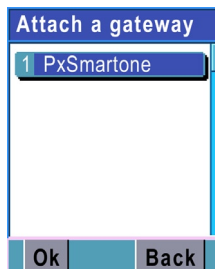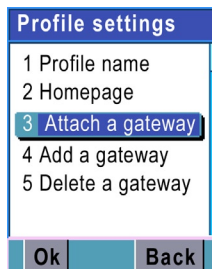

10. Select Connect mode → CO → Gateway
Address → Press **OK**.

