


3138 UHF RFID READER LABELS


THE 3138 READER LABEL SET

The 3138 Reader Label Set consists of an ID label and Regulatory Information label. The ID Label contains the Reader's serial number, TSL logo and TSL website URL. The Regulatory Information label displays further information including part number, date of manufacture, country of manufacture and the relevant regulatory information and symbols for that part number. A preview of the 3138 Label Set is shown below:

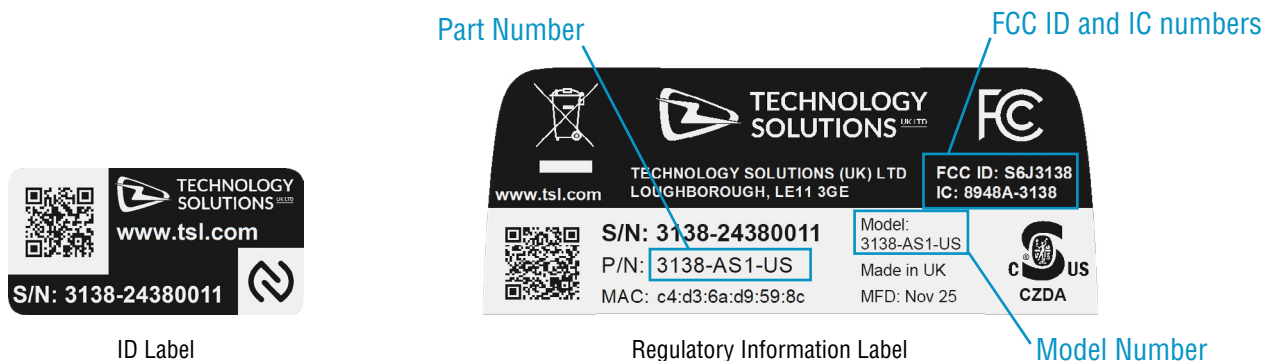

THE POWER HANDLE (ACCESSORY) LABEL

The Power Handle Label contains the handle's serial number, TSL logo and TSL website URL, plus relevant regulatory information and symbols including part number, date of manufacture, country of manufacture. A preview of the Power Handle Label is shown below:

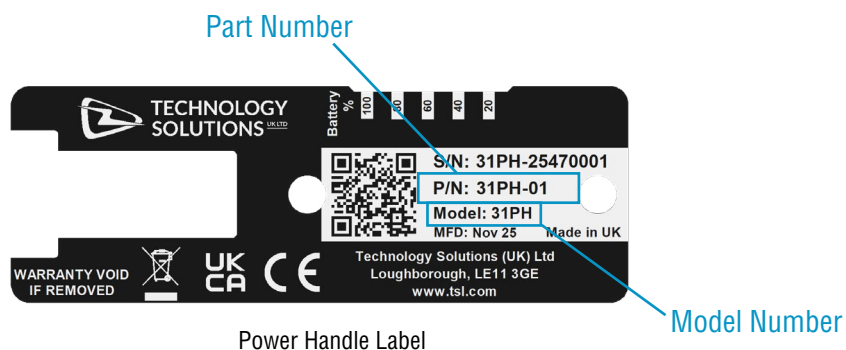

3138 UHF RFID READER LABELS

LABEL LOCATIONS

The ID Label is located on the top surface of the 3138 Reader, whilst the Regulatory Information Label is located on the rear of the antenna housing.




The Power Handle Label can be accessed by removing the Power Handle accessory from the 3138 Reader.




Power Handle Installation or Removal

- 1** Push the Handle Release latch upwards

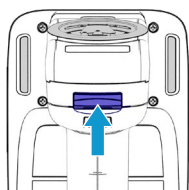


- 2** Continue to push the Handle Release latch upwards, and slide the Power Handle off the Main Body

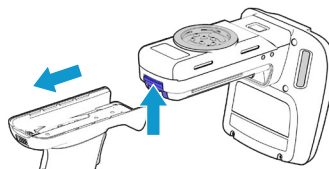


- 3** To replace or fit a new Power Handle:

- Slide the Power Handle onto the main unit, making sure that the guide rails are properly aligned
- The release latch will audibly 'click' to indicate that the Power Handle is fixed in place


REGULATORY LABELS - FCC VARIANTS

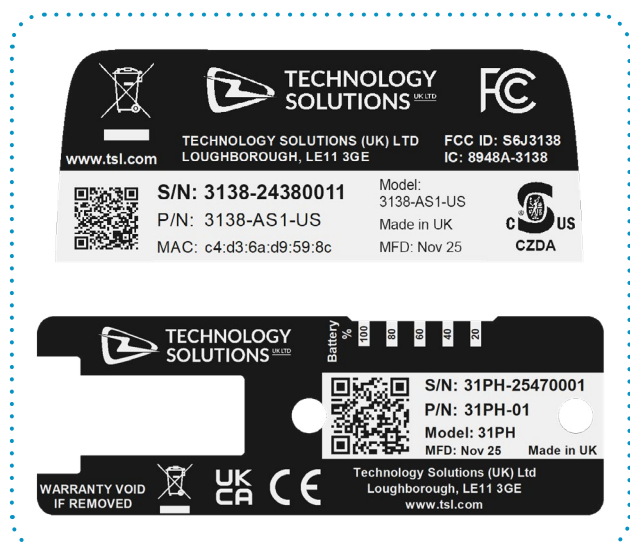

3138-AS1-US label set

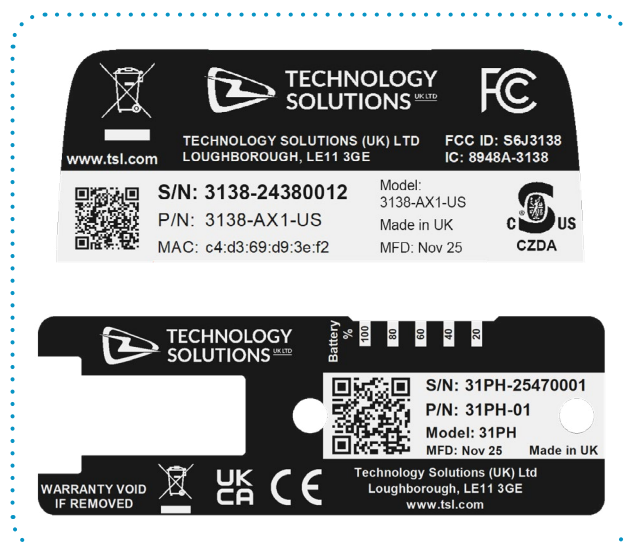

3138-AX1-US label set

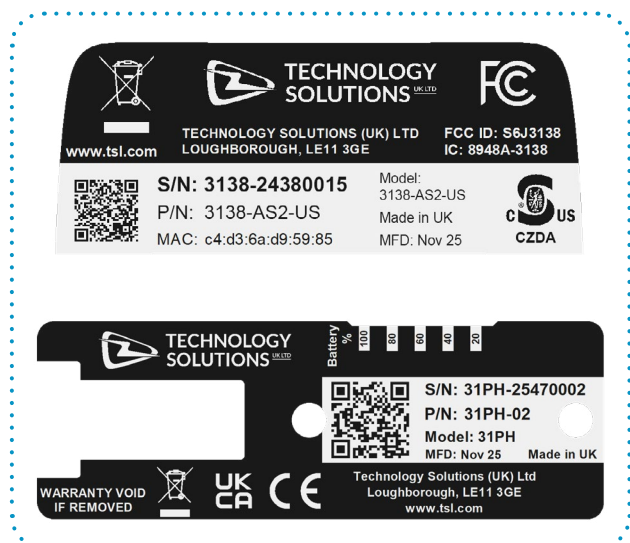

3138-AS2-US label set



3138-AX2-US label set