 


SPEAKERS

- Power On/Off:Yes
- Volume Control:Yes
- Fine Tuning:Automatic
- Speaker Unit:5" Woofer, 1" Tweeter
- Frequency Level:50Hz-20kHz
- Dimensions:9.2" x 8.4" x 16.8"
- Power Supply:8 D batteries
.....(not included)

 
Brookstone®
Merrimack, New Hampshire 03054
Customer Service 800-846-3000
www.brookstone.com

497362

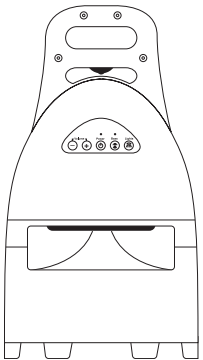

wireless outdoor speaker
with auto-tuning

Brookstone®

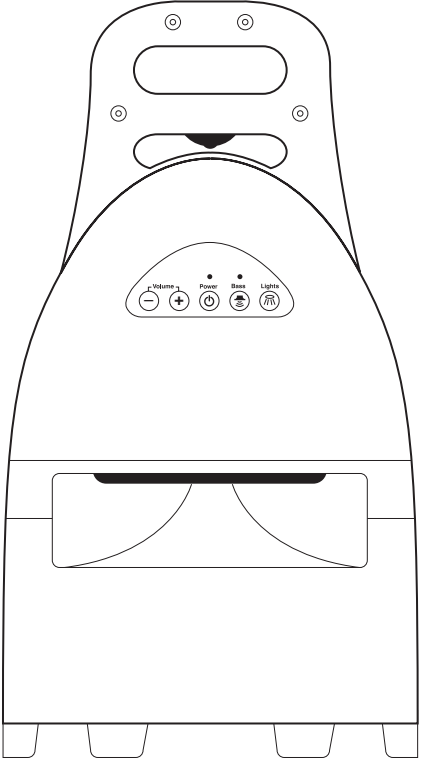

Using the Speaker Lights

Use the speaker lights for additional ambience at night.
Press LIGHTS  once to turn the lights on and again to turn the lights off.

CARE AND MAINTENANCE

Cleaning the Speaker and Transmitter

Wipe with a damp cloth. Do not use abrasive chemicals.

SPECIFICATIONS

TRANSMITTER

- Range:150 feet
- Fine Tuning:Automatic
- Number of Channels:3
- Dimensions:1.6" x 5.48" x 4.84"
- Power Supply:AC/DC Adapters
.....(included)

Using the Speakers

1. If you are not using battery power, insert one end of the SPEAKER POWER ADAPTER into DC 9V on the speaker, and the other end into an electrical outlet.
2. Turn on the power to your audio source.
Note: If the transmitter is connected to your audio source's variable-level output jacks, you may adjust the volume on your audio source. If the transmitter is connected to your audio source's fixed-level output jacks, no volume adjustment is needed.
3. Slide OFF, CH1, CH2, CH3 on the transmitter to channel 1, 2 or 3. The TRANSMITTER POWER INDICATOR illuminates.
4. Press POWER  on the speaker and the SPEAKER POWER INDICATOR illuminates.
5. Turn CH1, CH2, CH3 on the speaker to the same channel selected on the transmitter.
6. Press VOLUME + or - to adjust the speaker volume to your desired listening level and BASS  to turn on the bass. The BASS INDICATOR illuminates.

Note:

- If signal interference occurs, adjust the channel on both the speaker and the transmitter.
- When not in use, press  on the speaker to turn the power off and remove the batteries to prevent leakage in the compartment. Slide CHANNEL 1, 2, 3 on the transmitter to the OFF position.

WIRELESS OUTDOOR SPEAKER WITH AUTO-TUNING

Brookstone makes life better.

Our **Wireless Outdoor Speaker with Auto-Tuning** lets you enjoy rich stereo sound indoors or out. With three separate channels, the speaker avoids interference when used near cordless phones, headsets or other devices. And with a 150-foot broadcast range, you're able to listen to your music clearly—through walls, floors, and ceilings.

The Wireless Outdoor Speaker with Auto-Tuning has been thoroughly tested to be certain it meets our own **exacting quality control standards**. Please take a few moments to review the following **important information** before using this product.

Enjoy the freedom of wireless sound!

BATTERY PRECAUTIONS

- Dispose of old batteries properly. Do not dispose of old batteries in a fire.
- Do not leave batteries where a child or pet could play with or swallow them. If batteries are swallowed, contact a physician immediately.
- Batteries may explode if mistreated. Do not attempt to recharge or disassemble batteries.

WARNING

1. Do not try to disassemble the speaker.
2. Do not place speaker near heat sources such as radiators, heating vents or direct sunlight.
3. Do not place speaker where there is moisture, rain, vibration, shock or excessive dust.
4. Keep the speaker dry.
5. Do not use or store speaker in extreme temperatures.

NOTE: The manufacturer is not responsible for any audio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

Headphone Jack

1. Insert one end of the TRANSMITTER POWER ADAPTER into DC 9V on the transmitter and the other end into an electrical outlet.
2. Insert one end of the DUAL RCA CABLE into the appropriately colored R/L LINE IN jacks on the transmitter and the other end into the appropriately colored ends of the Y ADAPTER 3.5MM CABLE.
3. Insert the 1/8" single end of the Y ADAPTER 3.5MM CABLE into your audio source's headphone jack.

Note: If your audio source requires a 1/4" headphone plug, you will need a 1/4" adapter (not included).

SPEAKER OPERATION

Installing the Speaker Batteries

You may insert batteries into the speaker as backup or if you prefer not to use the SPEAKER POWER ADAPTER.

1. Turn the SCREWS located on the bottom of the speaker counterclockwise and remove the BATTERY COMPARTMENT COVER.
2. Insert eight D batteries (not included) according to polarity indicators inside the compartment.
3. Replace the BATTERY COMPARTMENT COVER and tighten the SCREWS.

TRANSMITTER OPERATION

Connecting the Transmitter

The transmitter may be connected two ways depending on your audio source. If your audio source has left and right RCA output jacks, you will only use the DUAL RCA CABLE. If your audio source does not have left and right RCA output jacks, but rather a stereo headphone jack, you will use both the Y ADAPTER 3.5MM CABLE and the DUAL RCA CABLE.

Left and Right RCA Output Jacks

1. Insert one end of the TRANSMITTER POWER ADAPTER into DC 9V on the transmitter, and the other end into an electrical outlet.
2. Insert one end of the DUAL RCA CABLE into the appropriately colored R/L LINE IN jacks on the transmitter, and the other end into your audio source's left and right audio output jacks.

Note:

- If there are no fixed-level audio outputs on your audio source, connect the DUAL RCA CABLE to variable-level (HI-FI) audio outputs or refer to *Headphone Jack* for Y ADAPTER 3.5MM CABLE connection instructions.
- Do not connect the DUAL RCA CABLE to speaker terminals on your TV or audio source. This may damage the transmitter, your TV or audio source.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a class B digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

LOCATION OF CONTROLS AND INDICATORS


TRANSMITTER

1. TRANSMITTER POWER INDICATOR
2. OFF, CH1, CH2, CH3
3. DC 9V
4. R/L LINE IN

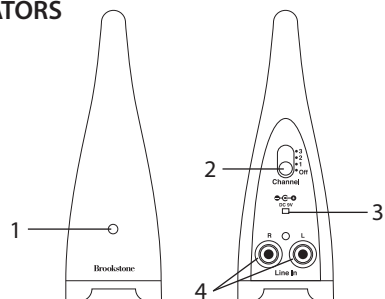

SPEAKER

 5. VOLUME $-$, $+$
6. POWER Power
7. SPEAKER POWER INDICATOR
8. BASS Bass
9. BASS INDICATOR
10. LIGHTS Lights
11. CH1, CH2, CH3
12. SCREWS
13. BATTERY COMPARTMENT COVER
14. DC 9V

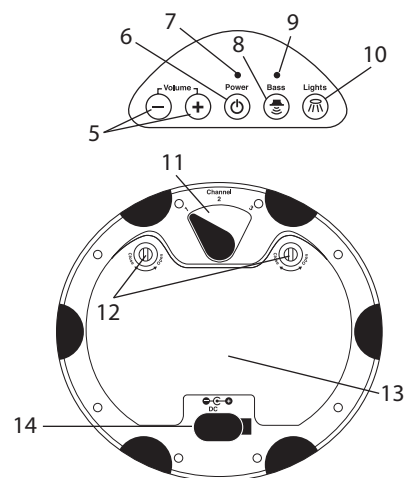

POWER ADAPTERS/CABLES

15. TRANSMITTER POWER ADAPTER
16. SPEAKER POWER ADAPTER
17. DUAL RCA CABLE
18. Y ADAPTER 3.5MM CABLE

