 


NAUTITALK ACTIVE Manual

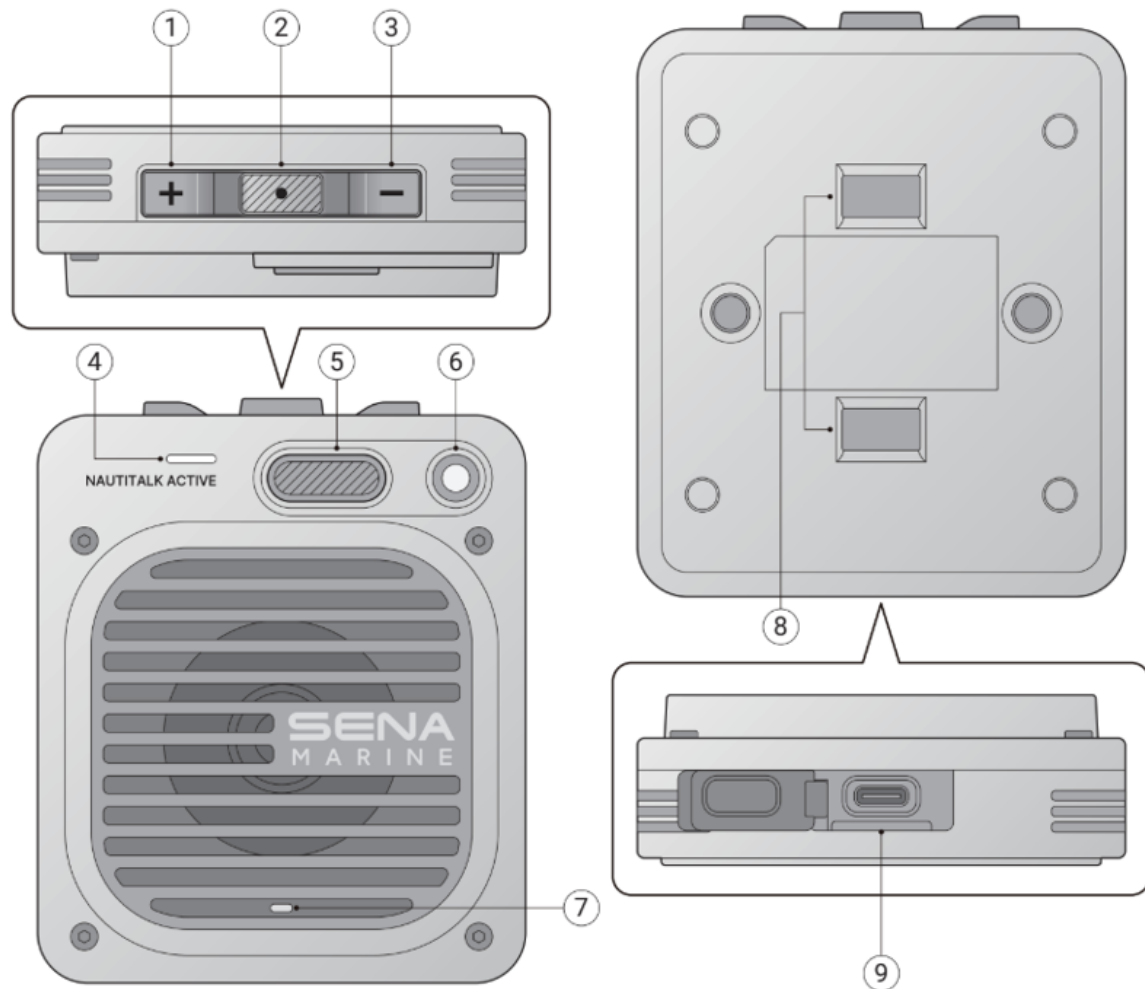

① (+) button

③ (-) button

⑤ Flashlight button

⑦ Charging LED

⑨ USB-C charging port

② Center button

④ Status LED

 
⑥ Flashlight

⑧ Mounting slot


Overview

The NAUTITALK ACTIVE is a universal Bluetooth Intercom system NAUTITALK ACTIVE's design makes it easy to mount to arm and handle with a provided band. Just Clip the NAUTITALK ACTIVE to the straps, hold the buttons to turn on the device.

■ Armband Holder

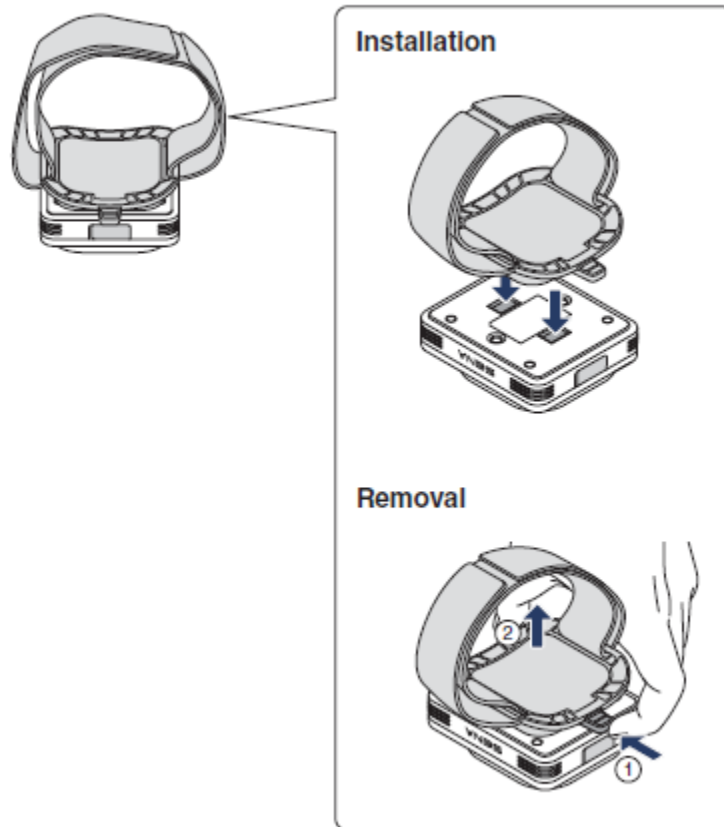

■ Magnetic Holder

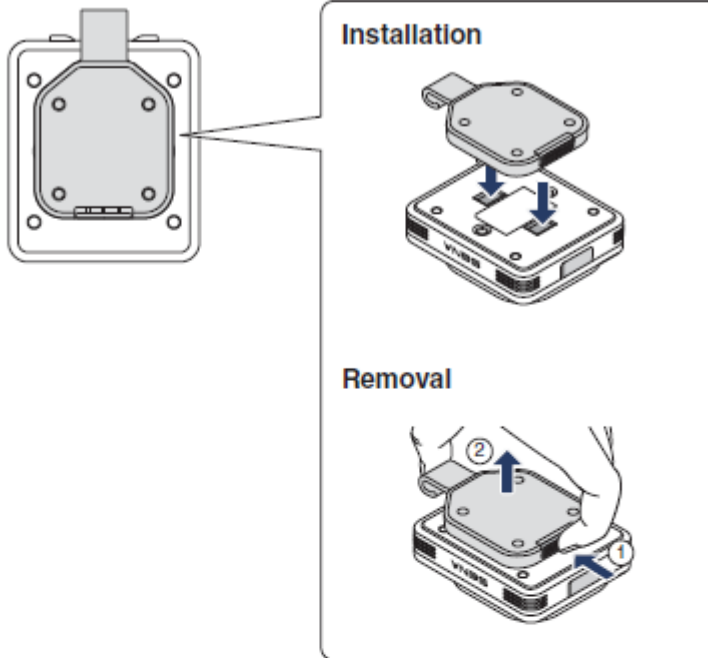 

■ Carabiner



■ Necklace



Charging

Red LED: Charging

Blue LED: Fully charged

Power On/Off

On : Press and hold the Center button for 2 seconds.

Off : Press and hold the Center button for 2 seconds.

Volume Adjustment

Increase the volume : Tap (+) button

Decrease the volume : Tap (-) button

Flash lights on/off

Tap the Flash button.

Headset Pairing

1. Press and hold the (-) button for 5 seconds.
2. Put the Bluetooth headset in Pairing Mode. NAUTITALK ACTIVE will automatically pair with a Bluetooth headset.

Headset Reconnect / Disconnect

Press and hold the (-) button for 2 seconds.

Mesh Intercom

When you turn on the power, the mesh intercom turns on automatically.

Mute/Unmute the Mic : Tap the Center Intercom button.

Channel Setting :

1. Enter the Channel Setting : Double tap the Center Intercom button.
2. Navigate: Tap the (+) button or (-) button
3. Save the channel : Tap the Center Intercom button.

Troubleshooting

Factory Reset

If you want to restore the NAUTITALK ACTIVE to factory default settings, use the Factory Reset.

Press and hold the (-) button for 10 seconds.

Certification and Safety Approvals FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennae

- Increase the separation between the equipment and the receiver

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -

Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Statement

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment.

End users must follow the specific operating instructions for satisfying RF exposure compliance.

When equipped, the distance between antenna and one's head surface is 15.05mm.

FCC Caution

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

Industry Canada(IC) Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC RF Exposure Statement

Cet équipement est conforme aux limites d'exposition aux radiations de la FCC/IC définies pour un environnement non contrôlé. Les utilisateurs finaux doivent suivre les instructions d'utilisation spécifiques pour satisfaire à la conformité d'exposition RF.

Lorsque équipé, la distance entre l'antenne et la surface de la tête est de 15.05mm.