

S58



Guides > S58




Overview



S58 lorem ipsum dolor sit amet.

- **Weatherproof design.** S58 meets IP water and dust resistance levels. Ideal for barbecues, pool parties, and other outdoor events.
- **Battery lasts up to X hours.** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed do eiusmod tempor incididunt ut labore et dolore magna aliqua.
- **Stream music over WiFi and Bluetooth®.** Or connect a mobile device using a USB-C line-in adapter (sold separately).
- **Sonos S2 compatible.** Save content in the [Sonos app](#) and enable features like Sonos Voice Control and Trueplay™.
- See [Setup](#) when you're ready to add S58 to your Sonos system.

Controls and lights

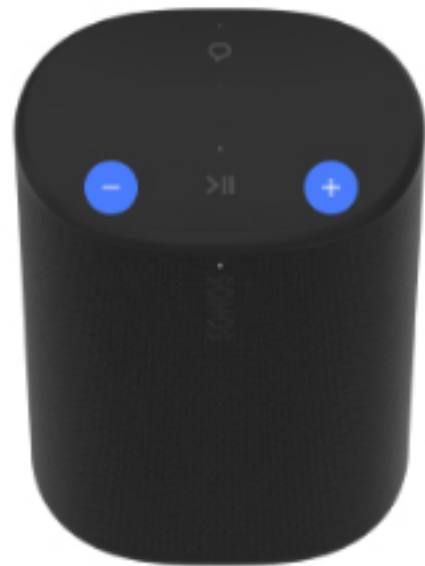

Volume control

- Volume up (press +)
- Volume down (press -)

Note: When music is playing, press and hold + or - to quickly change the volume.



Play/Pause

- Press once to play or pause audio.
- Press and hold to group with the audio that's playing in another room (or to ungroup).



Next

- Double press play/pause to skip to the next song.


Note: You can't skip forward or go back when listening to a radio station.



Previous

- Triple press play/pause < to go to the previous song.

Note: You can't skip forward or go back when listening to a radio station.

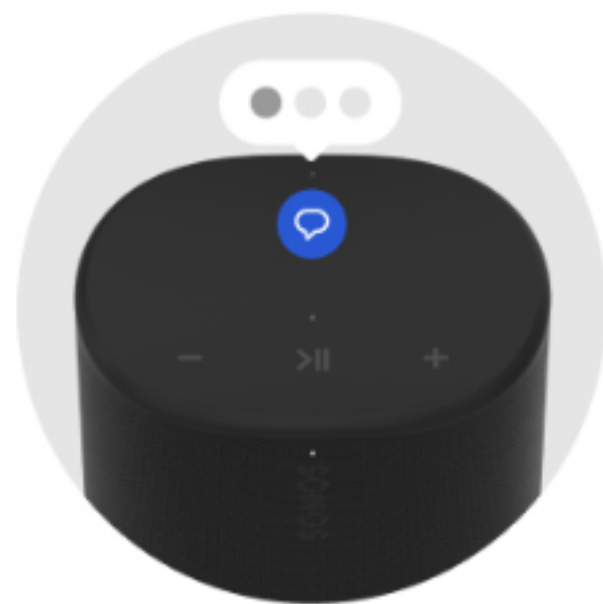

Voice services on/off

Press the voice services button to turn voice control on or off. You can set up a voice service in the Sonos app.

- When the light is on, voice control is available.
- When the indicator light is off, voice control is off.

Note: Make sure the universal microphone switch is on.



Status light

Displays the product's connection to WiFi or Bluetooth, indicates when the volume is muted, and signals errors. [Learn more](#)



Battery light

Indicates the battery status:

- Blinking orange indicates low battery.
- Solid orange indicates S58 has started charging. The light will stay on for a 10 seconds then turn off, unless the battery is very low.

Note: Check battery level in the Sonos app.

Connector panel



1	Strap	Allows for easy lifting and carrying so you can take S58 wherever you go.
2	Power button	Press to power on. The status light turns on to let you know S58 is active. Press to put to sleep. The status light turns off and you'll hear a short tone. Press and hold to power off. The status light turns off and you'll hear a longer tone. Note: S58 goes to sleep automatically after 30 minutes when it's off the charging base.

3	Bluetooth button	Press to connect to a mobile device via Bluetooth. S58 will connect to your most recently paired device. Press again to disconnect the current device. Press and hold to pair a new device.
4	Universal microphone switch	Turn all microphones on or off. You can set up a voice service in the Sonos app. • When the switch is off (down), the microphones are disabled so microphone-related features like auto Trueplay and voice control are unavailable. • When the switch is on (up), microphone-related features like auto Trueplay are available. Voice control is available if the voice services indicator light on top of the product is also on.
5	USB-C port	• Power: Use a compliant USB-PD power supply (≥ 45 W recommended) for charging S58 on the go. • Ethernet: Use the Sonos Combo Adapter and an Ethernet cable to connect S58 directly to your router if you want to hardwire your speaker (helpful if your Wi-Fi is unstable). • Line-in: Use either the Sonos Line-In Adapter or Combo Adapter to connect your turntable, CD player, or other device.
6	Charging dock	Set S58 on the charging base and it stays active for at-home use while recharging. Note: S58 is designed to work with 18W (9V/2A) adapters, but 45W (15V/3A) is recommended.

Charging

FEATURE	DESCRIPTION
Charging base	Set S58 on its charging base for easy recharging. The battery light will turn on for 10 seconds to let you know S58 is seated correctly (make sure the charging contacts are touching). The charging base is for indoor use only—be sure to keep it dry. Note: Check battery level in the Sonos app.

Battery Saver

You can enable **Battery Saver** in the Sonos app to best preserve battery life when S58 is inactive. When enabled, your S58 will power off automatically after 10 minutes in sleep mode.

Go to  > **System**, and select S58 to get started.

Note: S58 won't appear in the Sonos app until it's powered back on.

Bluetooth pairing

1. Turn Bluetooth on in your device settings.
2. Press and hold the Bluetooth button on the back of the speaker until you hear a tone, then release. The status light blinks blue when the speaker is ready to pair.
3. Choose **S58** from the list of available devices in your Bluetooth settings. Your mobile device will automatically connect next time you press the Bluetooth button.

Select a location

You can put your S58 just about anywhere. For maximum performance, here's a few guidelines:

- For best performance, leave at least 1" (2.5 cm) space around the back of S58 when placing it next to a wall or shelf.
- It's ultra durable. With a tough outer shell and IP67 rating, S58 is built to withstand falls, bumps, moisture, dust, UV rays, and extreme temperatures (charging base is for indoor use only).
- Enable auto Trueplay™ in the Sonos app—S58 can tune itself for amazing sound no matter where you are and what you're listening to.
- Don't use or store your Sonos speaker upside down.

Microphone on/off

The microphones in S58 are used for voice control and other features found in the **Sonos app**, like auto Trueplay™.

The universal microphone switch on the back allows you to quickly turn on or off all microphones in the speaker and adds an extra level of privacy when you want it (it's turned on out of the box).

The voice services button on top toggles voice control on and off without affecting the microphones needed for auto Trueplay and other microphone-related features.

When the voice services light is on:

- If you set up voice control, it's ready to listen.
- The universal microphone switch is on.

When the voice services light is off:

- If you set up voice control, it's not available.
- The universal microphone switch could be on or off.

Voice services

Use your voice to control your Sonos system with any voice-enabled Sonos product—play and control content, turn the volume up or down, and more.

- **Sonos Voice Control:** control your whole Sonos system with hands-free ease and unmatched privacy. Sonos Voice Control comes ready to use—it only takes a few seconds to add when you set up your speakers. [More information](#)
- **Amazon Alexa:** you'll need the Sonos app and the Alexa app with the Sonos skill enabled. You'll make some changes in both apps during setup. [Learn more](#)
- **Siri:** you'll need the Apple Home app. Add your AirPlay 2-compatible Sonos speakers to the Apple Home app and then use an iPhone, iPad, or Apple TV to ask Siri to play music (currently limited to Apple Music). [Learn more](#)

Note: Voice control isn't supported in every country yet—this feature will be available as soon as Sonos and a voice service launch together in your region.

Trueplay™

Every room is different. Trueplay tuning measures how sound reflects off walls, furnishings, and other surfaces in a room, then fine tunes your Sonos speaker to make sure it sounds great no matter where you've placed it.

Trueplay works on iOS mobile devices running iOS 8 or later. During tuning, you'll move around the room holding your mobile device.

1. Select  > **System**, and pick the room you want to tune.
2. Choose **Trueplay Tuning** to get started.

Auto Trueplay

Portable Sonos products like Sonos Roam and Move can tune themselves automatically. Auto Trueplay uses your speaker's microphone to detect the environment and make periodic tuning adjustments so you get great sound wherever your speaker is and whatever you're listening to.

Go to  > **System**, and select your portable speaker to turn on auto Trueplay.

Set up stereo pair

Pair two Sonos speakers in the same room for an even wider, stereo experience. One speaker serves as the left channel and one serves as the right channel.

Note: The Sonos speakers in a stereo pair must be the same type.

1. Place the speakers 8 to 10 feet apart. Your favorite listening position should be 8 to 12 feet from the paired speakers—less distance increases bass, more distance improves stereo imaging.
2. Go to  > **System**.
3. Select one of the speakers you want to use in the stereo pair, then choose **Set Up Stereo Pair** to get started.

[Learn more](#)

Product settings

You can customize Sonos products for your surroundings. Go to ⚙ > **System** and select a product.

Room Name	If you move your speaker to a new room, you can change its name in Settings .
Turn off WiFi (not available for Sonos Era 100, Era 300, or portable products)	You can turn off your speaker’s WiFi when it’s connected to your network with an Ethernet cable. This reduces power consumption and can improve connectivity for wired speakers. For products like Amp and Port, turning off WiFi can reduce the internal temperature when they’re placed in a rack or stacked. Learn more Note: WiFi is turned off for Era 100 and Era 300 when you connect a Sonos Combo Adapter using the Ethernet cable.
EQ	Sonos products ship with preset equalization settings. You can change the sound settings (bass, treble, or loudness) to suit your personal preferences. Learn more
Trueplay	Trueplay adapts the sound for your surroundings and content. Portable products can tune themselves automatically. Learn more
Volume Limit	You can set a maximum volume for each room. Learn more
Status Light	Displays the speaker’s connection to WiFi, indicates when the volume is muted, and signals errors. Learn more Note: If the light is distracting, you can turn it off in Settings.
Touch Controls	You can disable the touch control on your speaker. You may want to do this to prevent a child or curious pet from accidentally adjusting playback or volume. Learn more
Battery Saver (portable products only)	To save battery life, you can set your portable speaker to power off automatically instead of going to sleep. It won't appear in the Sonos app until it’s powered back on.
Line-In (Sonos products with line-in capability)	When a projector, turntable, stereo, or other audio device is connected to a Sonos product, you can adjust these line-in settings: • Source name: Choose a name for the line-in device. • Source level: Adjust the line-in source level if you find the default volume setting is too quiet or distorted. • Audio Delay: Add a delay between the line-in source and Sonos to reduce the chance of audio issues occurring when you're playing line-in audio on grouped speakers. • Autoplay: Choose a room if you want line-in audio to start playing automatically when Sonos detects a signal on the line-in port.

Specifications

FEATURE	DESCRIPTION
Audio	
Amplifiers	Three Class-D digital amplifiers.
Tweeters	Two angled tweeters create a crisp and accurate high frequency response and stereo separation.
Woofers	One midwoofer ensures the faithful playback of mid-range vocal frequencies and deep bass.
Microphones	- Far-field microphone array. - All microphones, including voice control, can be turned off using the universal microphone switch on the back of the speaker.
Voice	- Integrated voice control. - When the voice services light is off, voice assistants are not listening but other microphone-related features, like auto Trueplay, are still active. Enable in the Sonos app. Note: The universal microphone switch must be turned on.
Auto Trueplay	This software continually optimizes the speaker's sound for its environment and the audio content playing. Enable in the Sonos app. Note: The universal microphone switch must be turned on.
Adjustable EQ	Use the Sonos app to adjust: - Bass - Treble - Loudness

Power & Connectivity

Power supply

USB-C PD power with 18W (9V/2A) to 45W (15V/3A)

Output: 18-45W (9-15V)

Note: A power supply is not included with S58.

Battery (replaceable)

Capacity: 4800 mAh

Replacement: Visit our website for more information.

Disposal: Check with your local waste or recycling company to determine the proper disposal method in your area.

WiFi

Connects to WiFi network with any 802.11 a/b/g/n/ac/ax 2.4 GHz or 5 GHz broadcast-capable router.

Bluetooth

Bluetooth 5.3 supports audio streaming from any Bluetooth enabled device.

USB-C

Connect an audio source using an auxiliary cable and the Sonos Line-In Adapter.

Connect your router with an Ethernet cable and the Sonos Combo Adapter. (Accessories sold separately.)

Charging

The power delivered by the charger must be between min 18 Watts required by the radio equipment, and max 45 Watts in order to achieve the maximum charging speed.

CPU

Quad Core

4x A55 1.4 GHz

Memory

1 GB SDRAM

8 GB NV

Details & Dimensions

Dimensions (H x W x D)	7.59 x 4.43 x 3.05 in (193 x 113 x 77 mm)
Weight	2.86 lb (1.3 kg) (includes battery)
Operating temperature	32° to 104° F (0° to 40° C)
Storage temperature	-13° to 158° F (-25° to 70° C)
Humidity resistant	S58 meets IP67 water and dust resistance levels. Note: The charging base is for indoor use only.
Colors	Matte black Matte white Matte sand Matte blush
What's in the box?	S58, charging base with 6 ft (2 m) USB-C to C cable, and Quickstart guide.

Important safety information

Caution: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with a dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.
Sonos products with rubber rings on the bottom, such as Move, Move 2, One, and One SL, and S58 may leave a faint ring on some surfaces treated with polyurethane. This ring can be easily removed by wiping with a damp cloth.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
7. Do not expose batteries (battery pack or batteries installed) to excessive heat such as sunshine or fire.
8. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
12. Sonos S58 meets IP67.