

Size: 148.5(W) x 210(H)mm (A5)

CRAIG®

 
DUAL ALARM CLOCK RADIO with Bluetooth® Wireless Technology

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CR41483

IMPORTANT SAFETY INSTRUCTIONS

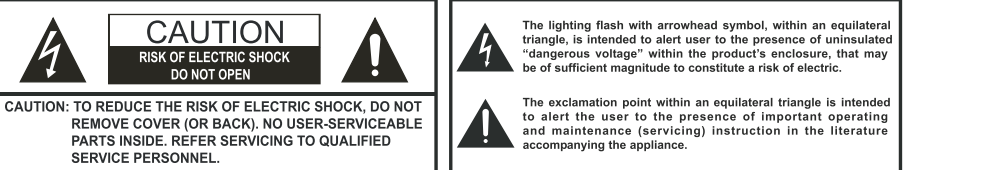

FCC Notice:
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Notice:
To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit; for example, this unit may not have the capability to be connected to an outdoor antenna.
1. Read these instructions
All the safety and operating instructions should be read before the product is operated.

2. Keep these instructions
The safety and operating instructions should be retained for future reference.

3. Heed all warning
All warnings on the product and in the operating instructions should be adhered to.

1

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel.
Sending is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

15. Power Source
The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
16. Power Lines
An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. Overloading
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
18. Object and Liquid Entry
Never push objects of any kind into the product through any openings in the cabinet and in the back or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19. Outdoor Antenna Grounding
If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electrical Code, ANSINFP470, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

20. Service
Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. Replacement Parts
When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer, or sold with the apparatus. Those that have the same characteristics as the original part. Unauthorized substitutions may result in fire or electric shock or other hazards.

 
22. Safety Check
Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operating condition.
23. Wall or Ceiling Mounting
The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
24. Damage Requiring Service
Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
a. When the power-supply cord or plug is damaged.
b. If liquid has been spilled or objects have fallen into the product.
c. If the product has been exposed to rain or water.
d. If the product does not operate normally by following the operating instructions.
e. If the product has been dropped or the cabinet has been damaged.
f. When the product exhibits a distinct change in performance this indicates a need for service.

25. Note to CATV System Installer
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.
- NOTE: Refer all servicing to qualified service personnel. Service is required when the unit has been damaged in any way as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

2

POWER SOURCE

Unwind the AC power cord and extend it to its full length. Insert the AC plug of the cord into any convenient AC 120V~, 60Hz 60Hz household outlet.

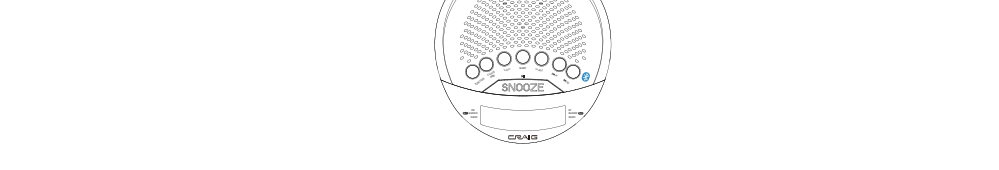


NOTES:
1. This unit is equipped with a polarized AC plug which has one blade wider than the other. This is a safety feature to reduce the likelihood of electric shock. This polarized AC plug will only fit in a polarized AC outlet. If you find that you cannot insert this plug to your wall outlet, you may have an obsolete non-polarized outlet. Please do not try to defeat this safety feature by using a non-polarized adaptor or by filing the wider blade to make it fit into your outlet. If this plug does not fit into your outlet, you should contact a qualified licensed electrician to replace your obsolete outlet.

2. If the AC power is disconnected or if there is a power failure, this electronic clock is designed to continue operating internally (without showing the time on the Clock Display) with two (2) x AAA size batteries (not included). Install the batteries as follows:
a. Open the battery door on the bottom by slide it off.
b. Insert two (2) "AAA" size batteries (not included) according to the polarity diagram inside the battery compartment. (Alkaline batteries are recommended for longer playing time.)
c. Replace the battery door.




BATTERY PRECAUTIONS:
Follow these precautions when using a battery in this device:
1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
6. Do not dispose of battery in fire. Battery may explodes or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.

3

 LOCATION OF CONTROLS

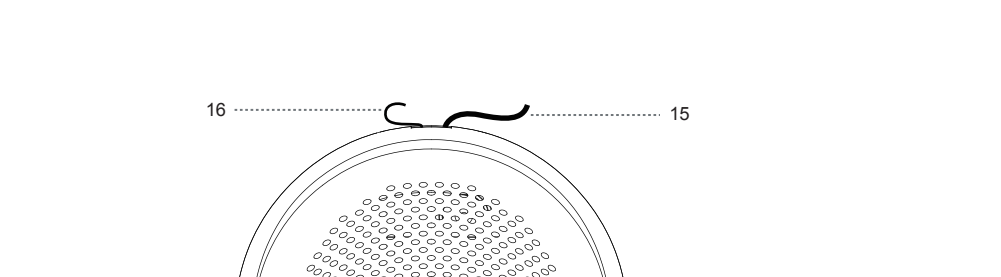

   1. PM Indicator
2. AL (Alarm) 1 Buzzer Indicator
3. AL (Alarm) 1 Radio Indicator
4. BT Indicator
5. AL (Alarm) 2 Buzzer Indicator
6. AL (Alarm) 2 Radio Indicator
7. FUNCTION Selector
8. CLOCK/MEM (Memory) Button
9. V (Volume) +/- AL 1 (Alarm 1 set) Button
10. SLEEP Button
11. V (Volume) +/- AL 2 (Alarm 2 set) Button
12. <</H (Skip Backward/Minute set) Button
13. >>/M (Skip Forward/Minute set) Button
14. M (Play/Pause)/SNOOZE Button
15. AC Power Cord
16. FM Antenna
17. Battery Door (On the bottom)

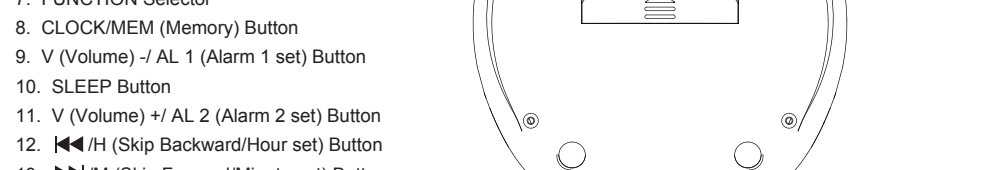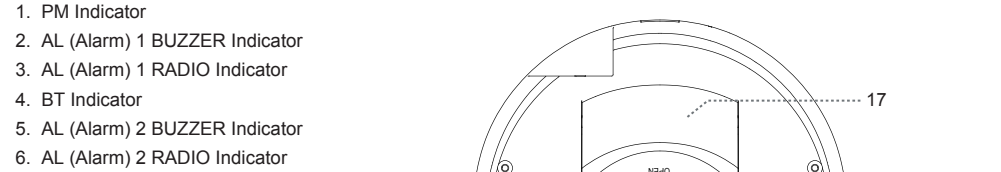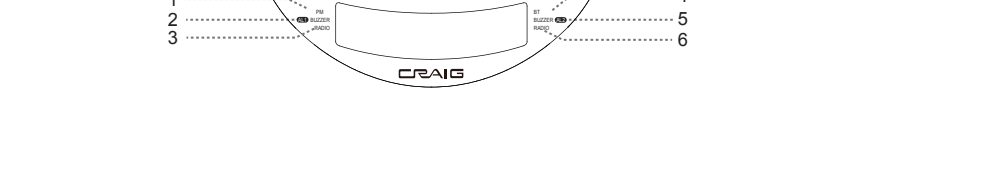

4

OPERATION

To set or reset the actual local time:
1. Press and hold the CLOCK/MEM Button until the display is blinking.
2. Press the <</H Button repeatedly to set the hour. (Make sure the PM Indicator on the display is light if the time is PM and not light if the time is AM).
3. Press the >>/M Button repeatedly to set the minute of alarm 1.
4. When finished, press the CLOCK/MEM Button to save the settings and exit. The display will stop blinking.

Radio reception
1. Press and hold the FUNCTION Selector to turn on Radio/BT (Blue Tooth).
2. Press the FUNCTION Selector repeatedly to select AM, FM or BT as desired.
• If FM is selected, FM frequency 87.5 – 108.0 will appear on the display.
• If AM is selected, AM frequency 520-1710 will appear on the display.
• If BT (Blue Tooth) is selected, "bt" will appear on the display.
3. If AM or FM is selected, press and hold the <</H or >>/M Button until the frequency on the display start running then release the button to search and plays the next (previous) available radio station. Repeat the same procedures until the desired radio station was found and plays.
4. Press the <</H or >>/M Button repeatedly to fine tune.
5. Press the V-/AL 1 or V+/AL 2 Button to adjust volume level.
6. When finished listening, press and hold the FUNCTION Selector approximate 1 second to turn off the Radio/BT.

Antenna:
FM: The FM Antenna wire in the rear of unit is for radio reception. If reception is weak, unwind and extended the wire or relocation the wire to improve the radio reception.
AM: This unit has a built in ferrite rod antenna, which provides adequate reception in most areas. If reception is weak, turn the unit to improve reception.

Radio station presetting:
1. Receive the desired radio station as the previously procedure.
2. Press and hold the CLOCK/MEM Button, "P XX" will appear on the display and blinking. Press the <</H or >>/M Button repeatedly to select the location (P 01 – P 10) you want stored to. Then press the CLOCK/MEM Button again to store it.
3. Repeat the same procedures until all the desired radio stations were stored into the memory.
4. After settings, press the CLOCK/MEM Button repeatedly to select and plays the desired stored radio station.

Notes:
• If the back up batteries had not installed and the power supply was failure, the preset radio stations will be erased.
• The stored radio station only can be deleted by store another new radio station.
• Total 10 radio stations can be store in the memory per each band.

5

Alarm setting
Alarm 1 setting:
1. Make sure the unit is in Radio/BT off mode before setting.
2. Press and hold the V-/AL 1 Button until Alarm 1 time appear on the display and blinking.
3. Press the <</H Button repeatedly to set the hour of alarm 1. (Make sure the PM Indicator on the display is light if the alarm time is PM and not light if the alarm time is AM).
4. Press the >>/M Button repeatedly to set the minute of alarm 1.
5. Press the V-/AL 1 Button to save the settings and exit.
6. Press the V-/AL 1 Button repeatedly to set the wake up mode to Buzzer (AL 1 BUZZER Indicator will light) or radio (AL 1 RADIO Indicator will light).
Note: If Radio mode is selected, received the desired radio station and set the volume to desired level before activated the alarm. Otherwise, no sound or sound weak when alarm goes off.

Alarm 2 setting:
Same as above alarm 1 settings. But, press the V+/AL 2 Button instead of V-/AL 1 Button.

Shut off alarm:
• When alarm goes off, press the FUNCTION Selector to turn it off, the alarm will reset for next day.
• To turn off the alarm completely (not reset for next day). Press the V-/AL 1 Button (V+/AL 2 Button for alarm 2) repeatedly until all alarm indicators turned off.

Snooze:
The alarm can be temporarily turned off manually by pressing the M/SNOOZE Button; the alarm will turn back on automatically nine (9) minutes later. This feature can be repeated until the FUNCTION Selector was pressed.

Radio station presetting:
1. Receive the desired radio station as the previously procedure.
2. Press and hold the CLOCK/MEM Button, "P XX" will appear on the display and blinking. Press the <</H or >>/M Button repeatedly to select the location (P 01 – P 10) you want stored to. Then press the CLOCK/MEM Button again to store it.
3. Repeat the same procedures until all the desired radio stations were stored into the memory.
4. After settings, press the CLOCK/MEM Button repeatedly to select and plays the desired stored radio station.

Notes:
• If the back up batteries had not installed and the power supply was failure, the preset radio stations will be erased.
• The stored radio station only can be deleted by store another new radio station.
• Total 10 radio stations can be store in the memory per each band.

6

BT (Blue Tooth)
In first time use or re-pairing to new BT Device, pairing the unit to external BT Device as below:
1. Press and hold the FUNCTION Selector to turn on Radio/BT (Blue Tooth).
2. Press the Radio FUNCTION Selector repeatedly until "bt" appear on the display. The BT Indicator will light and blinking.
3. Power on the external BT Device and enter to searching mode. Start pairing as the on screen instructions on the external BT Device. After paired, the BT Indicator will stop blinking. (For details pairing procedures, please refer to the user's manual of your BT Device).

Notes:
• When the external BT player searched the unit, our model number "CR41483" will appear on the external BT Device's display.
• Pairing code "0000" or "1234" may need to enter.

Normal operation after pairing:
1. Turn on the BT function of the external BT Device.
2. Press and hold the FUNCTION Selector to turn on Radio/BT (Blue Tooth).
3. Press the FUNCTION Selector repeatedly until "bt" appears on the display. The BT Indicator will light and blinking. Wait until the BT Indicator stop blinking. (It needs a few seconds).
4. Plays the music in the connected BT Device as usual.
5. During playback:
• Press the V-/AL 1 or V+/AL 2 Button to adjust volume level.
• Press the <</H or >>/M Buttons repeatedly to skip the tracks.
• Press the M/SNOOZE Button to pause, press again to resume normal playback.
6. When finished listening, press and hold the FUNCTION Selector approximate 1 second to turn off the Radio/BT.

Sleep:
In Radio or BT power on mode, press the SLEEP Button to activate the sleep function, the time of sleep timer will appear on the display. Press the button repeatedly to set the sleep timer to 10 – 90 minutes as desired. To turn off the sleep timer before time up, press and hold FUNCTION Selector to turn it off.

Protect your furniture:
This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However, certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

7

TROUBLESHOOTING GUIDE

Symptom	Possible Cause	Solution
Power		
No power	AC Power cord has not plug in wall outlet	Plug it to any AC wall outlet having AC 120V~, 60Hz
DC Back up not functioning	Back up batteries consume	Replace new batteries
Radio		
Sound weak or noisily reception	Location for radio receiving not good	Unwound and extended the wire antenna or relocation the unit
Radio no sound	Volume at minimum	Increase Volume level by press the VOLUME + Button
BT (Blue Tooth)		
BT not functioning and BT Indicator is blinking	The unit has not paired to any BT device	Pair the unit to BT device as page 7
Sound distortion or unstable	The distance of the unit and BT device too far	Close the BT device to the unit

General Specifications:
Power Source: AC 120V~, 60Hz
Power Consumption: 8 Watt
Radio Band Coverage: AM 520-1710 kHz
FM 87.5 – 108.0 MHz
Audio power: 1.5 W
Impedance of speaker: 8 Ohm; 2 W

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Accessory:
1 x User's Manual

8

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange, or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$7.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.
Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product
email: service@craigelectronics.com

Printed in China

CR41483_WC_E0FG1_B0US